

2006 Acura MDX

2006 ACURA MDX

2006 ACURA**MDX****BUZZERS, RELAYS & TIMERS****BUZZERS, RELAYS & TIMERS LOCATION**

Component	Location
Accessory Power Socket Relay	In passenger's underdash fuse/relay box. See Fig. 146 .
A/C Compressor Clutch Relay	In under-hood fuse/relay box. See Fig. 147 .
A/C Condenser Fan Relay	In under-hood fuse/relay box. See Fig. 147 .
A/F Sensor Relay	Behind right kick panel. See Fig. 45 .
Automatic Wiper Relay	In multi-relay box. See Fig. 3 .
Blower Motor Relay	In under-hood fuse/relay box. See Fig. 147 .
Blower Motor Relay (Rear)	Under center console. See Fig. 49 .
Dimmer Relay	In multi-relay box. See Fig. 3 .
Fan Control Relay	In multi-relay box. See Fig. 3 .
Foglight Relay	Behind left side of dash. See Fig. 39 .
Headlight Relay 1	In under-hood fuse/relay box. See Fig. 147 .
Headlight Relay 2	In under-hood fuse/relay box. See Fig. 147 .
Horn Relay	In under-hood fuse/relay box. See Fig. 147 .
Ignition Coil Relay	Behind right kick panel. See Fig. 45 .
Intermittent Wiper Relay	In multi-relay box. See Fig. 3 .
Key Interlock Relay	Under left side of dash. See Fig. 38 .
Keyless Buzzer Connector	At right front inner fender. See Fig. 113 .
Moon Roof Close Relay	Behind left side of dash. See Fig. 38 .
Moon Roof Open Relay	Behind left side of dash. See Fig. 38 .
PGM-FI Main Relay 1	Under left side of dash. See Fig. 161 .
PGM-FI Main Relay 2	Under left side of dash. See Fig. 161 .
Power Window Relay	In passenger's underdash fuse/relay box. See Fig. 146 .
Radiator Fan Relay	In under-hood fuse/relay box. See Fig. 147 .
Rear Accessory Power Socket Relay	At right side of cargo area. See Fig. 107 .
Rear Blower Motor Relay	Under center console. See Fig. 49 .
Rear Window Defogger Relay	In passenger's underdash fuse/relay box. See Fig. 146 .
Reverse Relay	In driver's underdash fuse/relay box. See Fig. 145 .
Seat Heater Relay	Behind left side of dash. See Fig. 38 .
Shift Lock Relay	Behind right kick panel. See Fig. 45 .
Starter Cut Relay	On driver's underdash fuse/relay box. See Fig. 145 .
Taillight Relay	Behind left side of dash. See Fig. 39 .

2006 Acura MDX

2006 ACURA MDX

Throttle Actuator Control Module Relay	Behind right kick panel. See Fig. 45 .
Turn Signal/Hazard Relay	In driver's underdash fuse/relay box. See Fig. 145 .
VTM-4 Relay	At right side of cargo area, behind trim panel. See Fig. 107 .

CIRCUIT PROTECTION DEVICES

CIRCUIT PROTECTION DEVICES LOCATION

Component	Location
A/C Diode A	Behind right side of dash. See Fig. 74 .
A/C Diode B	In passenger's underdash fuse/relay box. See Fig. 146 .
Automatic Lighting Diode	Under left side of dash. See Fig. 42 .
Diode	In under-hood fuse/relay box. See Fig. 147 .
Driver's Underdash Fuse/Relay Box	Behind left end of dash. See Fig. 37 .
ELD Unit	In under-hood fuse/relay box. See Fig. 147 .
Front Blower Power Transistor	Under right side of dash. See Fig. 70 .
In-Line Diode 1	In driver's underdash fuse/relay box. See Fig. 145 .
In-Line Diode 2	In driver's underdash fuse/relay box. See Fig. 145 .
In-Line Diode 3	In passenger's underdash fuse/relay box. See Fig. 146 .
In-Line Diode 4	In passenger's underdash fuse/relay box. See Fig. 146 .
Passenger's Underdash Fuse/Relay Box	Behind right kick panel. See Fig. 71 .
Rear Blower Motor Power Transistor	Under center console. See Fig. 49 .
Shift Lock Diode	Under right side of dash. See Fig. 51 .
Under-Hood Fuse/Relay Box	At right side of engine compartment. See Fig. 1 .
Under-Hood Fuse Sub-Fuse Box	Left side of engine compartment. See Fig. 10 .

CONTROL UNITS

CONTROL UNITS LOCATION

Component	Location
Automatic Lighting Control Unit	Under middle of dash. See Fig. 47 .
Climate Control Unit	Lower center of dash, forward of center console. See Fig. 51 .
Driver's Multiplex Control Unit	Behind left end of dash. See Fig. 37 .
Driver's Power Seat Control Unit	Under driver's seat. See Fig. 92 .
Electrical Compass Unit	Middle Of Roof. See Fig. 80 .
Front Passenger's Weight Sensor Unit	Under front passenger's seat. See Fig. 94 .
Front Stereo Amplifier	Below center console. See Fig. 131 .

2006 Acura MDX

2006 ACURA MDX

HandsFreeLink Control Unit	At front of roof. See Fig. 149 .
Immobilizer Control Unit Receiver	In steering column cover. See Fig. 34 .
Keyless Receiver Unit	Behind right side of glove box. See Fig. 68 .
Navigation Unit	Under right front seat. See Fig. 168 .
OnStar Control Unit	Under center console. See Fig. 158 .
OPDS Unit	In front passenger's seat. See Fig. 98 .
Passenger's Multiplex Control Unit Connector B	Behind right kick panel. See Fig. 71 .
PCM	On right side of engine compartment. See Fig. 2 .
Power Window Control Unit	In driver's door. See Fig. 75 .
Rear Window Wiper Intermittent Control Unit	Left side of cargo area. See Fig. 104 .
SRS Unit	Behind lower center of dash. See Fig. 132 .
Throttle Actuator Control Module	At middle of engine compartment. See Fig. 26 .
TPMS Receiver Unit	Under left side of dash. See Fig. 44 .
VSA Modulator Control Unit	On left side of engine compartment. See Fig. 11 .
VTM-4 Control Unit	At right side of cargo area, behind rear side trim panel. See Fig. 108 .

MOTORS**MOTORS LOCATION**

Component	Location
A/C Condenser Fan Motor Connector	On radiator support. See Fig. 5 .
Driver's Lumbar Support Motor Connector	Under driver's seat. See Fig. 138 .
Driver's Power Seat Front Up-Down Motor (DPMS)	Under driver's seat. See Fig. 90 .
Driver's Power Seat Front Up-Down Motor (Except DPMS)	Under driver's seat. See Fig. 85 .
Driver's Power Seat Rear Up-Down Motor (DPMS)	Under driver's seat. See Fig. 91 .
Driver's Power Seat Rear Up-Down Motor (Except DPMS)	Under driver's seat. See Fig. 86 .
Driver's Power Seat Recline Motor	Under driver's seat. See Fig. 86 .
Driver's Power Seat Recline Motor	Under driver's seat (DPMS). See Fig. 91 .
Driver's Power Seat Slide Motor	Under driver's seat. See Fig. 85 .
Driver's Power Seat Slide Motor (DPMS)	Under driver's seat. See Fig. 90 .
Front Air Mix Control Motor	On bottom of HVAC assembly. See Fig. 69 .
Front Blower Motor	Under right side of dash. See Fig. 70 .
Front Mode Control Motor	Under left side of dash. See Fig. 46 .
Front Passenger's Power Seat Front Up-Down Motor (DPMS)	Under front passenger's seat (DPMS). See Fig. 96 .
Front Passenger's Power Seat Rear Up-Down Motor (DPMS)	Under front passenger's seat. See Fig. 97 .
Front Passenger's Power Seat Recline Motor (DPMS)	Under front passenger's seat. See Fig. 97 .

2006 Acura MDX

2006 ACURA MDX

Front Passenger's Power Seat Slide Motor (DPMS)	Under front passenger's seat. See Fig. 96 .
Moon Roof Motor Connector	Middle of roof. See Fig. 79 .
Radiator Fan Motor Connector	Front of engine compartment. See Fig. 6 .
Rear Air Mix Control Motor	Under center console panel. See Fig. 54 .
Rear Blower Motor	Under center console. See Fig. 50 .
Rear Mode Control Motor	Under center console panel. See Fig. 54 .
Rear Window Washer Motor	Behind right side of front bumper, on washer reservoir. See Fig. 115 .
Rear Window Wiper Motor Connector	Behind tailgate trim panel. See Fig. 110 .
Recirculation Control Motor	Behind glove box. See Fig. 65 .
Starter	Left side of engine compartment. See Fig. 7 .
Tailgate Lock Actuator	Behind tailgate trim panel. See Fig. 112 .
Throttle Actuator Control Motor	On throttle body. See Fig. 8 .
Windshield Washer Motor	Behind right side of front bumper, on washer reservoir. See Fig. 115 .
Windshield Wiper Motor	Left side of engine compartment. See Fig. 15 .

SENDING UNITS & SENSORS**SENDING UNITS & SENSORS LOCATION**

Component	Location
A/F Sensor (Front) (B2, S1)	At middle of engine compartment. See Fig. 142 .
A/F Sensor (Rear) (B1, S1)	At rear of engine, in exhaust. See Fig. 125 .
APP Sensor	At right rear side of engine compartment. See Fig. 22 .
ATF Temperature Sensor	On transaxle end cover. See Fig. 122 .
Brake Light Failure Sensor	At left side of cargo area, on inside of rear side trim panel. See Fig. 134 .
CKP Sensor (A & B)	On front of engine. See Fig. 117 .
CMP Sensor	On right side of engine compartment. See Fig. 23 .
Differential Oil Temperature Sensor	At rear of differential. See Fig. 129 .
Driver's Power Seat Rear Up-Down Position Sensor (DPMS)	Under driver's seat. See Fig. 91 .
Driver's Power Seat Slide Position Sensor (DPMS)	Under driver's seat. See Fig. 91 .
Driver's Side Impact Sensor	At base of left "B" pillar. See Fig. 101 .
ECT Sensor	At rear of engine, on top of water passage. See Fig. 24 .
EGR Valve & EGR Valve Position Sensor	At rear of left cylinder head, on top of water passage. See Fig. 24 .
Front A/F Sensor	Left side of engine compartment. See Fig. 24 .
Front Secondary HO2S (B2, S2) Connector	Left side of engine compartment. See Fig. 142 .
Front Secondary HO2S Connector	Left side of engine compartment. See Fig. 24 .

2006 Acura MDX

2006 ACURA MDX

FTP Sensor	Under left side of vehicle. See Fig. 164 .
IAT Sensor	In air intake tube. See Fig. 25 .
Input Shaft (Main Shaft Speed Sensor	On transmission housing. See Fig. 123 .
Knock Sensor	On top of engine block, under intake manifold. See Fig. 27 .
Left Front Impact Sensor	At left side of engine compartment. See Fig. 12 .
Left Front Impact Sensor	At left side of engine compartment. See Fig. 152 .
Left Front Wheel Speed Sensor Connector	Left side of engine compartment. See Fig. 14 .
Left Rear Speed Sensor Connector	Under rear of vehicle. See Fig. 126 .
Left Side Impact Sensor (2nd)	Behind left rear lining (Right Similar). See Fig. 135 .
MAP Sensor	At middle of engine compartment. See Fig. 26 .
Output Shaft (Countershaft Speed Sensor)	On transmission housing. See Fig. 123 .
Rain Sensor & Automatic Wiper Control Unit	On front middle of roof. See Fig. 78 .
Rear A/F Sensor (B1, S1) Connector	Left side of engine compartment. See Fig. 125 .
Rear Secondary HO2S (B1, S1) Connector	Left side of engine compartment. See Fig. 125 .
Right Front Impact Sensor	At right side of engine compartment. See Fig. 151 .
Right Front Wheel Speed Sensor Connector	Right side of engine compartment. See Fig. 21 .
Right Rear Wheel Speed Sensor Connector	Under rear of vehicle. See Fig. 127 .
Right Side Impact Sensor (1st) (Left Similar)	Right "B" pillar. See Fig. 101 .
Roll Rate Sensor	Under middle of dash. See Fig. 61 .
Secondary HO2S (Front B2 & S2)	On front bank exhaust manifold. See Fig. 142 .
Secondary HO2S (Rear B1 & S2)	On three way catalytic converter. See Fig. 125 .
Steering Angle Sensor	In steering column cover. See Fig. 31 .
Yaw Rate-Lateral Acceleration Sensor	Under middle of dash. See Fig. 61 .

SOLENOIDS & SOLENOID VALVES**SOLENOIDS & SOLENOID VALVES LOCATION**

Component	Location
A/C Compressor Clutch	Right side of engine compartment. See Fig. 121 .
A/T Clutch Pressure Control Solenoid Valve A	On transmission housing. See Fig. 124 .
A/T Clutch Pressure Control Solenoid Valve B	On transmission housing. See Fig. 124 .
A/T Clutch Pressure Control Solenoid Valve C	On transmission housing. See Fig. 9 .
Engine Mount Control Solenoid Valve	On radiator support. See Fig. 6 .
EVAP Canister Purge Valve	On top rear of intake manifold. See Fig. 25 .
EVAP Canister Vent Shut Valve	Under left side of vehicle. See Fig. 164 .
Front Passenger's Seat Belt Tension Reducer Solenoid Connector (Driver's Similar)	Right "B" pillar. See Fig. 101 .
IMT Valve	On front of engine. See Fig. 23 .
Injector No. 1	Middle of engine compartment. See Fig. 29 .

2006 Acura MDX

2006 ACURA MDX

Injector No. 2	Middle of engine compartment. See Fig. 29 .
Injector No. 3	Middle of engine compartment. See Fig. 29 .
Injector No. 4	Middle of engine compartment. See Fig. 27 .
Injector No. 5	Middle of engine compartment. See Fig. 27 .
Injector No. 6	Middle of engine compartment. See Fig. 27 .
Left Side Clutch Electromagnetic Coil Connector	Under rear of vehicle. See Fig. 165 .
Right Side Clutch Electromagnetic Coil Connector	Under rear of vehicle. See Fig. 128 .
Shift Lock Solenoid	Under center console, at base of shift lever assembly. See Fig. 56 .
Starter Solenoid	Left side of engine compartment. See Fig. 8 .
VTEC Solenoid Valve Connector	At front of engine, on oil pump housing extension. See Fig. 119 .

SWITCHES**SWITCHES LOCATION**

Component	Location
A/C Pressure Switch	Right rear of engine compartment. See Fig. 20 .
A/T Shift Switch Connector	Behind center console panel. See Fig. 53 .
Brake Fluid Level Switch Connector A	Left side of engine compartment. See Fig. 13 .
Brake Fluid Level Switch Connector B	Left side of engine compartment. See Fig. 13 .
Brake Pedal Position Switch	At top of brake pedal arm. See Fig. 44 .
Driver's Door Switch (Front Passenger's Similar)	At left "B" pillar. See Fig. 77 .
Driver's Seat Belt Switch Connector (DPMS)	Under driver's seat. See Fig. 89 .
Driver's Seat Belt Switch Connector (Except DPMS)	Under driver's seat. See Fig. 84 .
Front Passenger's Seat Belt Switch Connector	Under front passenger's seat. See Fig. 95 .
Horn Switch	In steering wheel. See Fig. 32 .
Moonroof Limit Switch Connector	Middle of roof. See Fig. 79 .
Oil Pressure Switch	On front of engine, at top right of oil pump housing. See Fig. 120 .
Parking Brake Switch	Under left side of dash. See Fig. 36 .
PSP Switch	On power steering pressure line, near gearbox. See Fig. 118 .
Security Hood Switch Connector	Front of engine compartment. See Fig. 5 .
Tailgate Latch Switch Connector	Behind tailgate trim panel. See Fig. 112 .
Transmission Range Switch	On transmission housing. See Fig. 144 .
VTEC Oil Pressure Switch	On lower right front of engine. See Fig. 120 .
Washer Fluid Level Switch	Behind right side of front bumper. See Fig. 153 .
3rd Clutch Transmission Fluid Pressure Switch	On transaxle end cover. See Fig. 122 .
4th Clutch Transmission Fluid Pressure Switch	On transmission housing. See Fig. 9 .

MISCELLANEOUS

MISCELLANEOUS LOCATION

Component	Location
Alternator	Middle of engine compartment. See Fig. 17 .
Antenna Amplifier	At rear center of roof. See Fig. 81 .
Automatic Lighting Diode	Under left side of dash. See Fig. 42 .
Cable Reel Connector A	Behind steering column cover. See Fig. 35 .
Converter (Acura Accessory)	Left side of cargo area. See Fig. 105 .
Data Link Connector	Lower left side of dash, behind lower cover. See Fig. 47 .
Driver's Airbag First & Second Inflators Connector	Inside of steering wheel. See Fig. 33 .
Driver's Multiplex Control Connector B	Under left side of dash. See Fig. 37 .
Driver's Seat Back Heater Connector (DPMS)	Under driver's seat. See Fig. 89 .
Driver's Seat Back Heater Connector (Except DPMS)	Under driver's seat. See Fig. 84 .
Driver's Seat Cushion Heater Connector (DPMS)	Under driver's seat. See Fig. 89 .
Driver's Seat Cushion Heater Connector (Except DPMS)	Under driver's seat. See Fig. 84 .
Driver's Side Airbag Inflator Connector (Front Passenger's Similar)	Behind driver's seat. See Fig. 82 .
Front Passenger's Power Seat Cushion Heater Connector	Under front passenger's seat. See Fig. 95 .
Front Passenger's Seat Belt Tensioner Connector (Driver's Similar)	Right "B" pillar. See Fig. 101 .
Fuel Tank Unit	Middle of floor. See Fig. 102 .
GPS Antenna	Middle of dash. See Fig. 63 .
High Horn	Behind right side of front bumper. See Fig. 114 .
Ignition Coil No. 1	Middle of engine compartment. See Fig. 18 .
Ignition Coil No. 3	Middle of engine compartment. See Fig. 18 .
Ignition Coil No. 4	Middle of engine compartment. See Fig. 16 .
Ignition Coil No. 5	Middle of engine compartment. See Fig. 16 .
Ignition Coil No. 6	Middle of engine compartment. See Fig. 16 .
Key Interlock Switch Diode	Under left side of dash. See Fig. 166 .
Keyless Buzzer Connector	Behind right fender. See Fig. 113 .
Left Rear TPMS Initiator	Front of left rear wheelwell. See Fig. 136 .
Left Side Curtain Airbag Inflator Connector	Left side of roof. See Fig. 137 .
Low Horn	Behind left side of front bumper. See Fig. 116 .
MES Connector	Under left side of dash. See Fig. 37 .
Multiplex Control Inspection Connector	Under left side of dash. See Fig. 42 .
Navigation Service Check Connector	Under front passenger's seat. See Fig. 83 .
Navigation Unit	Under front passenger's seat. See Fig. 163 .

2006 Acura MDX

2006 ACURA MDX

Rear Stereo Amplifier	At right side of cargo area. See Fig. 106 .
Right Front TPMS Initiator	Behind right fender. See Fig. 113 .
Roof Antenna	Rear middle of roof. See Fig. 81 .
Stereo Amplifier	Under middle of dash. See Fig. 131 .
Trailer Lighting Connector	Left side of cargo area. See Fig. 105 .
XM Receiver	Behind left rear lining. See Fig. 162 .

CONNECTORS**CONNECTORS LOCATION**

Component	Location
C101 (Black, 23 Pin)	At right side of engine compartment. See Fig. 20 .
C102 (Gray, 1 Pin)	At right side of engine compartment. See Fig. 20 .
C103 (Black, 24 Pin)	Center of engine compartment. See Fig. 19 .
C104 (Black, 24 Pin)	Center of engine compartment. See Fig. 19 .
C110 (Black, 5 Pin)	On transmission housing. See Fig. 143 .
C161 (Black, 1 Pin)	At right side of engine compartment. See Fig. 28 .
C171 (Black, 6 Pin)	At right side of engine compartment. See Fig. 119 .
C201 (White, 21 Pin)	Behind glove box. See Fig. 150 .
C202 (Brown, 7 Pin)	Behind glove box. See Fig. 150 .
C203 (Gray, 8 Pin)	Behind glove box. See Fig. 150 .
C204 (Brown, 3 Pin)	Under right side of dash. See Fig. 70 .
C205 (White, 21 Pin)	Behind glove box. See Fig. 67 .
C206 (Gray, 20 Pin)	Behind glove box. See Fig. 67 .
C207 (Light Blue, 6 Pin)	Behind glove box. See Fig. 66 .
C209 (Yellow, 2 Pin)	Behind glove box. See Fig. 66 .
C210 (Gray, 2 Pin)	Behind right headlight assembly. See Fig. 130 .
C299 (Gray, 1 Pin)	Middle of engine compartment. See Fig. 4 .
C301 (Light Blue, 16 Pin)	Under left side of dash. See Fig. 43 .
C302 (Gray, 4 Pin)	Under left side of dash. See Fig. 43 .
C303 (Yellow, 4 Pin)	Under left side of dash. See Fig. 43 .
C304 (Light Blue, 6 Pin)	Behind left kick panel. Fig. 140 .
C305 (White, 21 Pin)	Behind left kick panel. See Fig. 139 .
C306 (Gray, 2 Pin)	Behind left headlight assembly. See Fig. 130 .
C315 (Gray, 5 Pin)	In steering wheel. See Fig. 32 .
C401 (Light Blue, 24 Pin)	Under left side of dash. See Fig. 41 .
C402 (Gray, 22 Pin)	Under left side of dash. See Fig. 41 .
C403 (White, 13 Pin)	Under middle of dash. See Fig. 167 .
C404 (Black, 20 Pin)	Under left side of dash. See Fig. 42 .
C405 (Gray, 8 Pin)	In steering column cover. See Fig. 35 .
C501 (Orange, 20 Pin)	Behind glove box. See Fig. 66 .

2006 Acura MDX

2006 ACURA MDX

C502 (Gray, 20 Pin)	Behind middle of dash. See Fig. 157 .
C503 (White, 12 Pin)	Under left side of dash. See Fig. 40 .
C504 (Junction Connector) (Orange, 20 Pin)	Behind glove box. See Fig. 64 .
C551 (White, 17 Pin)	Behind left kick panel. See Fig. 141 .
C552 (Brown, 2 Pin)	Behind left kick panel. See Fig. 141 .
C581 (White, 13 Pin)	At middle of right "A" pillar. See Fig. 155 .
C582 (White, 20 Pin)	Behind left kick panel. See Fig. 140 .
C601 (Gray, 14 Pin)	Behind left kick panel. See Fig. 139 .
C602 (White, 20 Pin)	Behind left kick panel. See Fig. 140 .
C603 (Brown, 2 Pin)	Behind left kick panel. See Fig. 139 .
C604 (Gray, 12 Pin)	At left "B" pillar. See Fig. 77 .
C605 (Except Navigation) (Gray, 14 Pin)	At right side of cargo area. See Fig. 107 .
C605 (Navigation) (Gray, 22 Pin)	At right side of cargo area. See Fig. 107 .
C606 (Gray, 14 Pin)	At left rear of roof. See Fig. 156 .
C609 (Yellow, 4 Pin)	Right side of cargo area. See Fig. 133 .
C631 (White, 12 Pin)	Under center of dash. See Fig. 62 .
C632 (Gray, 14 Pin)	Under center of dash. See Fig. 62 .
C634 (Gray, 10 Pin)	Under center of dash. See Fig. 62 .
C635 (DPMS) (Gray, 22 Pin)	Under driver's seat. See Fig. 88 .
C635 (Except DPMS) (Gray, 10 Pin)	Under driver's seat. See Fig. 88 .
C636 (DPMS) (Gray, 10 Pin)	Under front passenger's seat. See Fig. 93 .
C636 (Except DPMS) (Gray, 6 Pin)	Under front passenger's seat. See Fig. 93 .
C637 (Gray, 4 Pin)	Under right front seat. See Fig. 93 .
C651 (Gray, 22 Pin)	Behind right kick panel. See Fig. 72 .
C652 (Gray, 12 Pin)	At right "B" pillar. See Fig. 77 .
C654 (Gray, 14 Pin)	Behind right kick panel. See Fig. 73 .
C655 (Brown, 5 Pin)	At right "D" pillar. See Fig. 159 .
C657 (White, 34 Pin)	Behind right kick panel. See Fig. 154 .
C670 (Navigation) (Brown, 5 Pin)	Behind tailgate trim panel. See Fig. 148 .
C681 (White, 21 Pin)	Under center of dash. See Fig. 58 .
C682 (White, 13 Pin)	Under center of dash. See Fig. 59 .
C688 (White, 20 Pin)	Under middle of dash. See Fig. 160 .
C698 (Gray, 2 Pin)	Under rear of vehicle. See Fig. 126 .
C699 (Gray, 6 Pin)	Under rear of vehicle. See Fig. 127 .
C701 (White, 21 Pin)	Under left side of dash. See Fig. 40 .
C702 (Gray, 6 Pin)	At left front door. See Fig. 76 .
C751 (White, 13 Pin)	Behind right kick panel. See Fig. 72 .
C802 (Yellow, 6 Pin)	Under left of dash. See Fig. 40 .
C803 (Yellow, 28 Pin)	Under center of dash. See Fig. 48 .
C804 (Light Blue, 6 Pin)	Under center of dash. See Fig. 48 .
C805 (Yellow, 4 Pin)	Under center console. See Fig. 60 .

2006 Acura MDX

2006 ACURA MDX

C806 (Yellow, 4 Pin)	Under center console. See Fig. 60 .
C807 (Light Blue, 6 Pin)	Under center console. See Fig. 60 .
C809 (Gray, 2 Pin)	Under driver's seat. See Fig. 87 .
C810 (Yellow, 2 Pin)	On left side of floor. See Fig. 99 .
C811 (Yellow, 2 Pin)	Right side of floor. See Fig. 100 .
C812 (Yellow, 4 Pin)	Behind left kick panel. See Fig. 141 .
C851 (Light Blue, 6 Pin)	Behind tailgate trim panel. See Fig. 111 .
C852 (Brown, 5 Pin)	Behind tailgate trim panel. See Fig. 111 .
C951 (Gray, 2 Pin)	Under center of console. See Fig. 52 .


GROUND S

GROUND S LOCATION

Component	Location
G1	At front of engine compartment, near battery. See Fig. 1 .
G2	At left front of engine compartment. See Fig. 5 .
G101	At left rear of engine. See Fig. 25 .
G102	At right front of engine, near power steering pump. See Fig. 23 .
G201	Behind right headlight. See Fig. 3 .
G301	At left rear of engine compartment. See Fig. 13 .
G302	Left side of engine compartment. See Fig. 12 .
G401	Behind upper left end of dash. See Fig. 30 .
G501	Behind left end of dash. See Fig. 41 .
G502	Behind right center of dash. See Fig. 57 .
G503	Behind right end of dash. See Fig. 74 .
G551	Middle of roof. See Fig. 79 .
G601	Below left front seat. See Fig. 99 .
G602	Above left rear fender. See Fig. 103 .
G631	Below center console, behind shifter. See Fig. 55 .
G651	Below right front seat. See Fig. 100 .
G652	Above right rear fender. See Fig. 109 .
G801	Under center of dash. See Fig. 132 .


COMPONENT LOCATION GRAPHICS

NOTE: Figures may show multiple component locations. Refer to appropriate table for proper figure references.

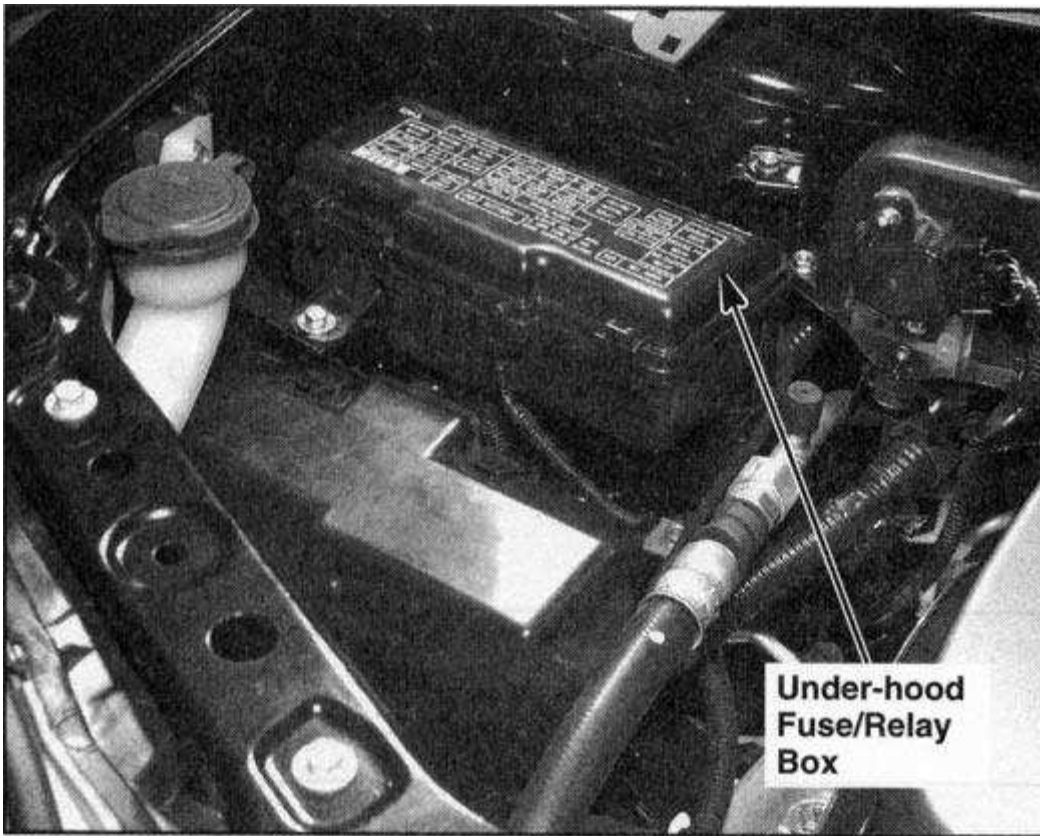


G00267839

Fig. 1: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

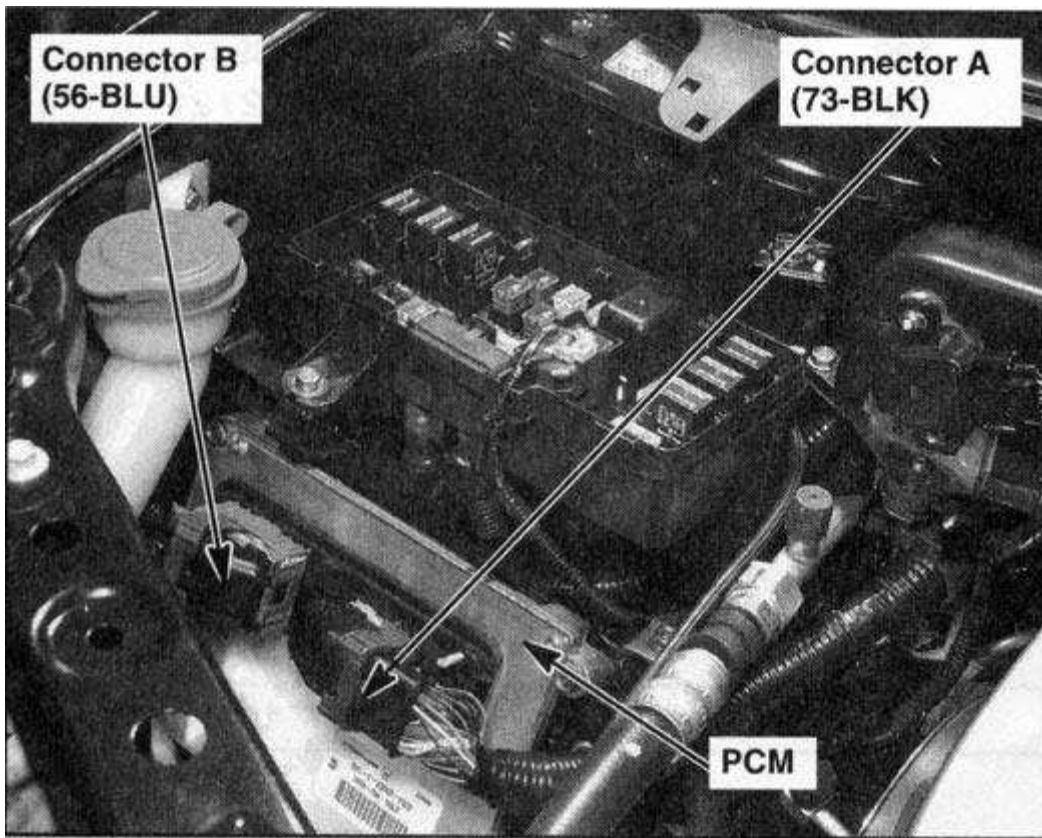

G00267841


Fig. 2: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

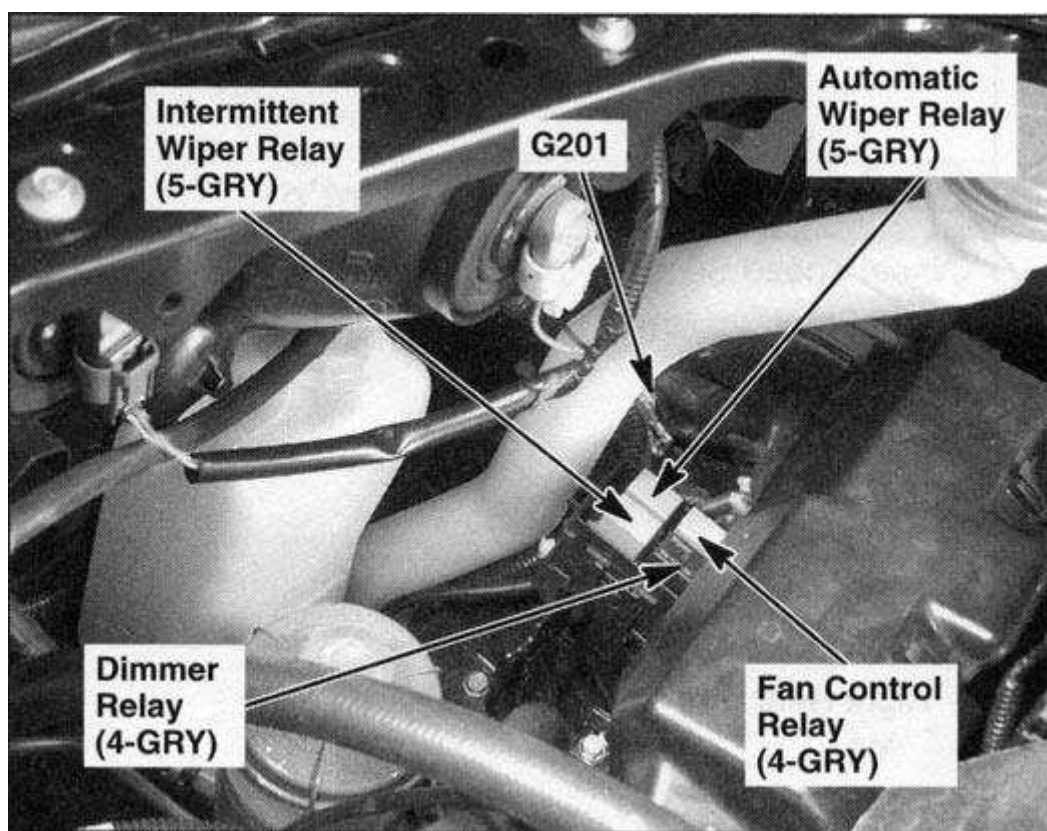

G00360302


Fig. 3: Right Side Of Engine Compartment

Courtesy of AMERICAN HONDA MOTOR CO., INC.

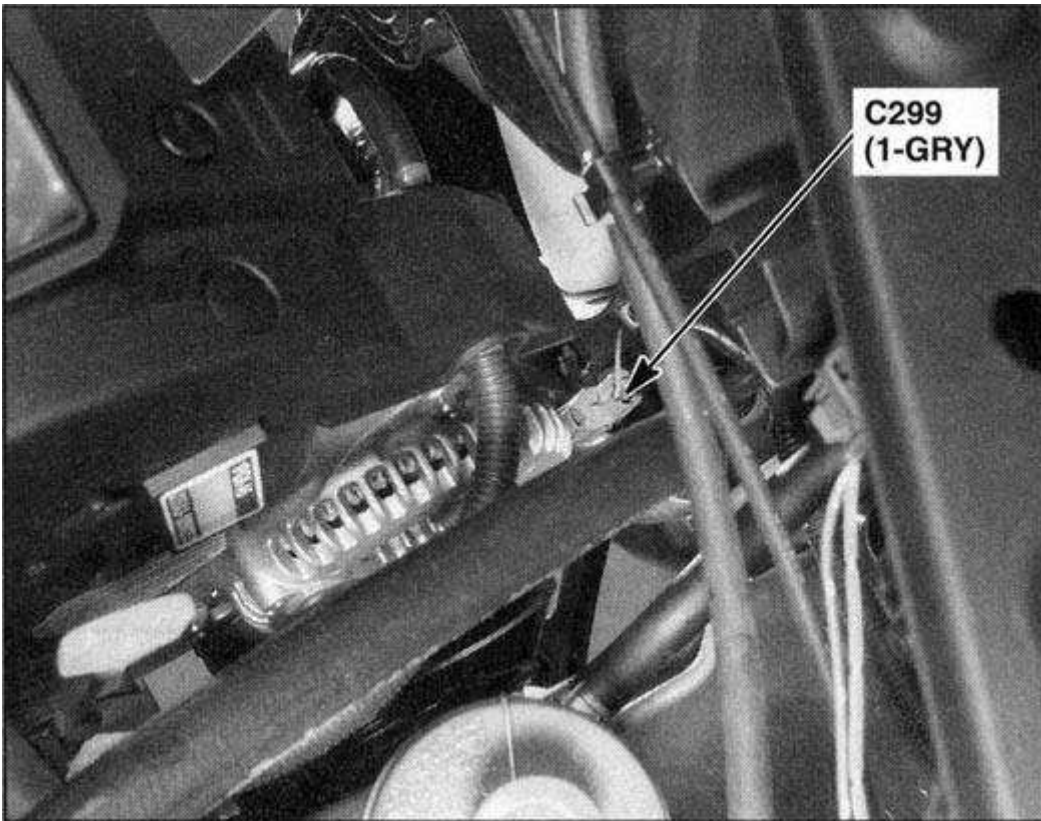


G00360319

Fig. 4: Middle Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

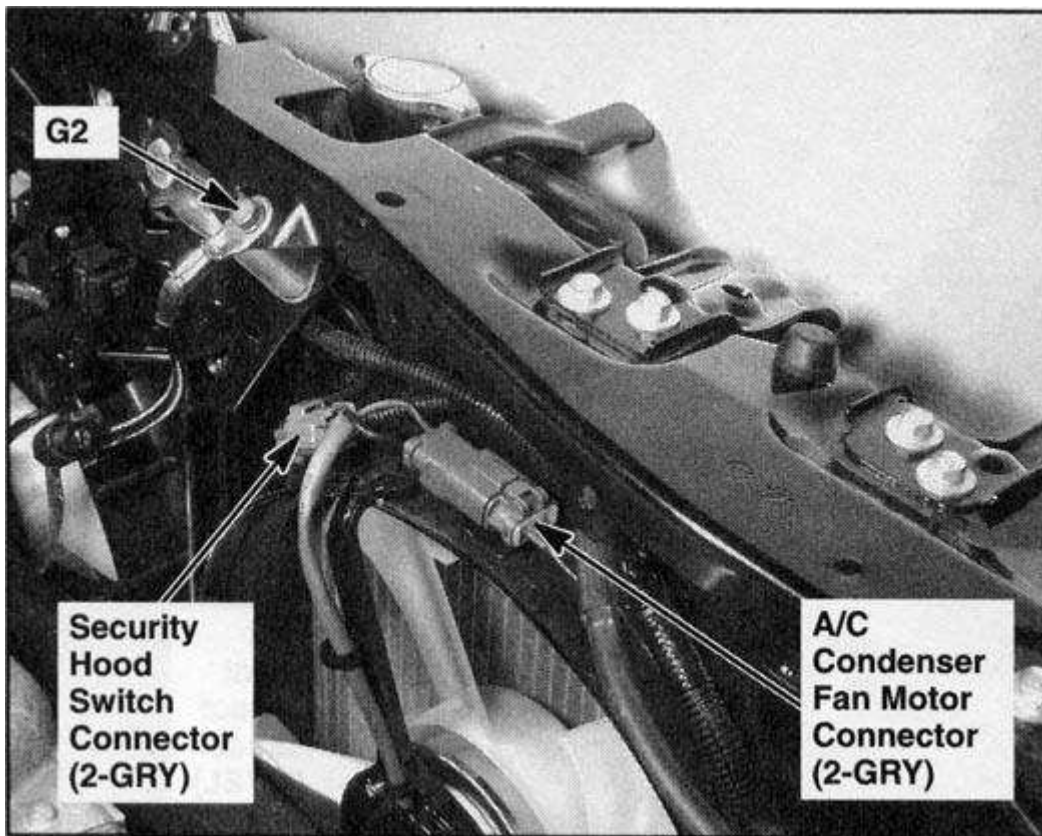


G00267845

Fig. 5: Front Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

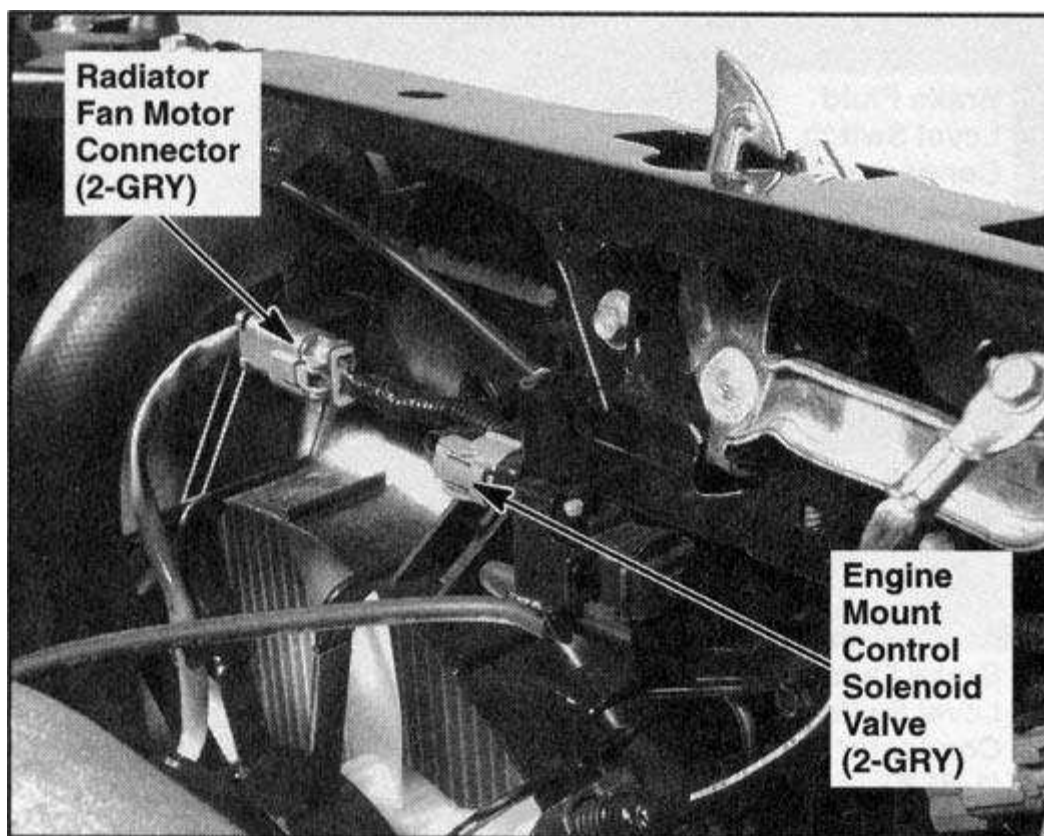


G00267846

Fig. 6: Front Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

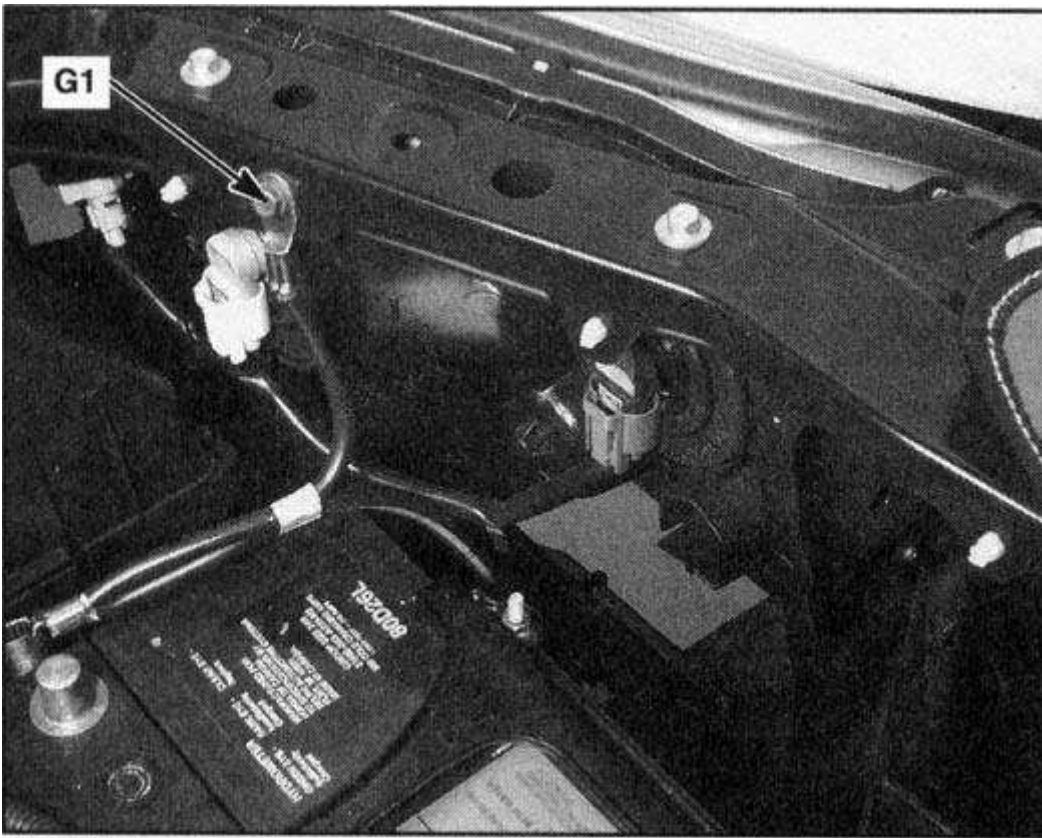


G00267847

Fig. 7: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

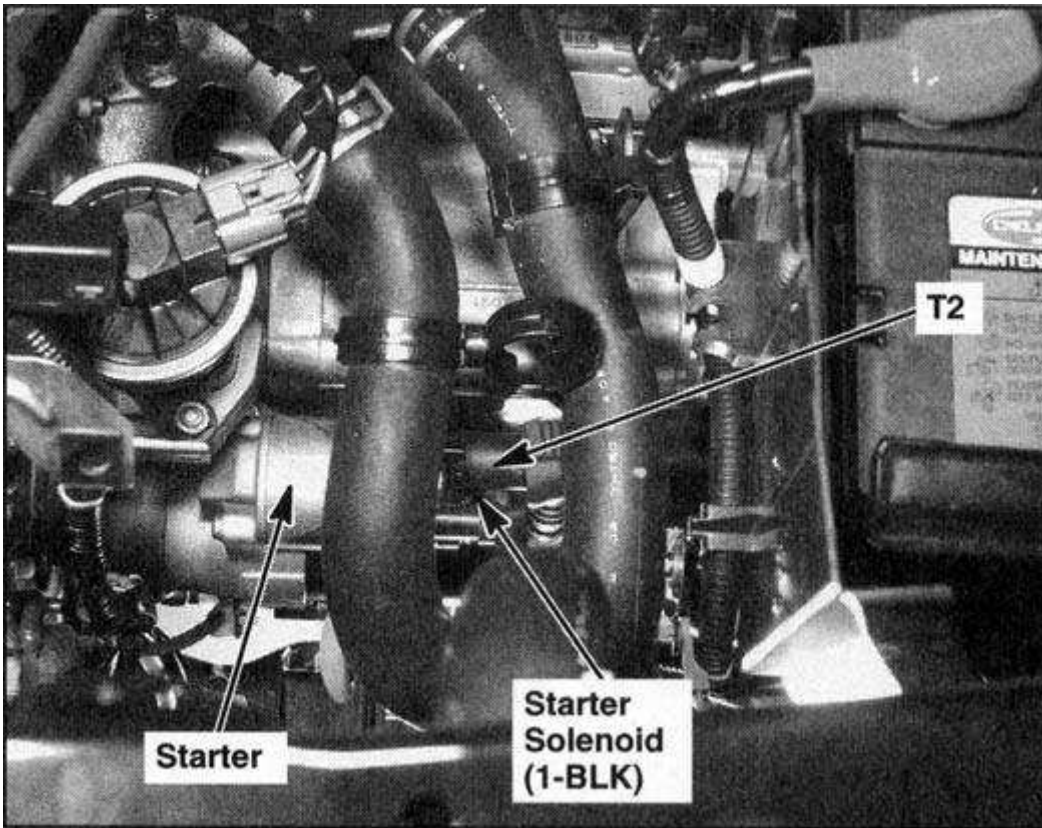

G00267850

Fig. 8: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

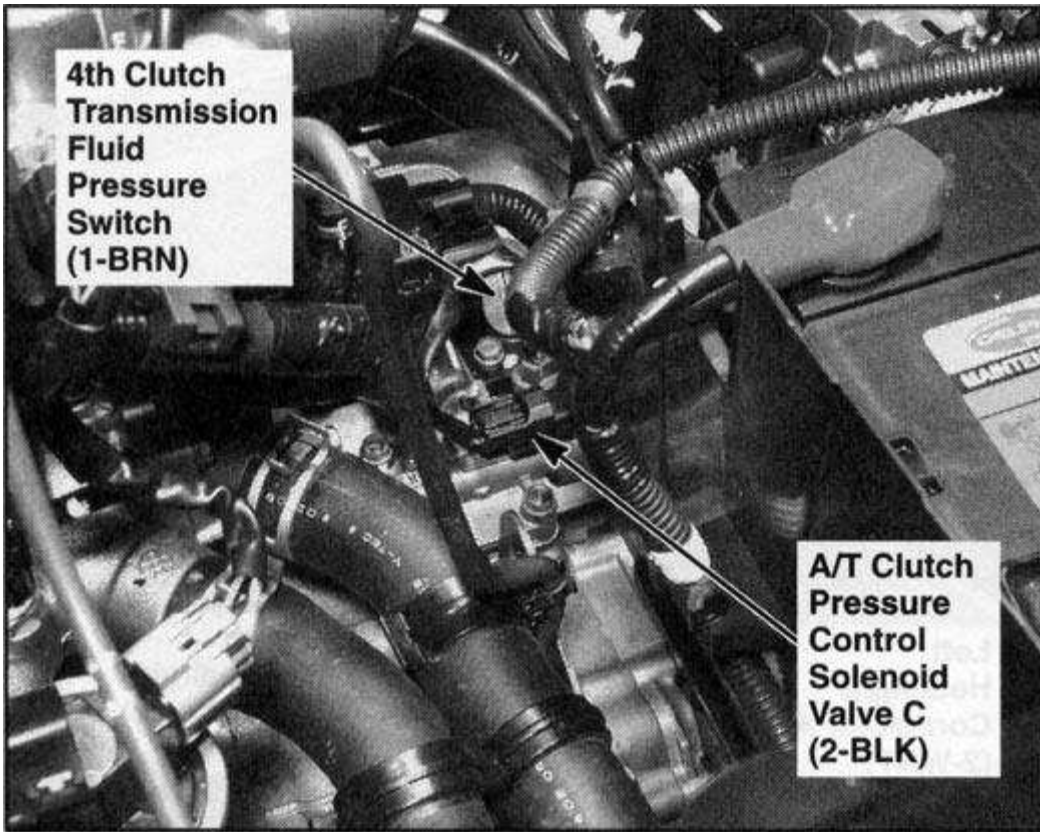

G00267851

Fig. 9: Transmission Housing

Courtesy of AMERICAN HONDA MOTOR CO., INC.



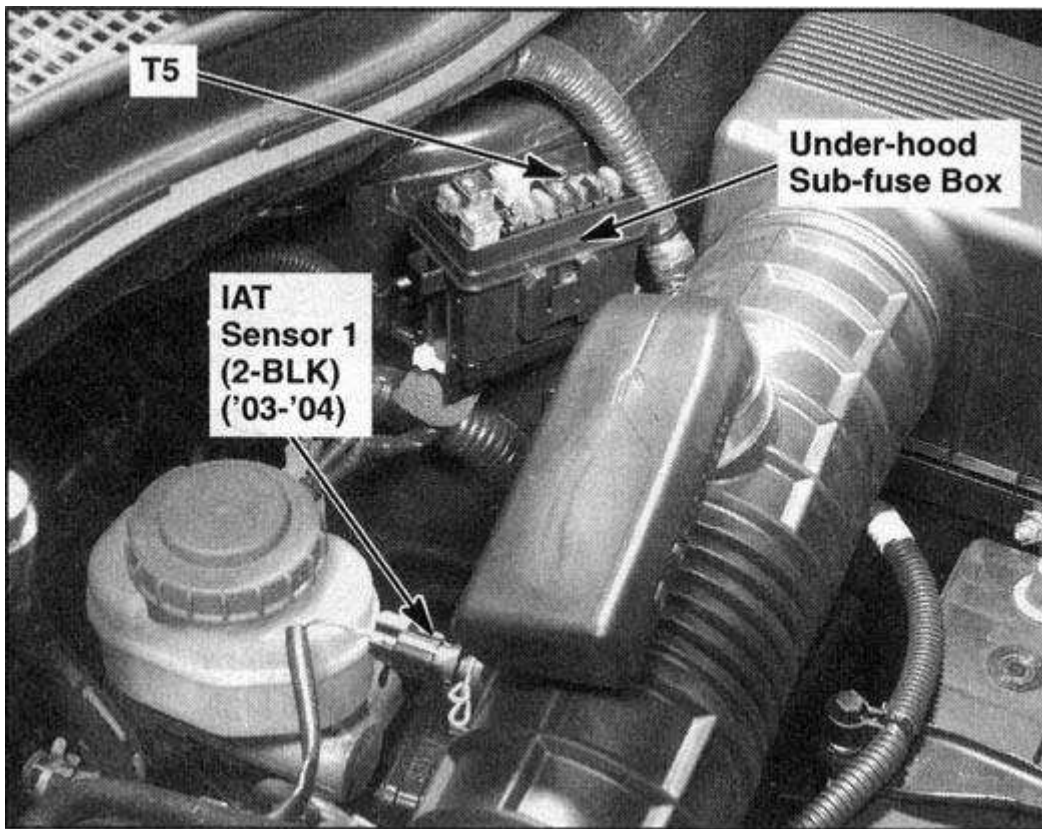


Fig. 10: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

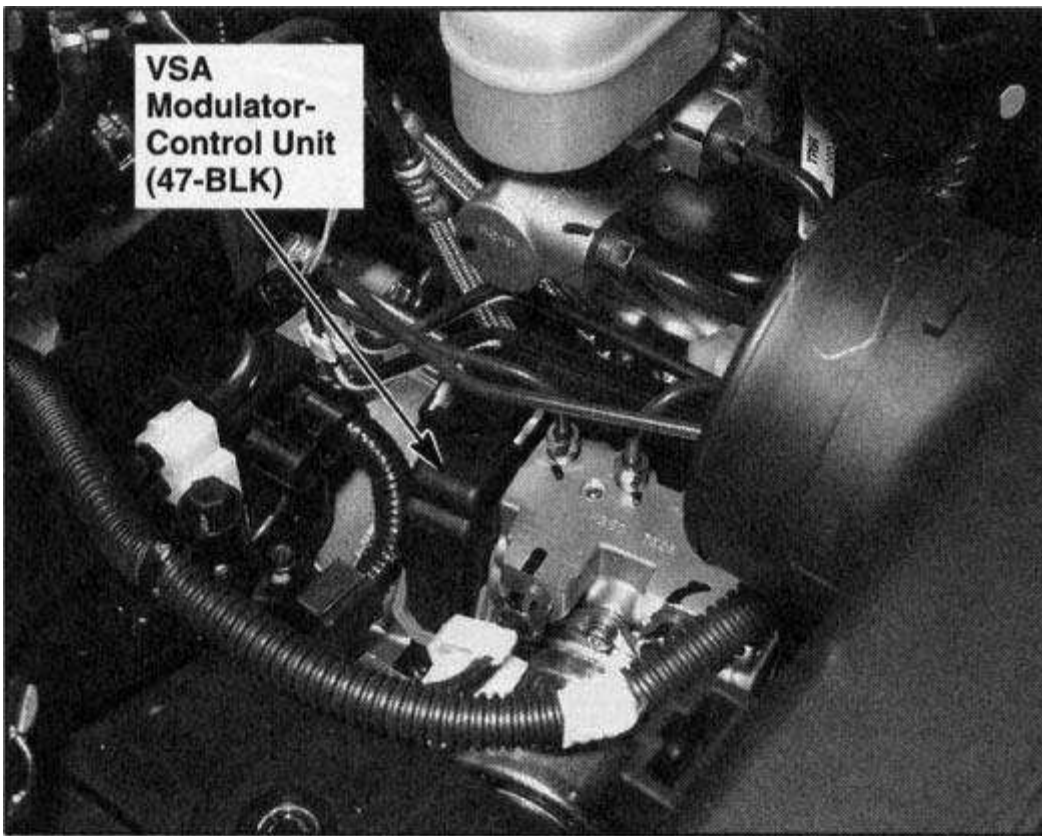


G00267853

Fig. 11: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

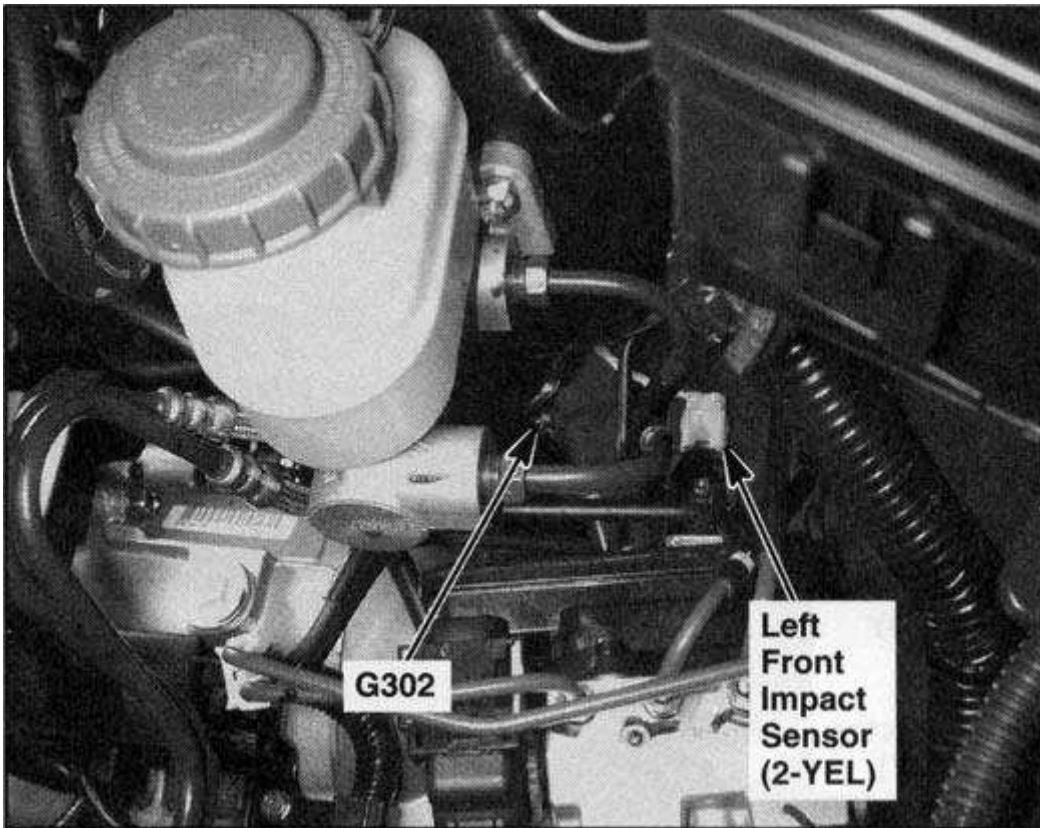

G00267854


Fig. 12: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

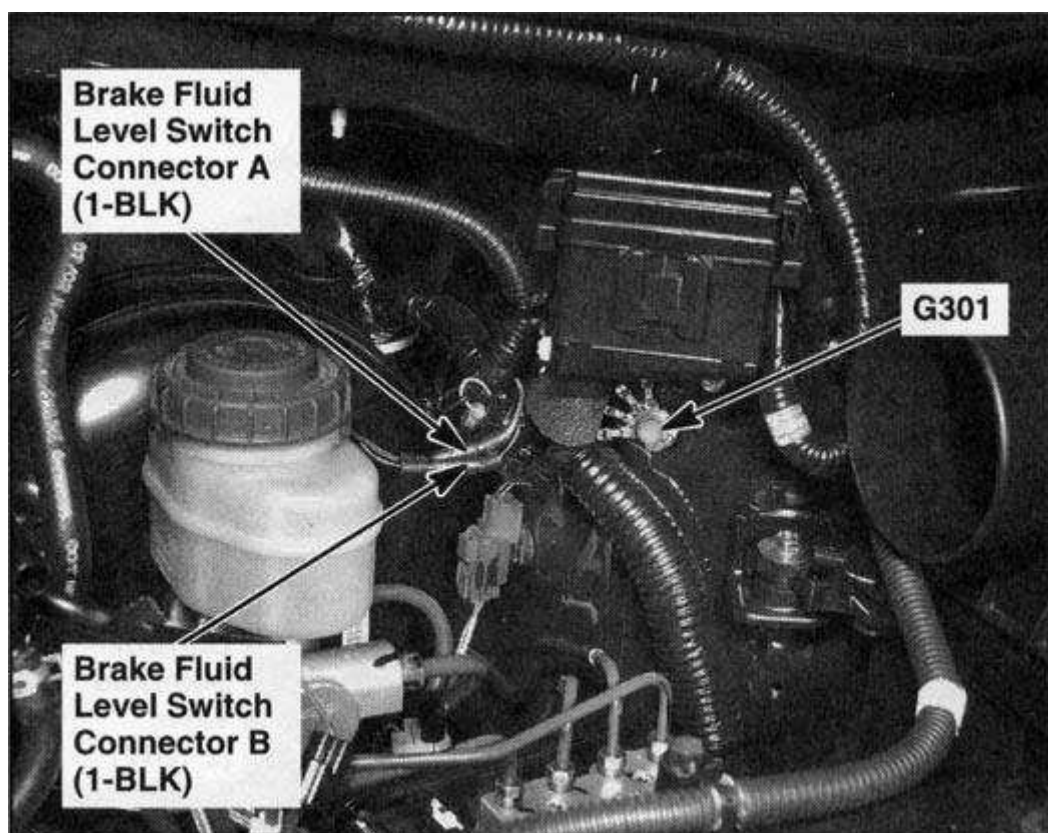

G00267855


Fig. 13: Left Side Of Engine Compartment

Courtesy of AMERICAN HONDA MOTOR CO., INC.

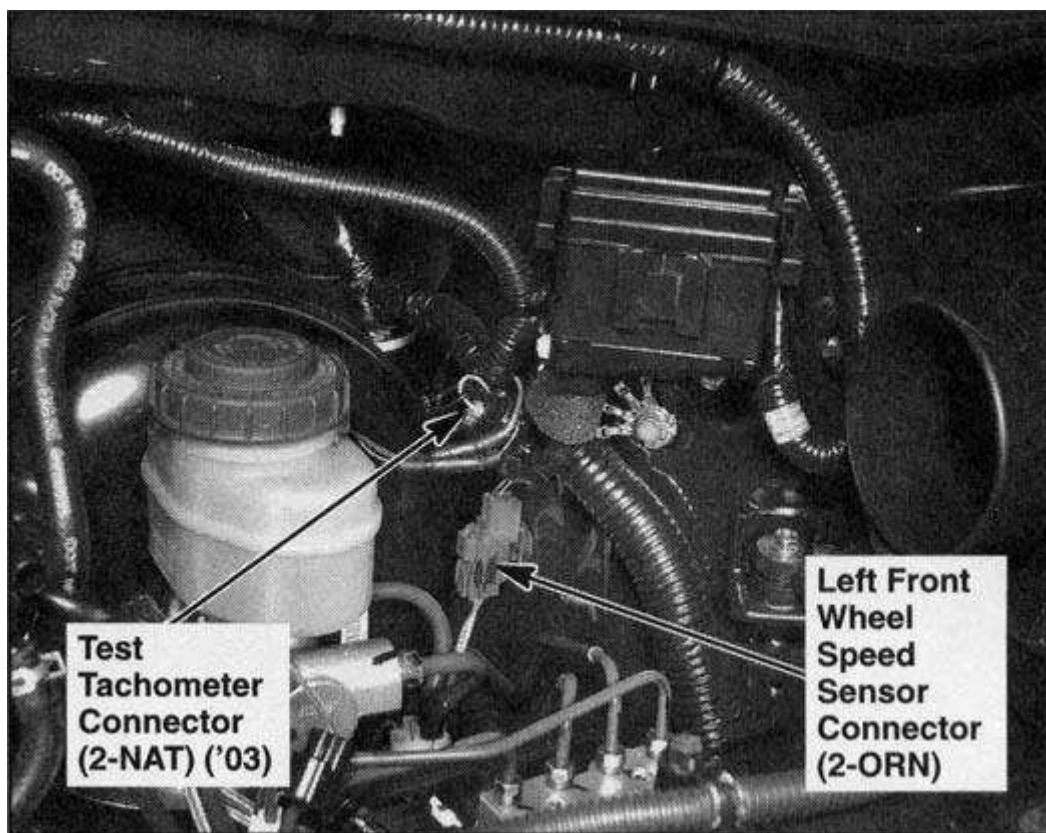

G00267856


Fig. 14: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

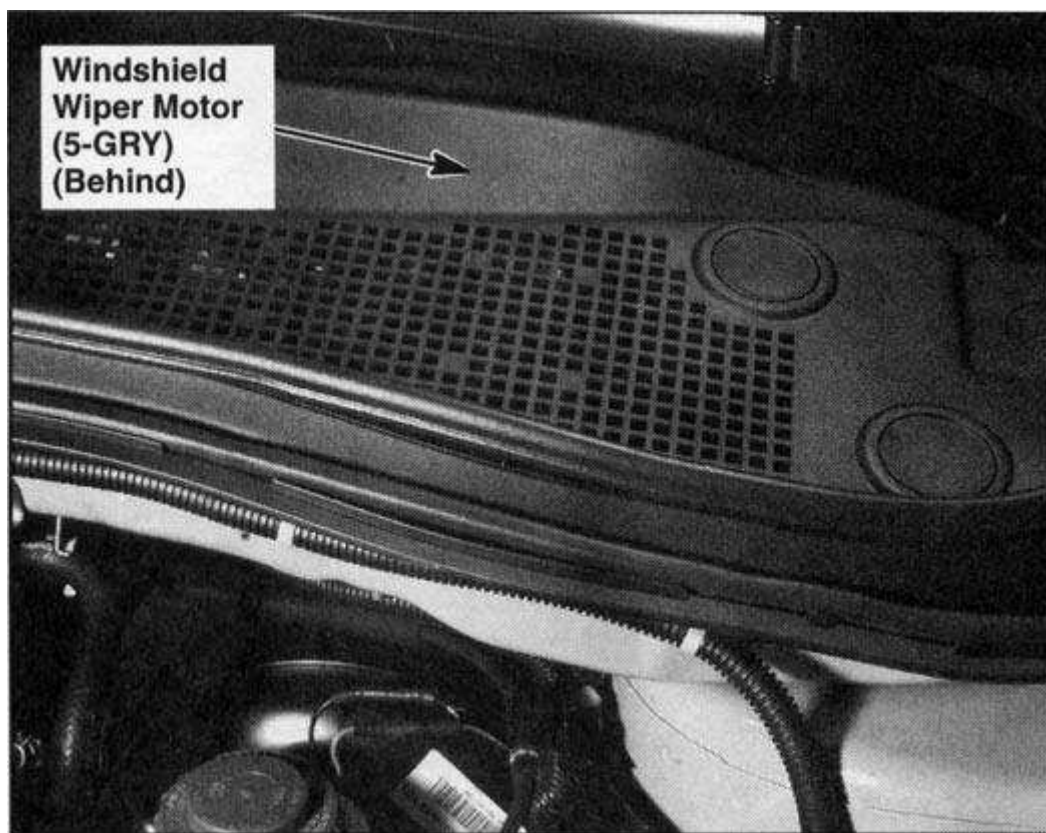

G00267857

Fig. 15: Windshield Wiper Motor


Courtesy of AMERICAN HONDA MOTOR CO., INC.

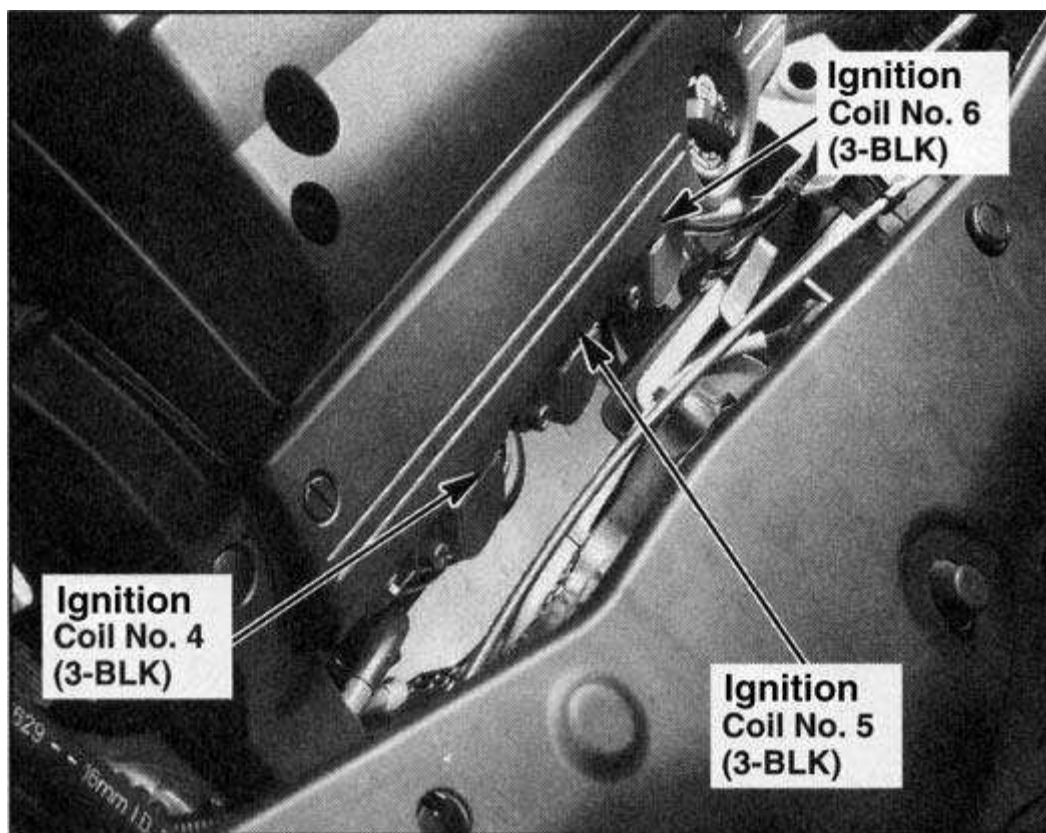

G00267858


Fig. 16: Middle Of Engine Compartment

Courtesy of AMERICAN HONDA MOTOR CO., INC.

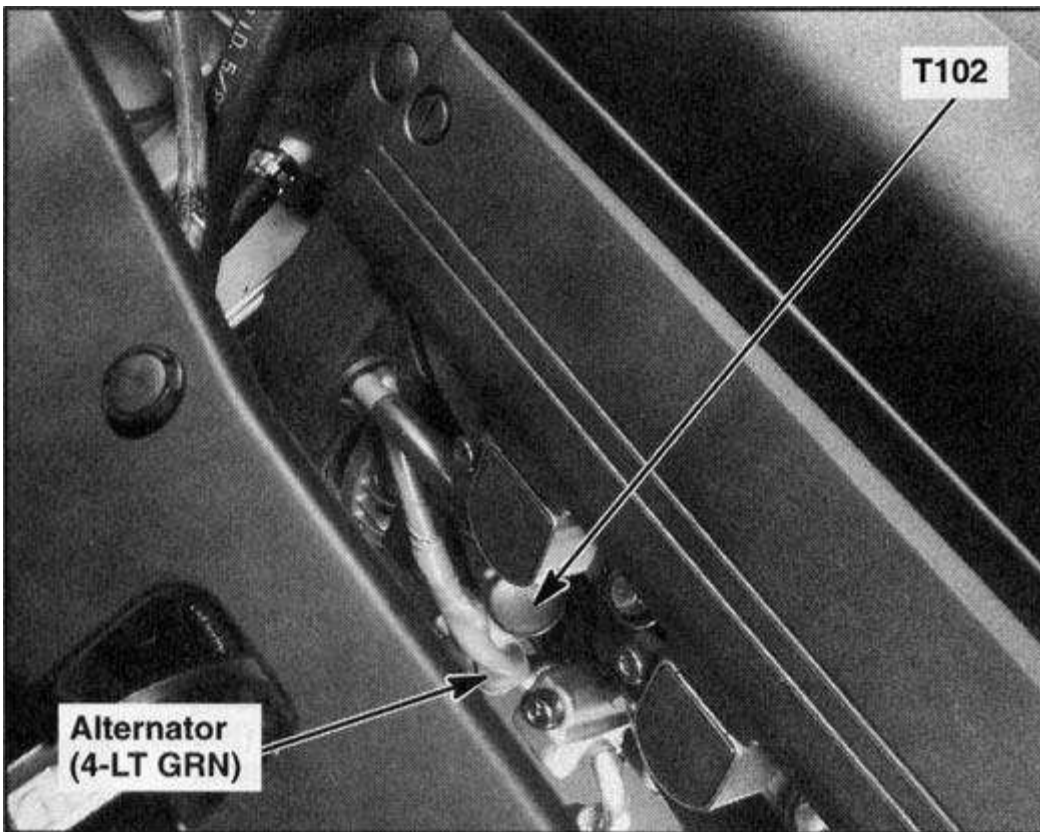

G00267859


Fig. 17: Middle Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

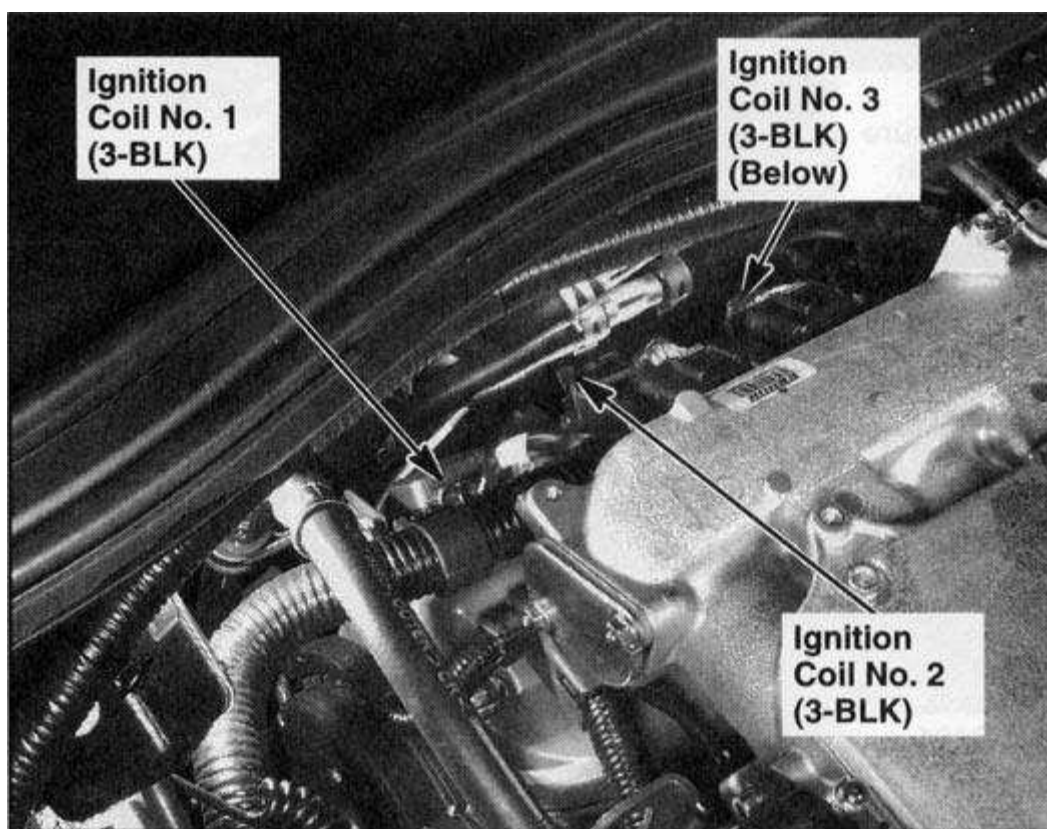

G00267860

Fig. 18: Middle Of Engine Compartment


Courtesy of AMERICAN HONDA MOTOR CO., INC.

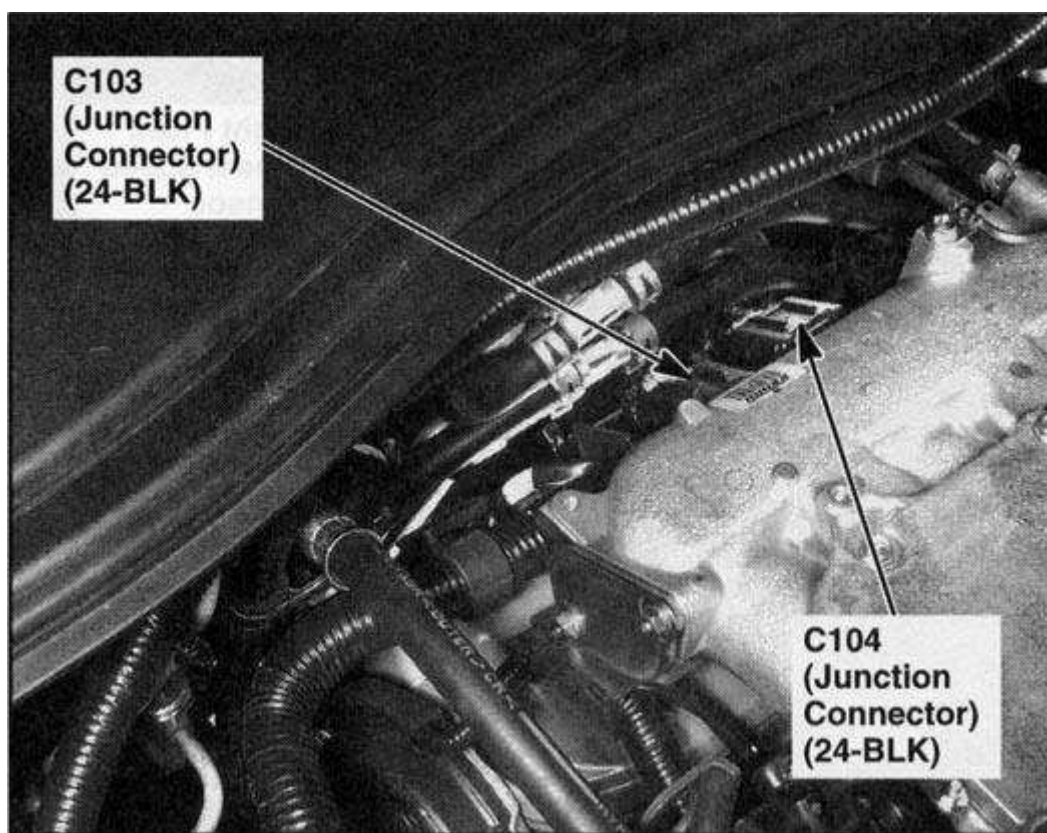

G00267861


Fig. 19: Middle Of Engine Compartment

Courtesy of AMERICAN HONDA MOTOR CO., INC.

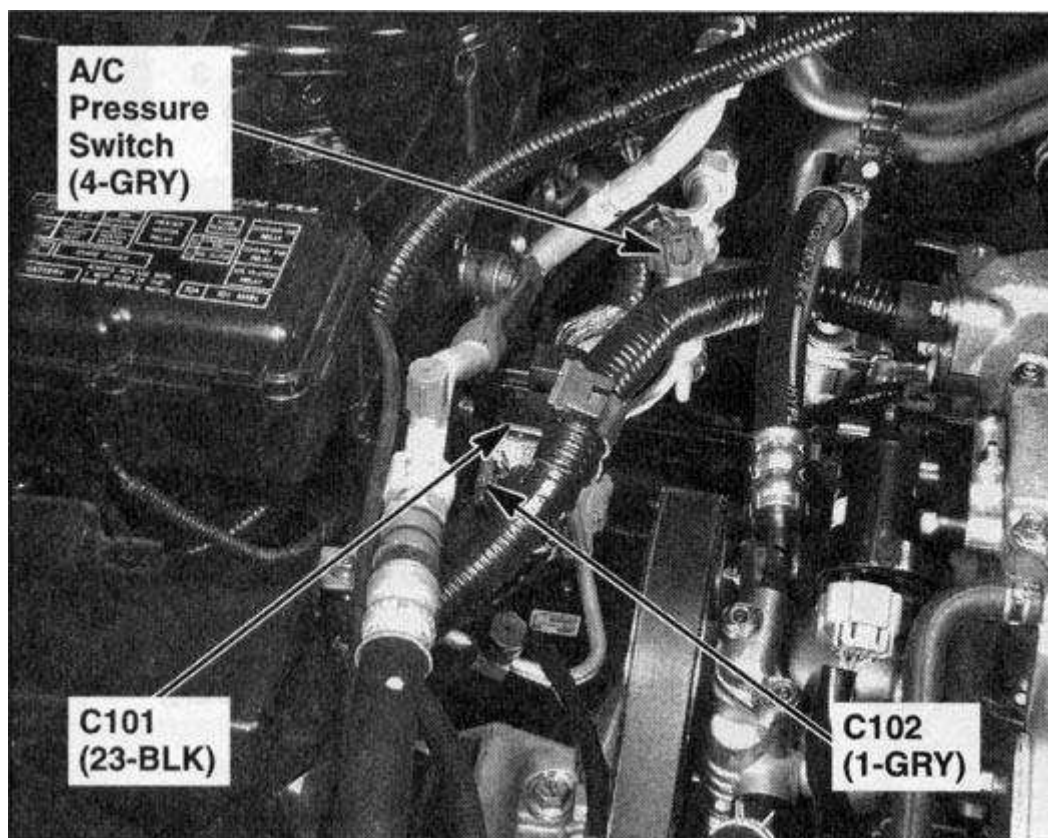


G00267840

Fig. 20: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

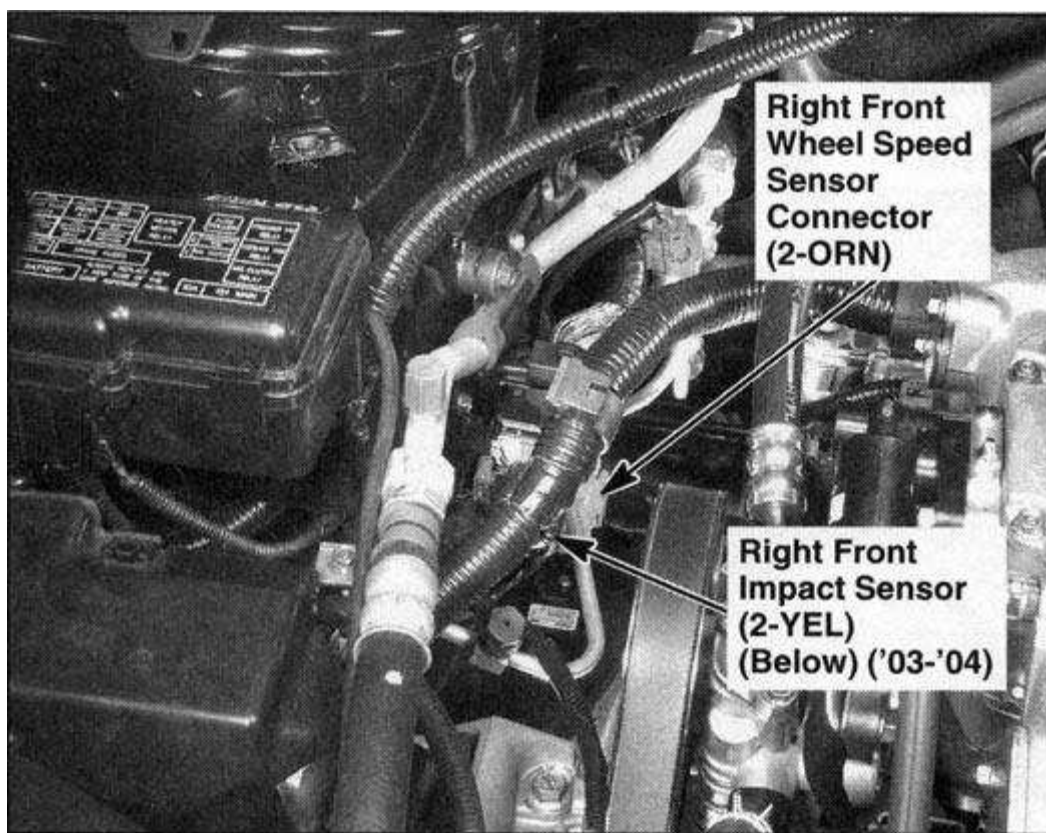


G00360304

Fig. 21: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

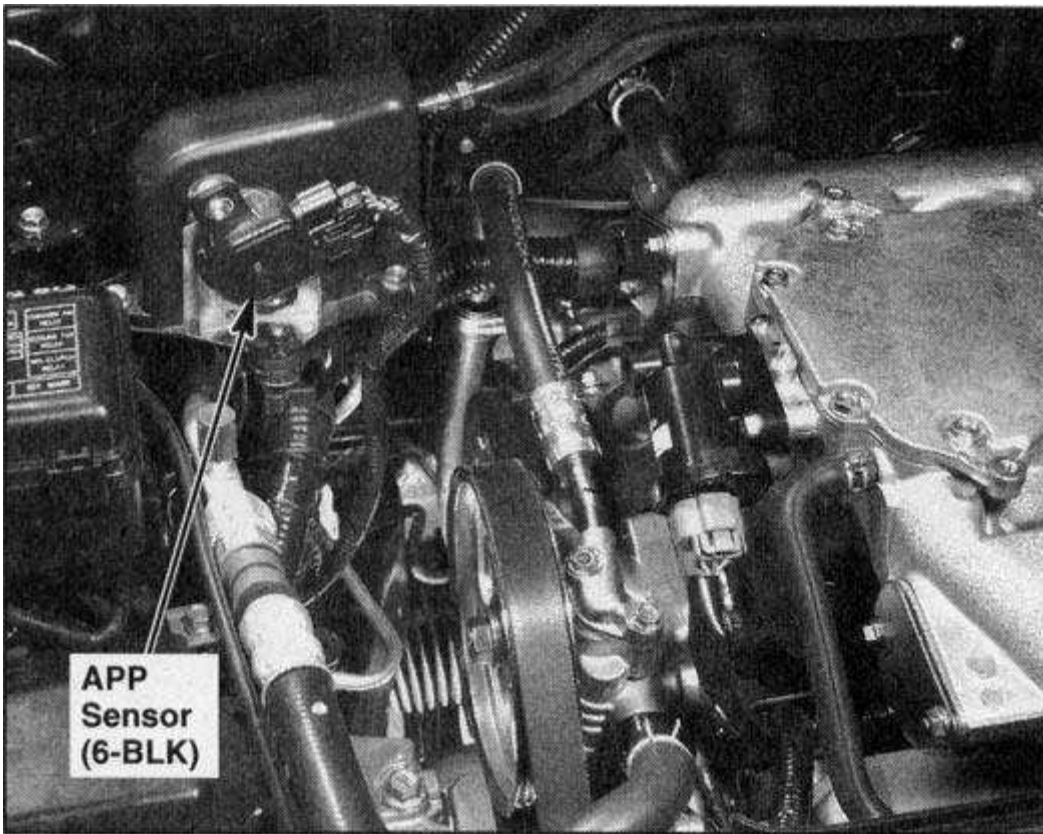

G00267848


Fig. 22: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

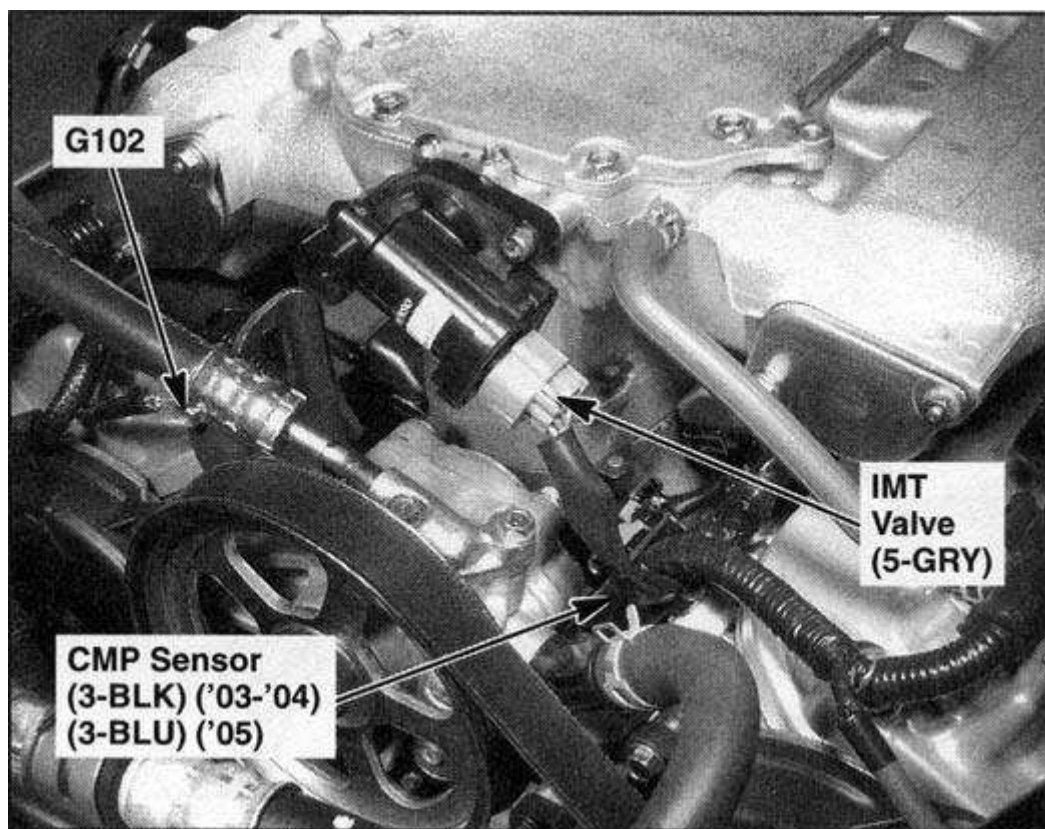

G00360305


Fig. 23: Right Side Of Engine Compartment

Courtesy of AMERICAN HONDA MOTOR CO., INC.

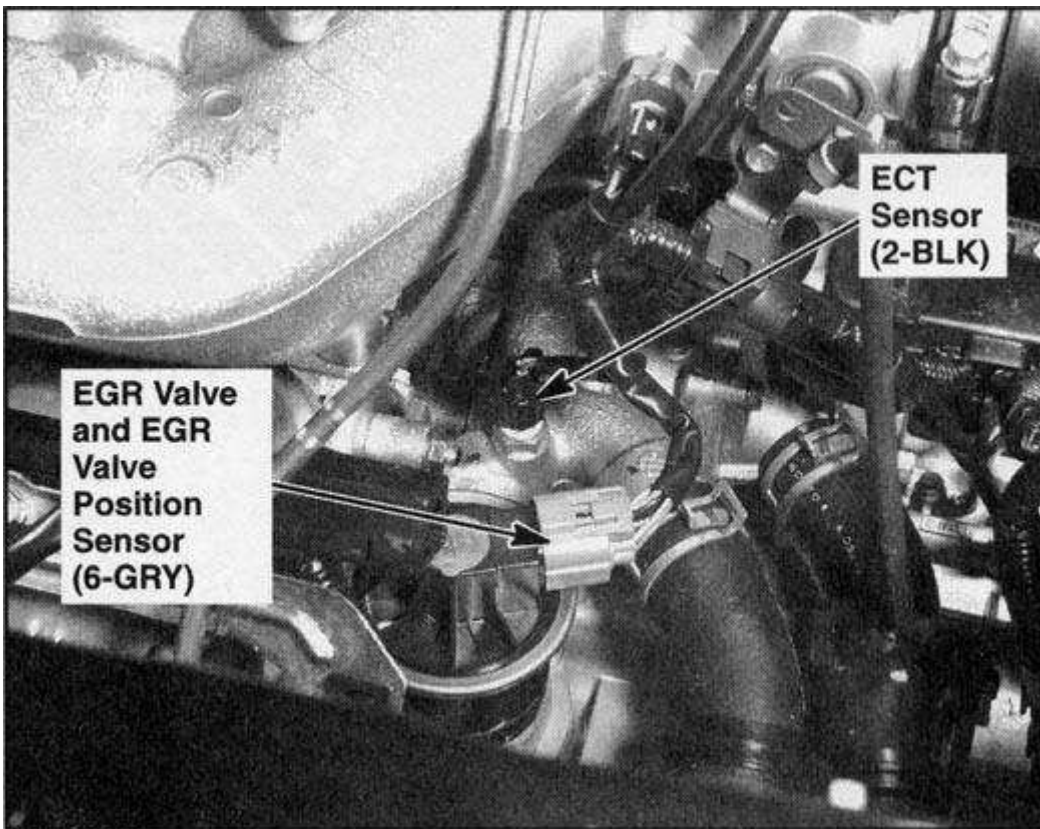


G00267869

Fig. 24: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

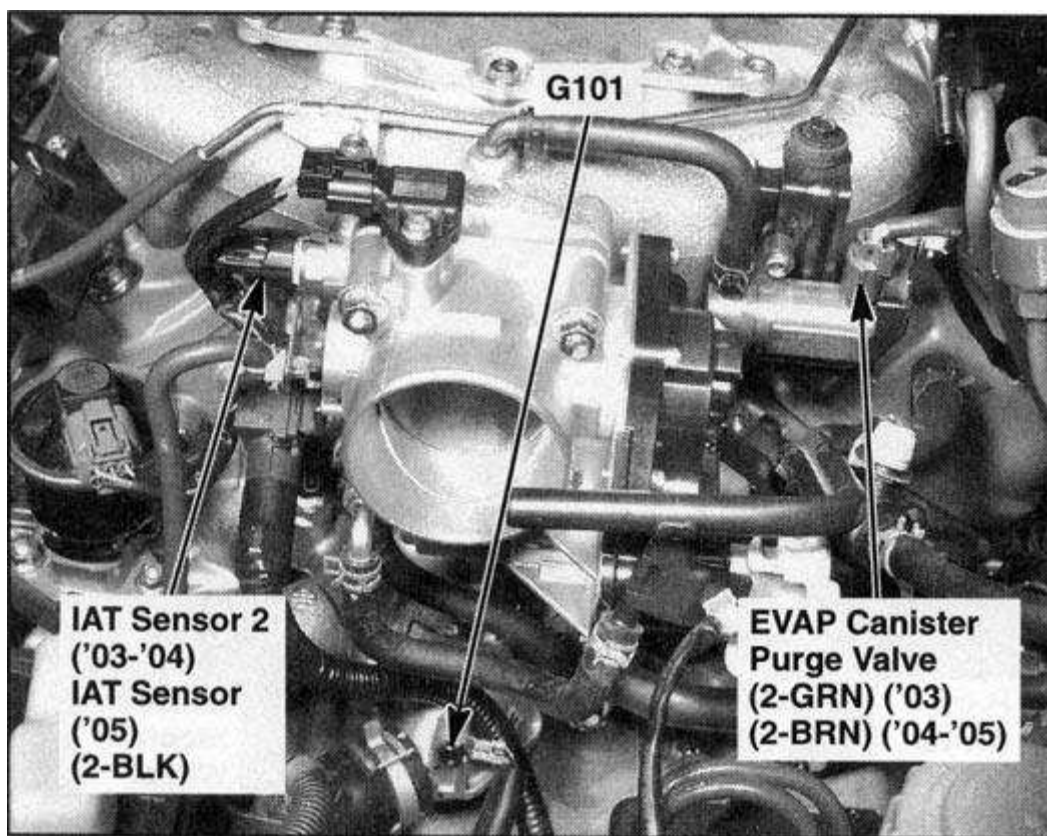


G00360306

Fig. 25: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

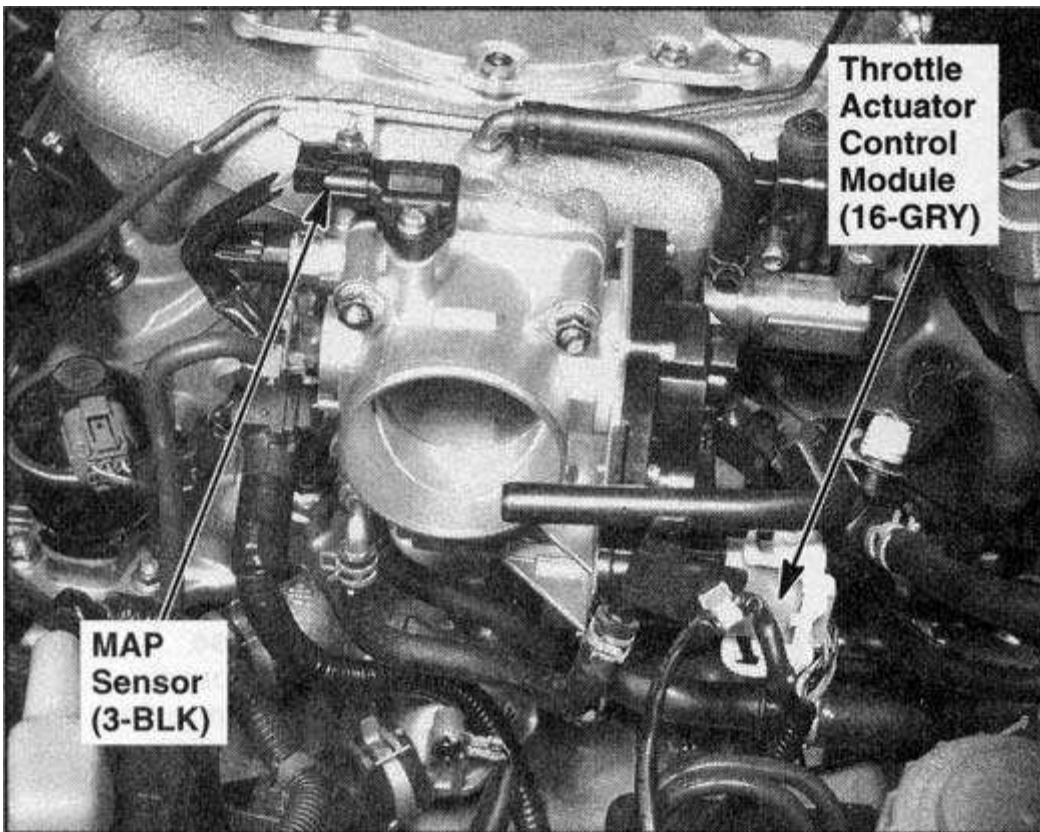


G00267864

Fig. 26: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

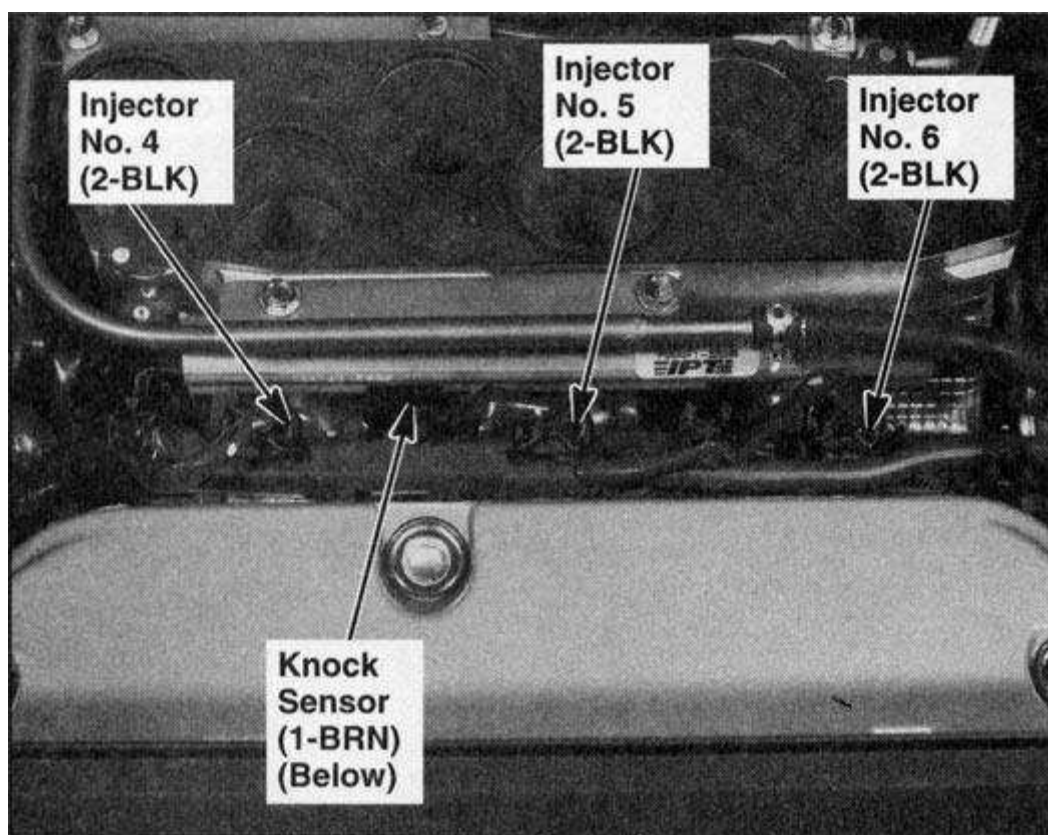


G00267865

Fig. 27: Middle Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

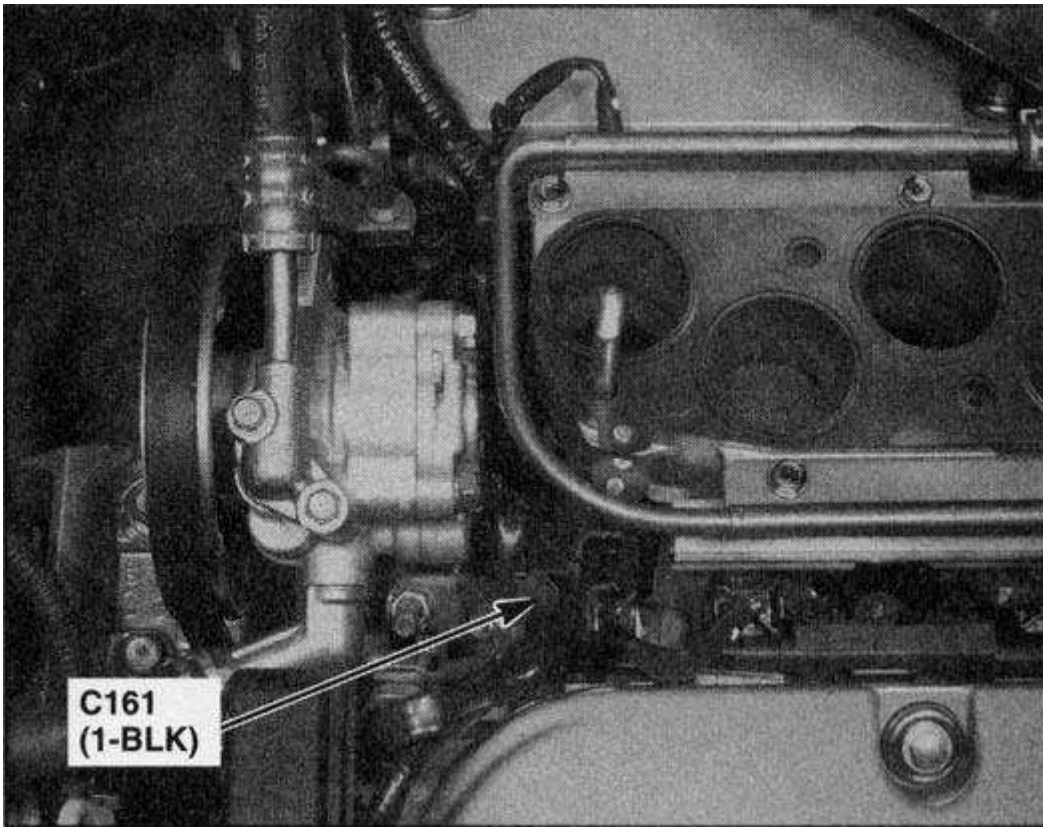

G00267866

Fig. 28: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

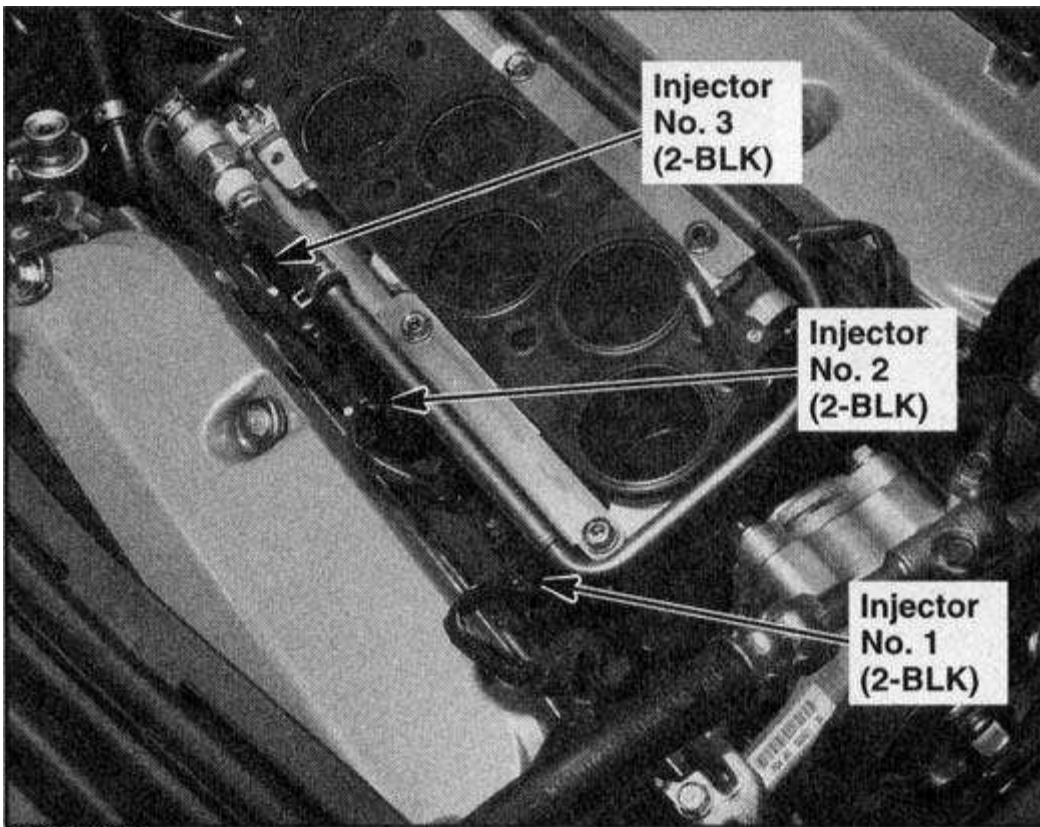

G00267867


Fig. 29: Middle Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00267868

Fig. 30: Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

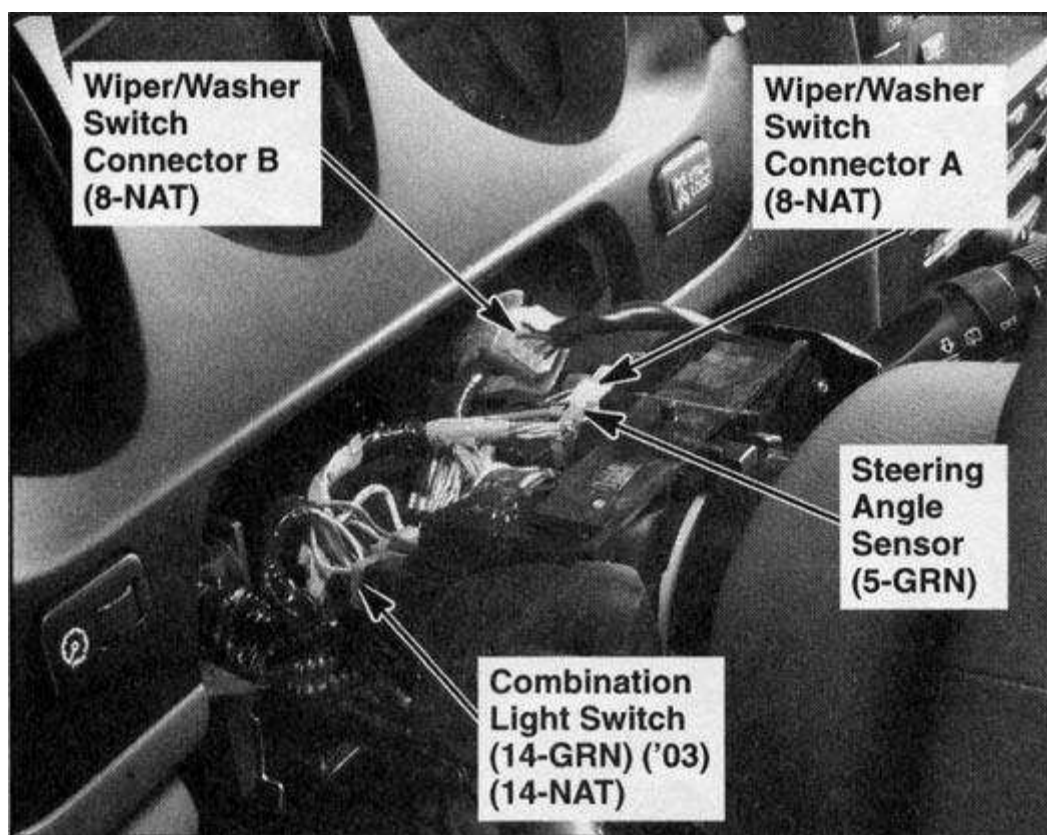

G00267871

Fig. 31: In Steering Column Cover


Courtesy of AMERICAN HONDA MOTOR CO., INC.

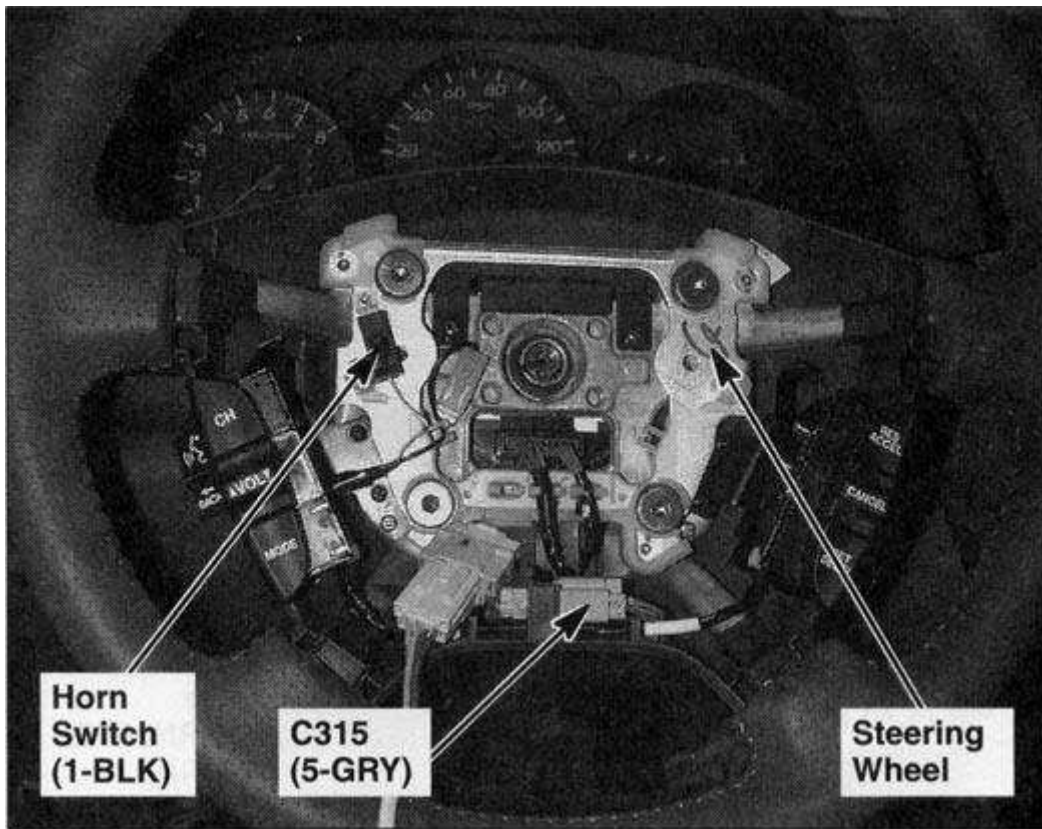

G00267872

Fig. 32: Inside Of Steering Wheel


Courtesy of AMERICAN HONDA MOTOR CO., INC.

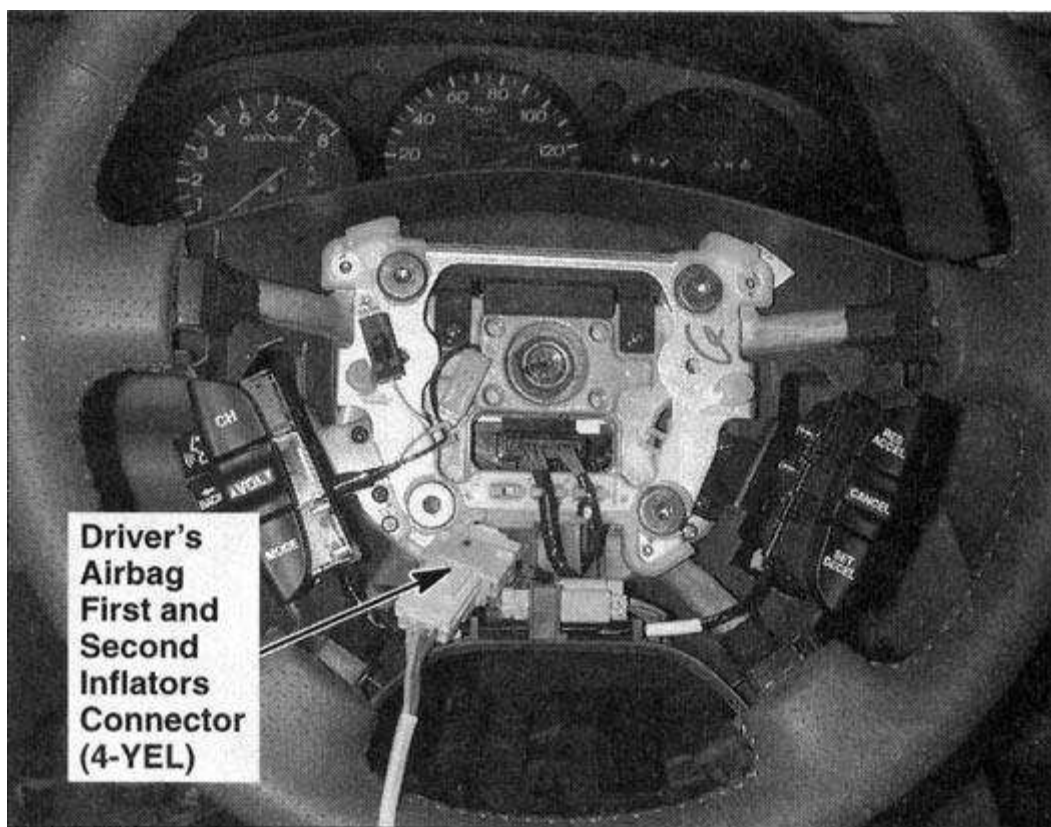

G00360307


Fig. 33: Inside Steering Wheel

Courtesy of AMERICAN HONDA MOTOR CO., INC.

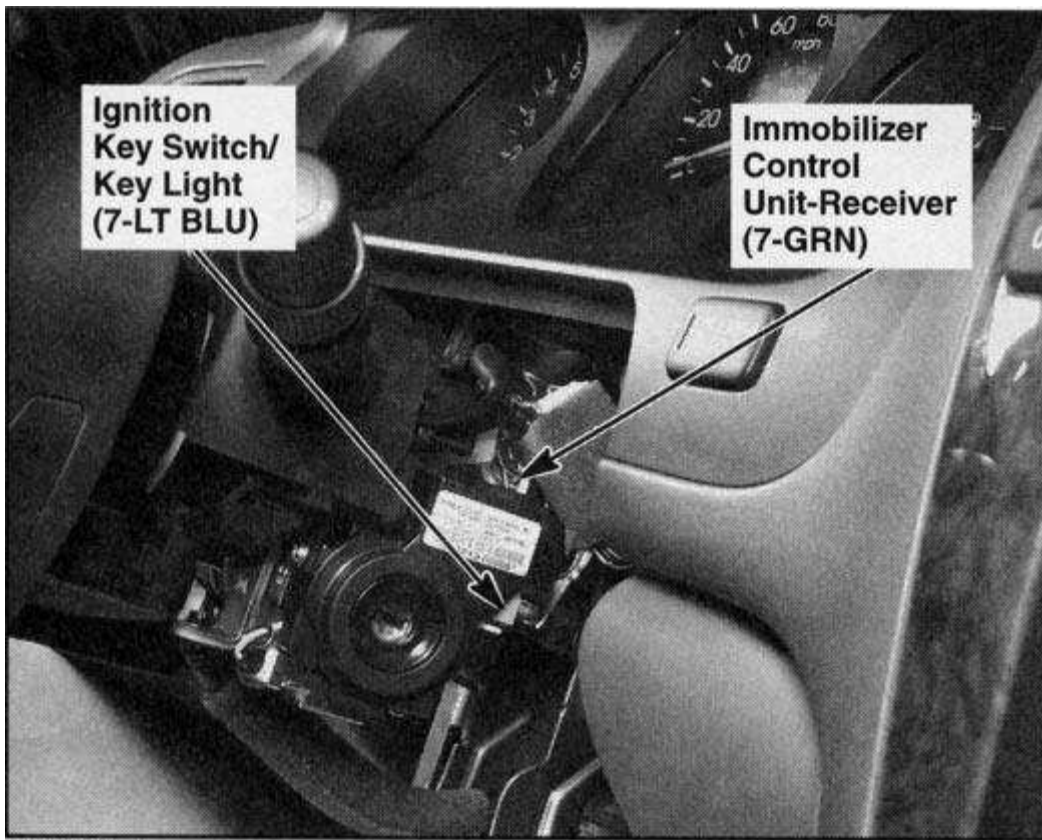

G00267875


Fig. 34: In Steering Column Cover
Courtesy of AMERICAN HONDA MOTOR CO., INC.

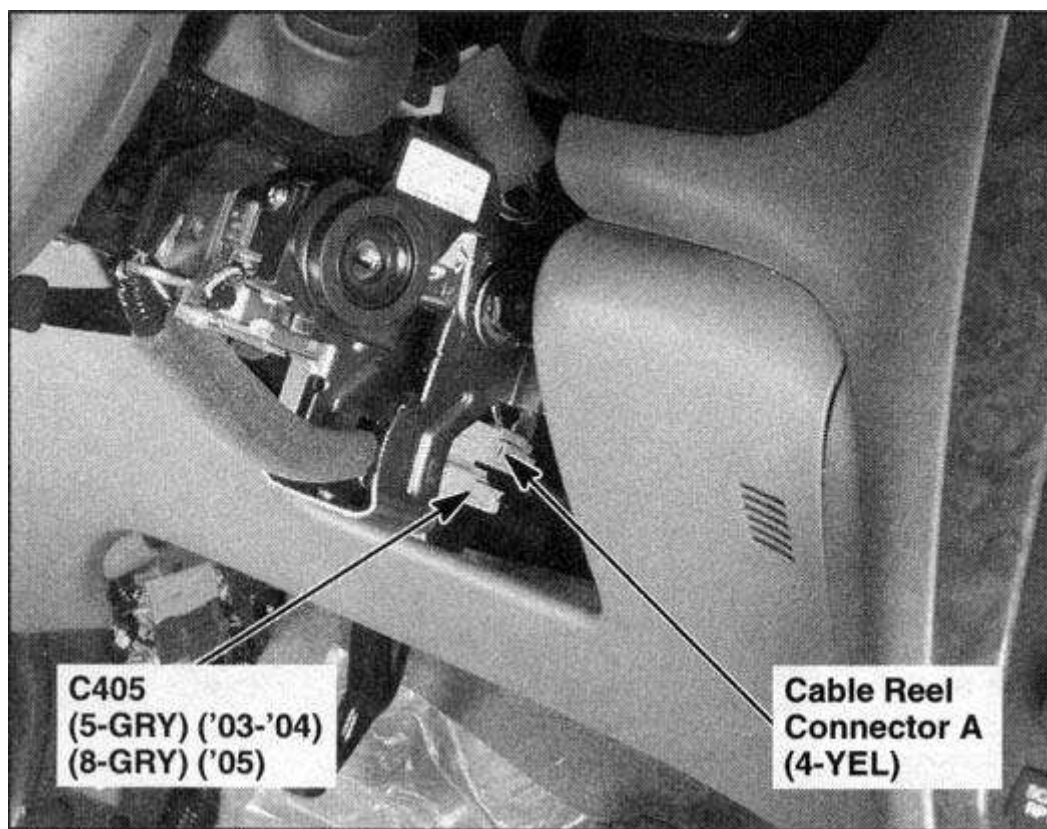

G00360308

Fig. 35: Behind Steering Column Cover


Courtesy of AMERICAN HONDA MOTOR CO., INC.

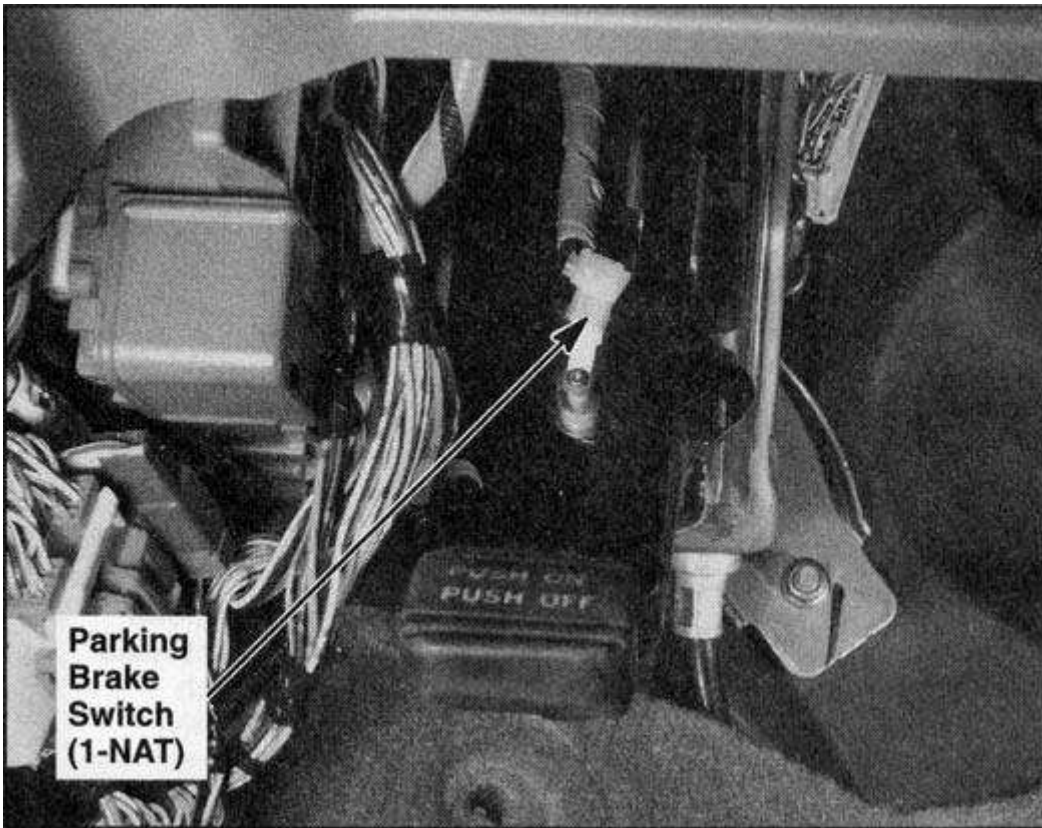

G00267885

Fig. 36: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

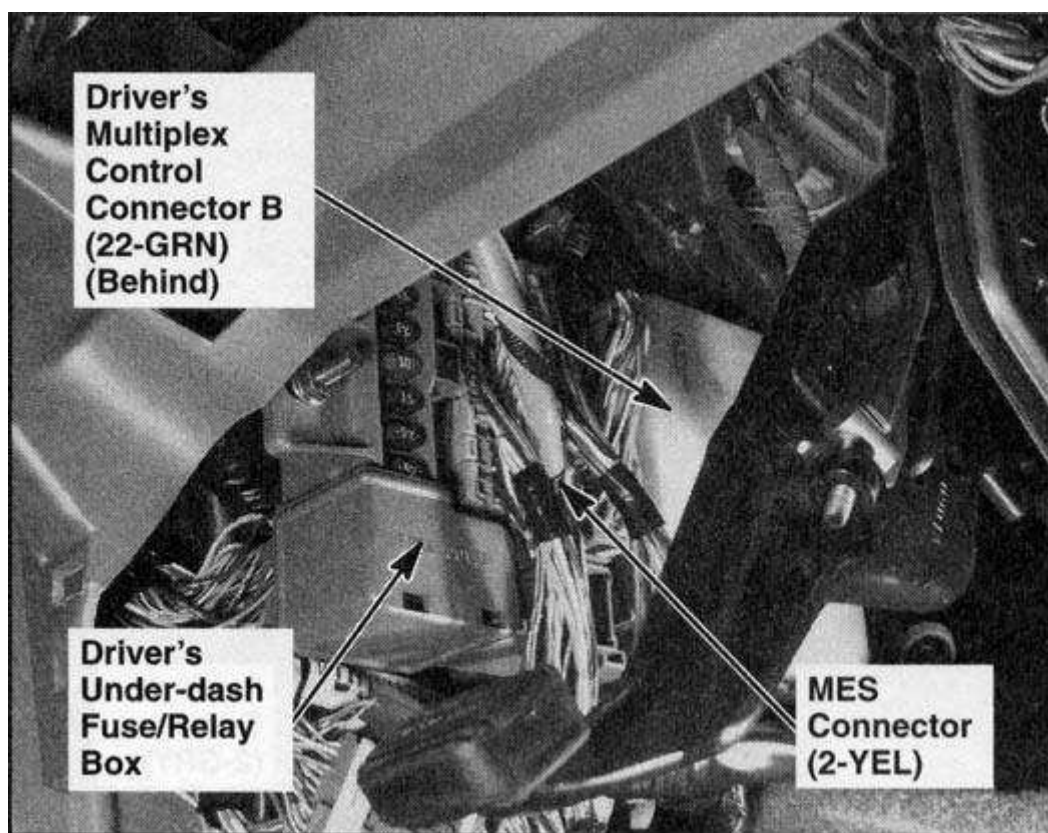

G00267886

Fig. 37: Under Left Side Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.

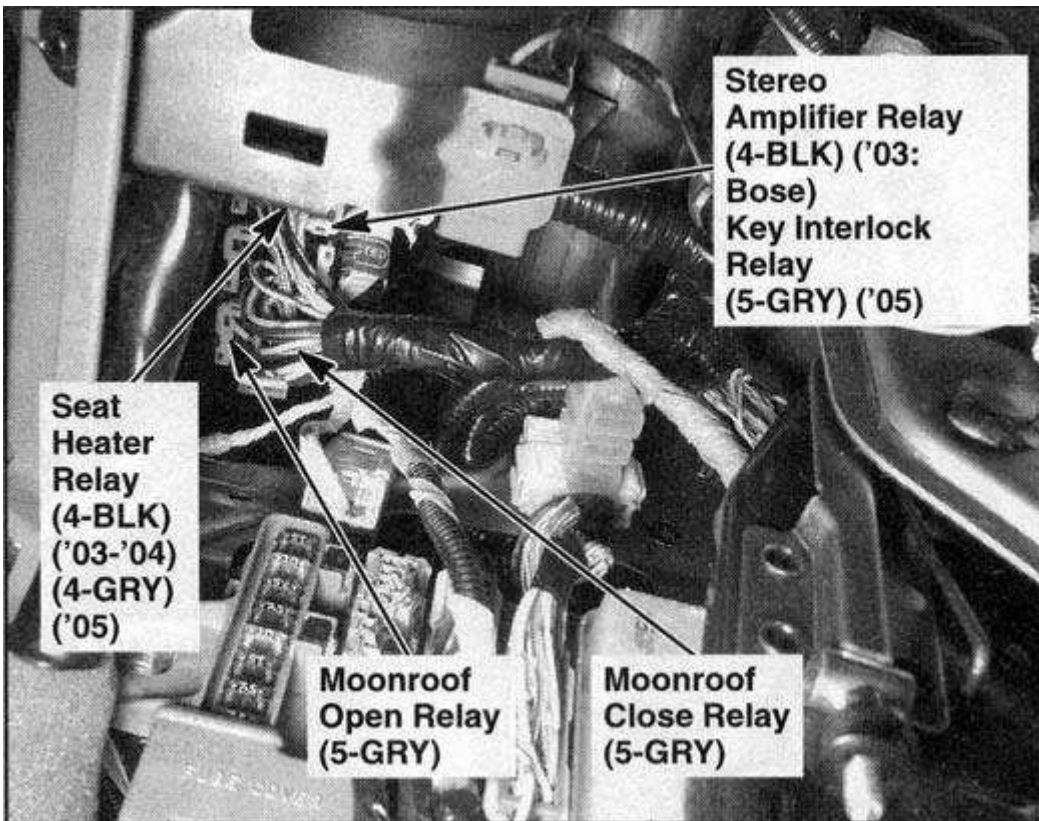

G00360309

Fig. 38: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00267891

Fig. 39: Under Left Side Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.

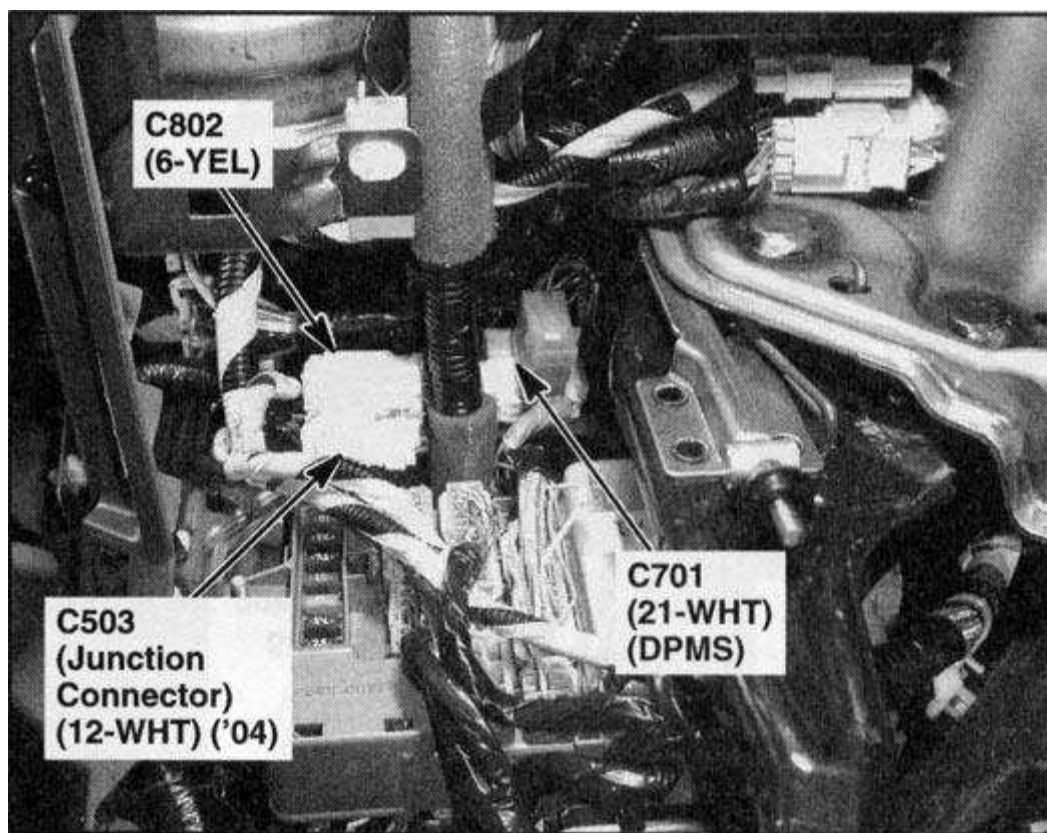

G00267892

Fig. 40: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00267894

Fig. 41: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

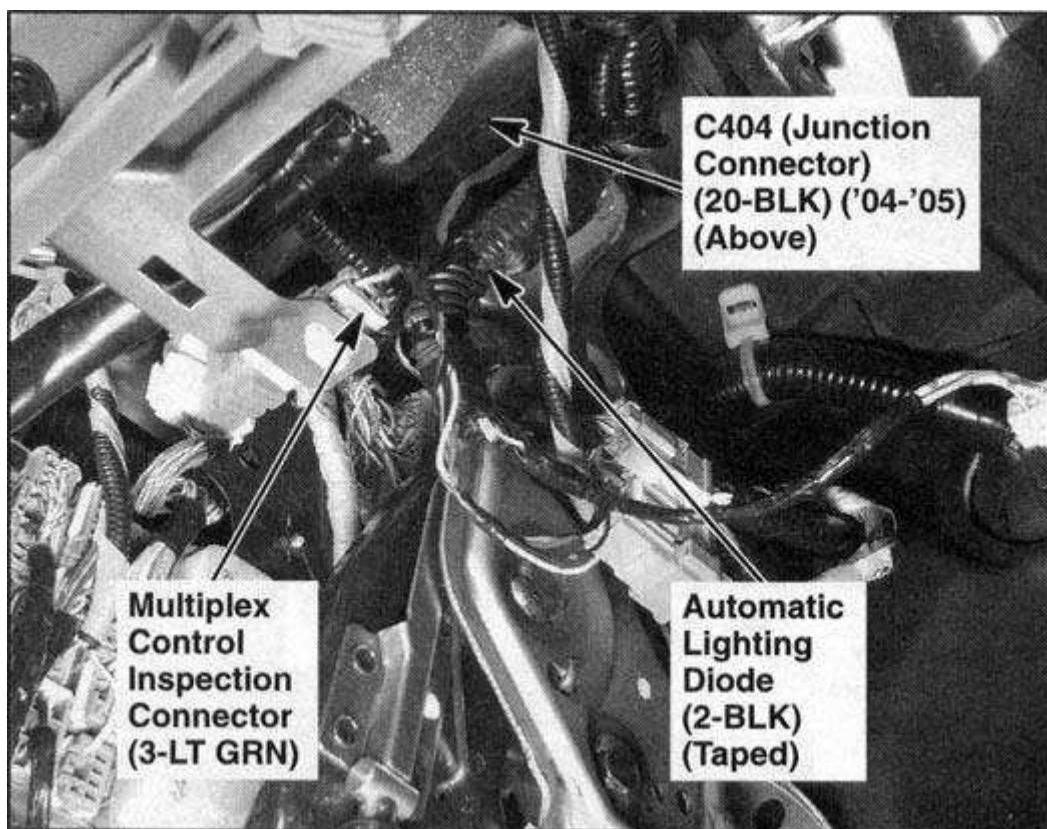

G00360310

Fig. 42: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

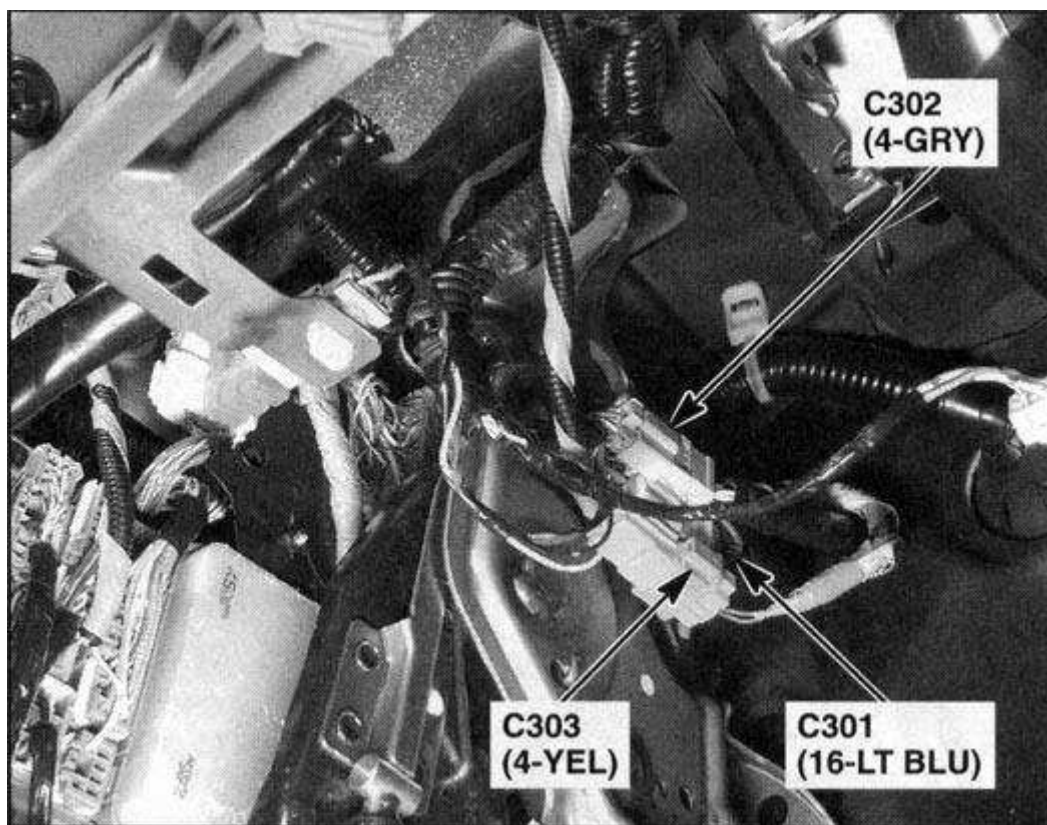

G00360311

Fig. 43: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

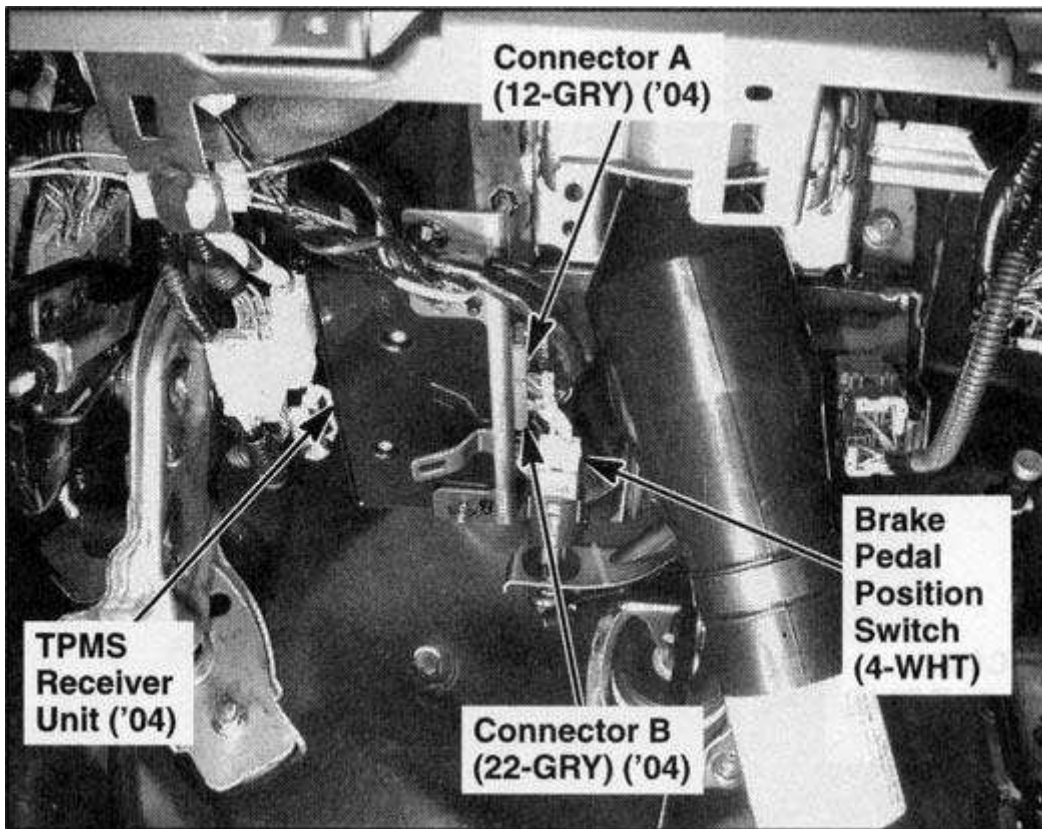

G00267897

Fig. 44: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

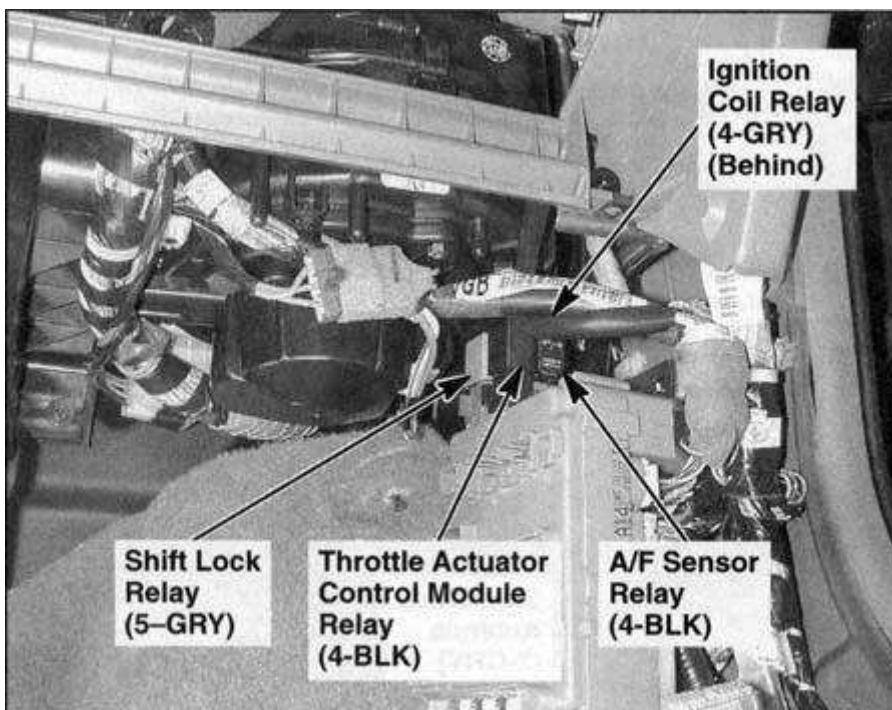

G00360312

Fig. 45: Behind Right Kick Panel


Courtesy of AMERICAN HONDA MOTOR CO., INC.

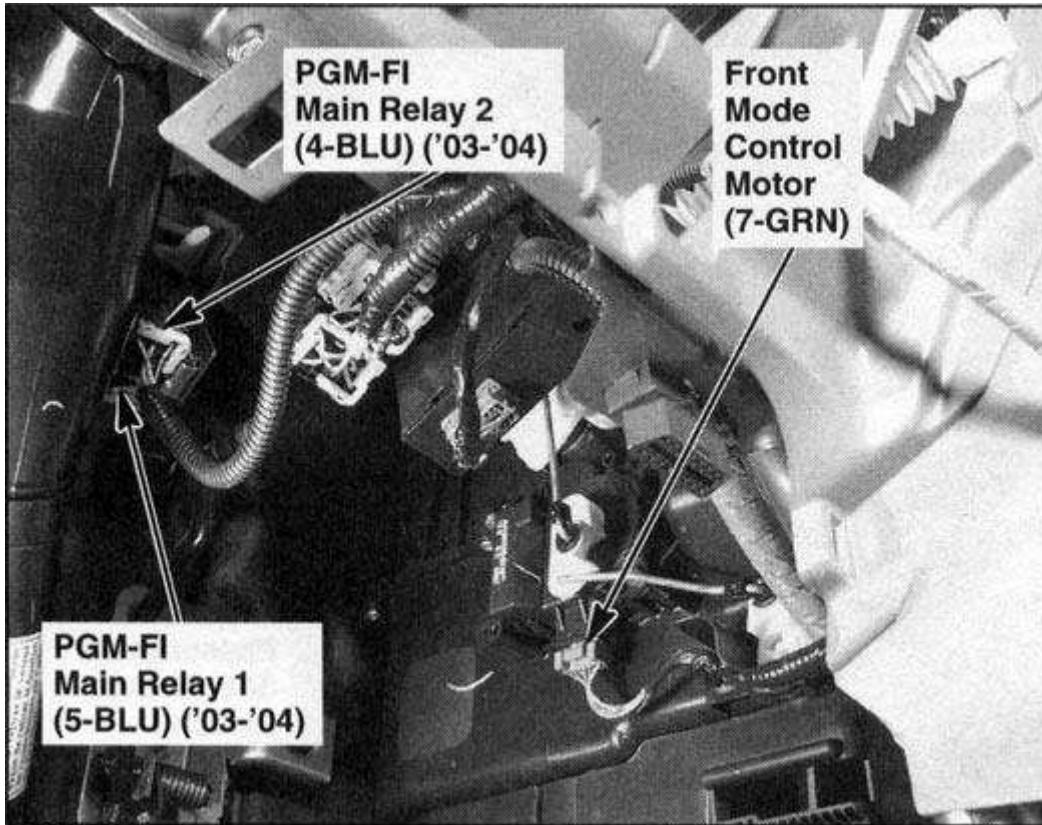

G00360313

Fig. 46: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

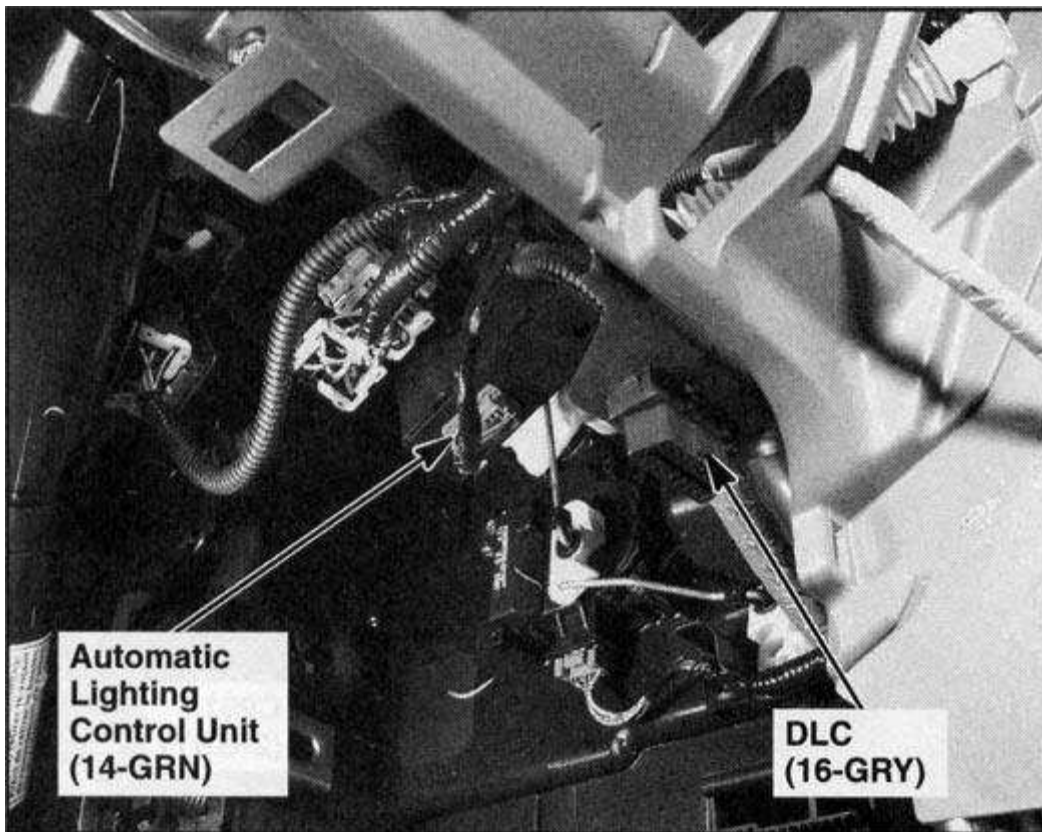

G00267900

Fig. 47: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

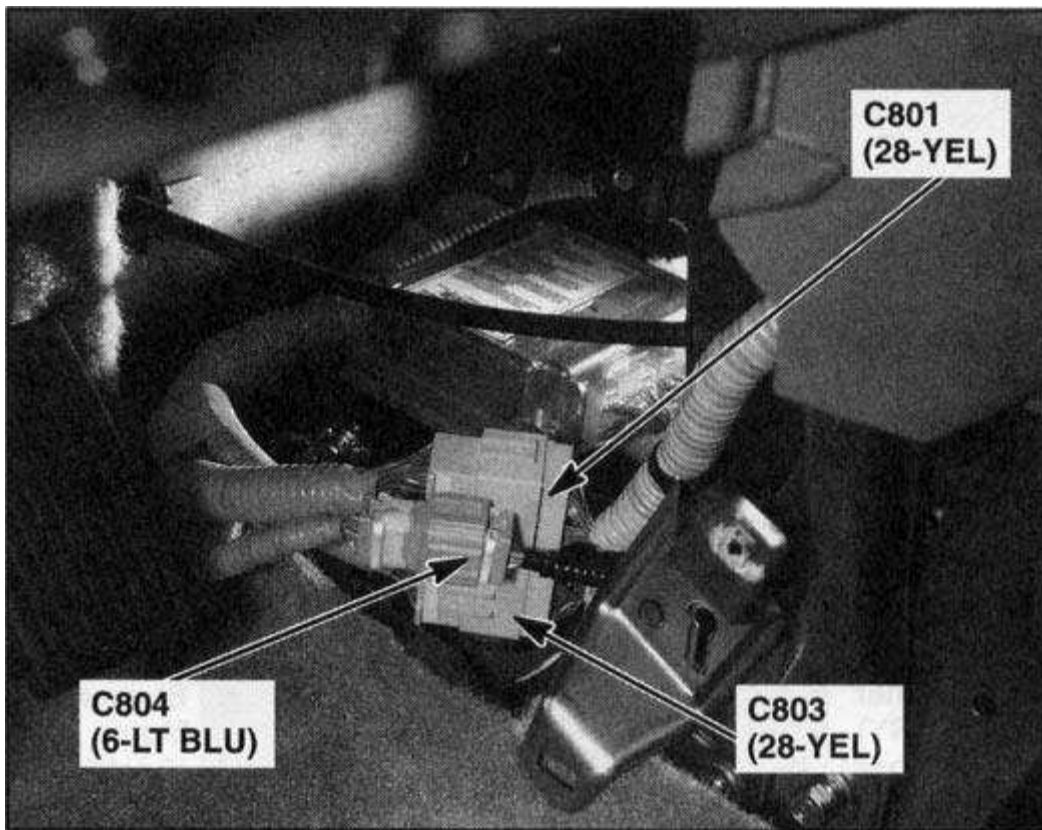

G00267902

Fig. 48: Under Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

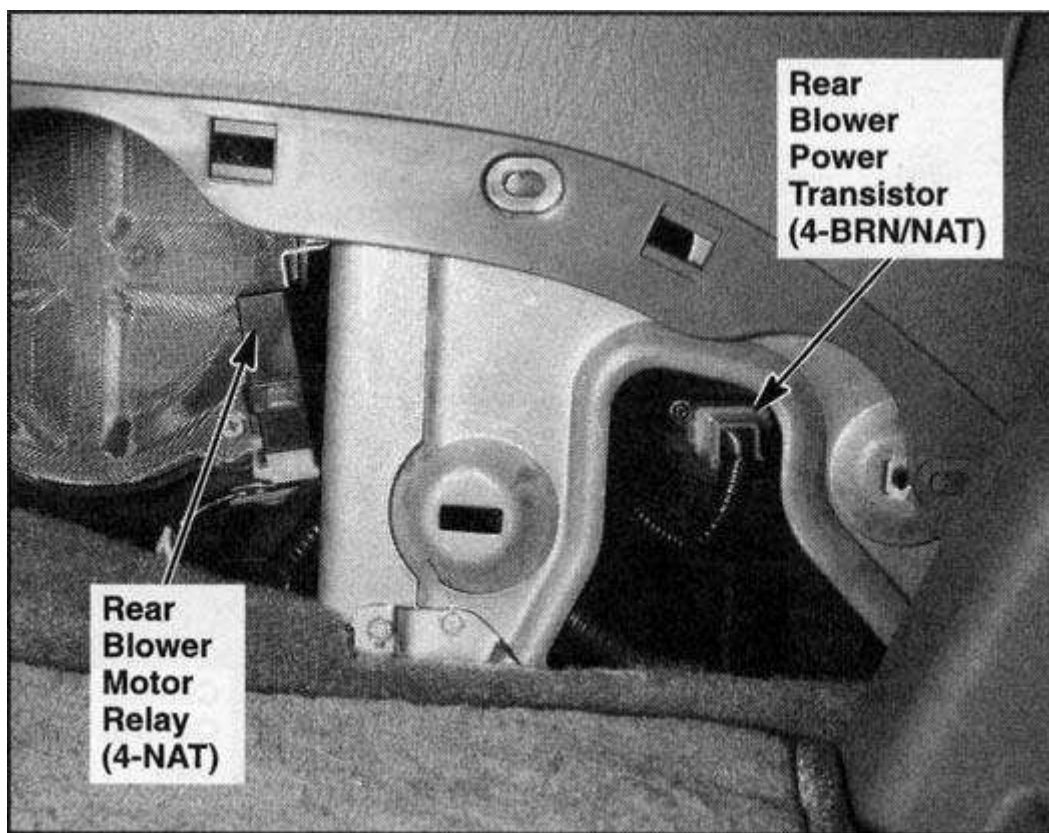

G00267903


Fig. 49: Under Center Console

Courtesy of AMERICAN HONDA MOTOR CO., INC.

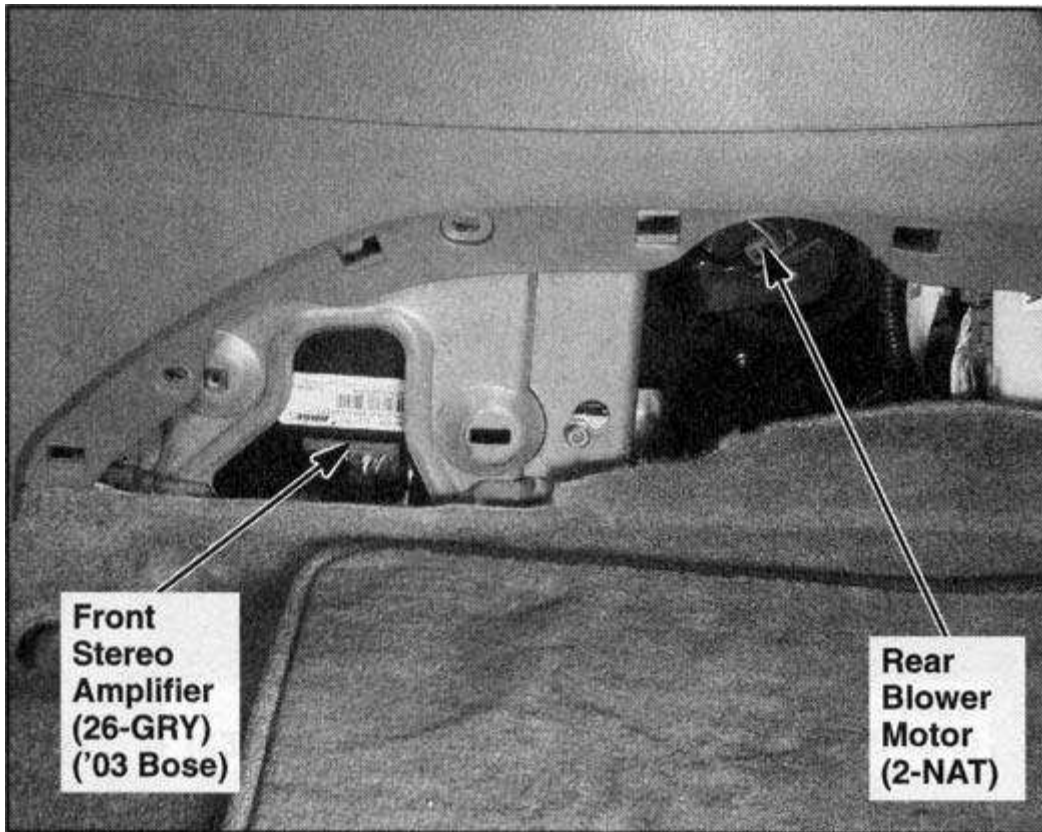

G00267905


Fig. 50: Under Center Console
Courtesy of AMERICAN HONDA MOTOR CO., INC.

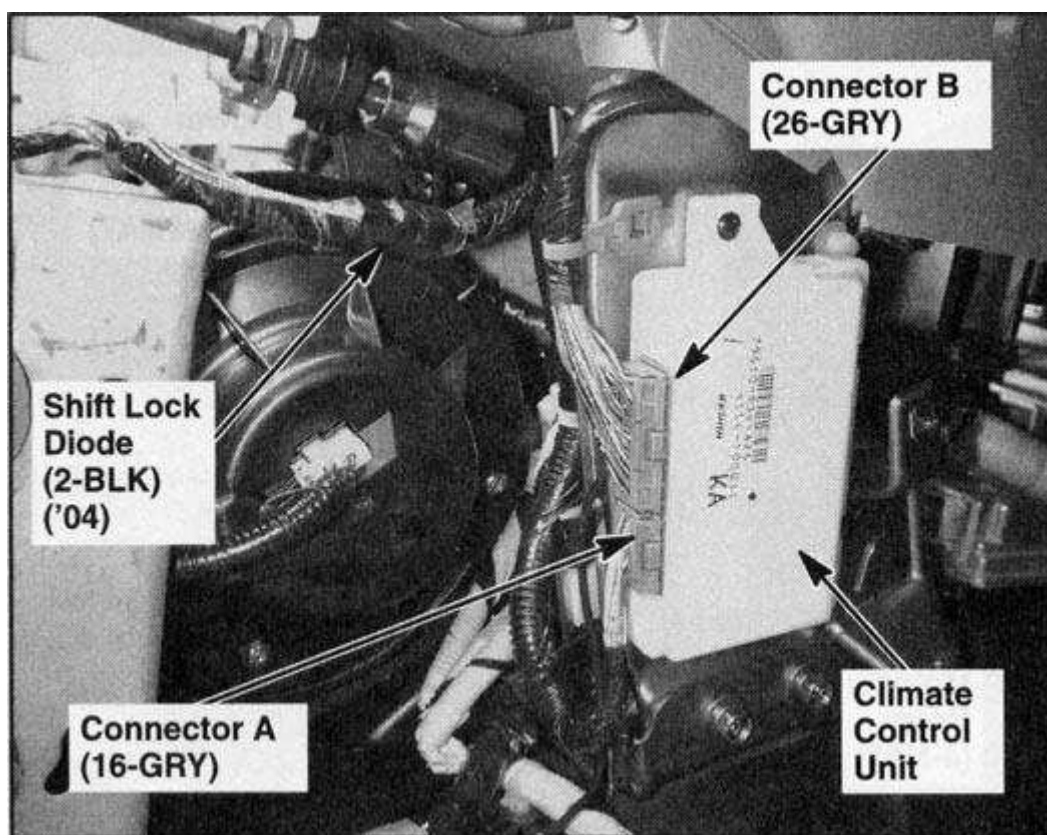

G00267906

Fig. 51: Under Right Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

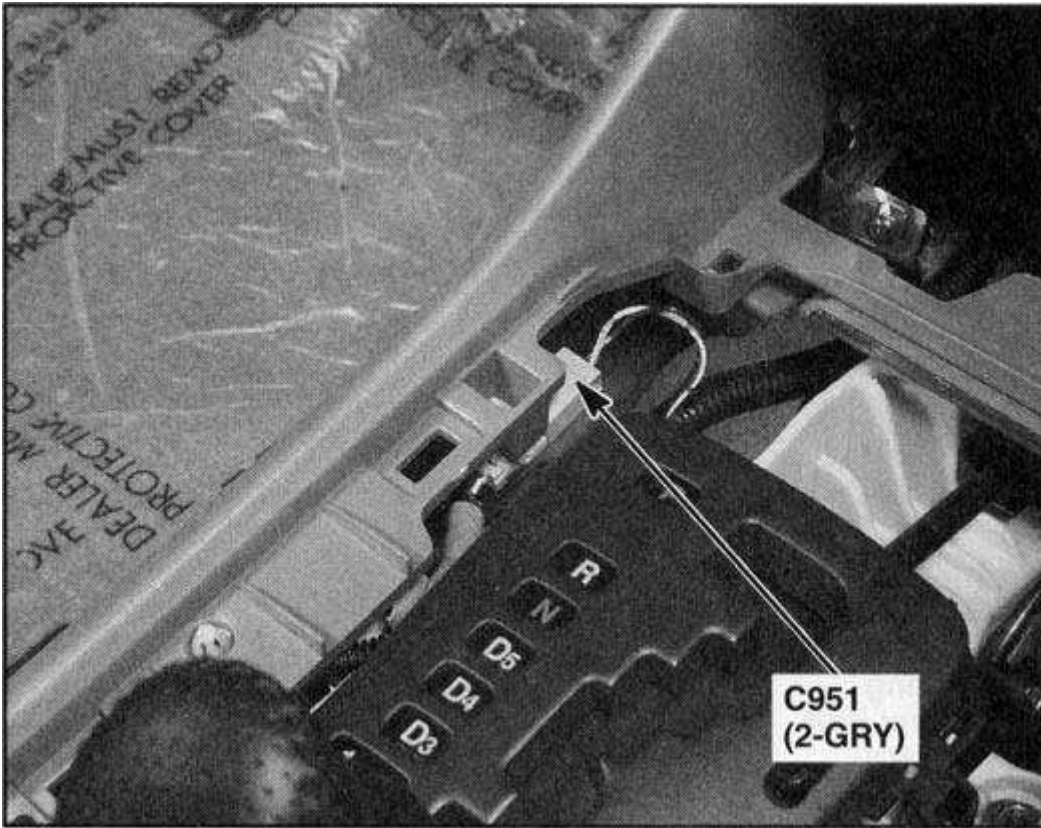

G00267909

Fig. 52: Under Middle Of Console


Courtesy of AMERICAN HONDA MOTOR CO., INC.

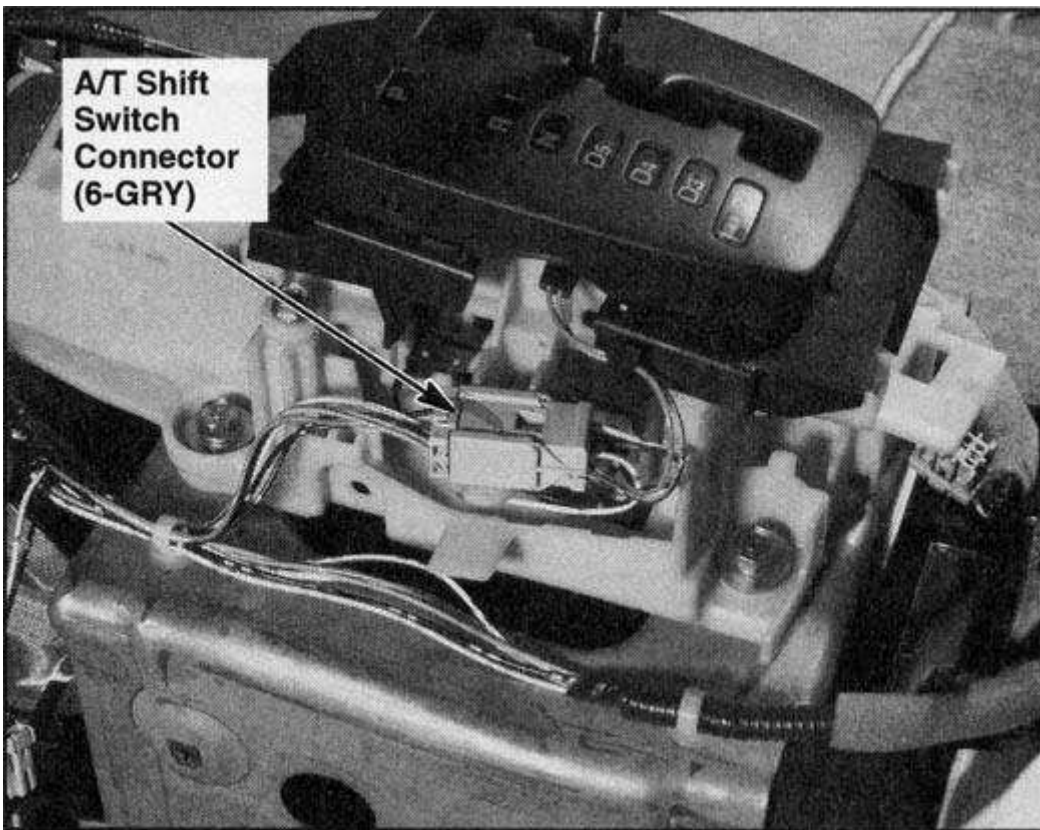

G00267910


Fig. 53: Behind Center Console

Courtesy of AMERICAN HONDA MOTOR CO., INC.

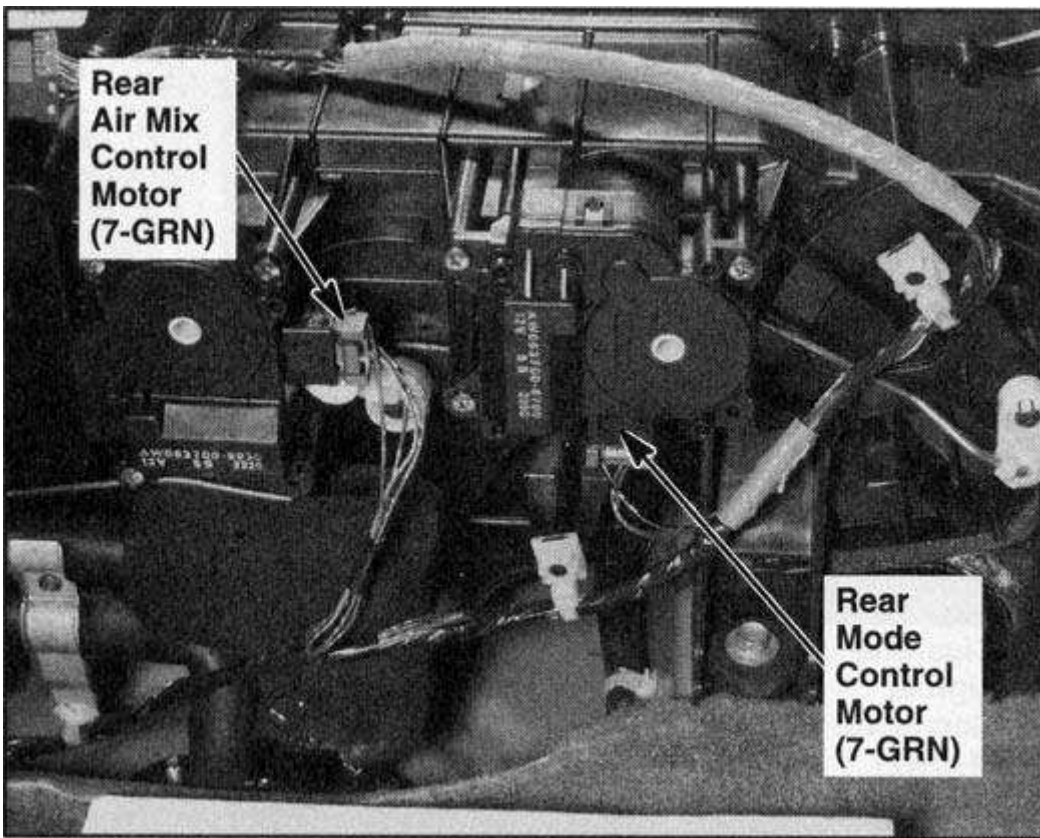


G00267912

Fig. 54: Under Center Console
Courtesy of AMERICAN HONDA MOTOR CO., INC.

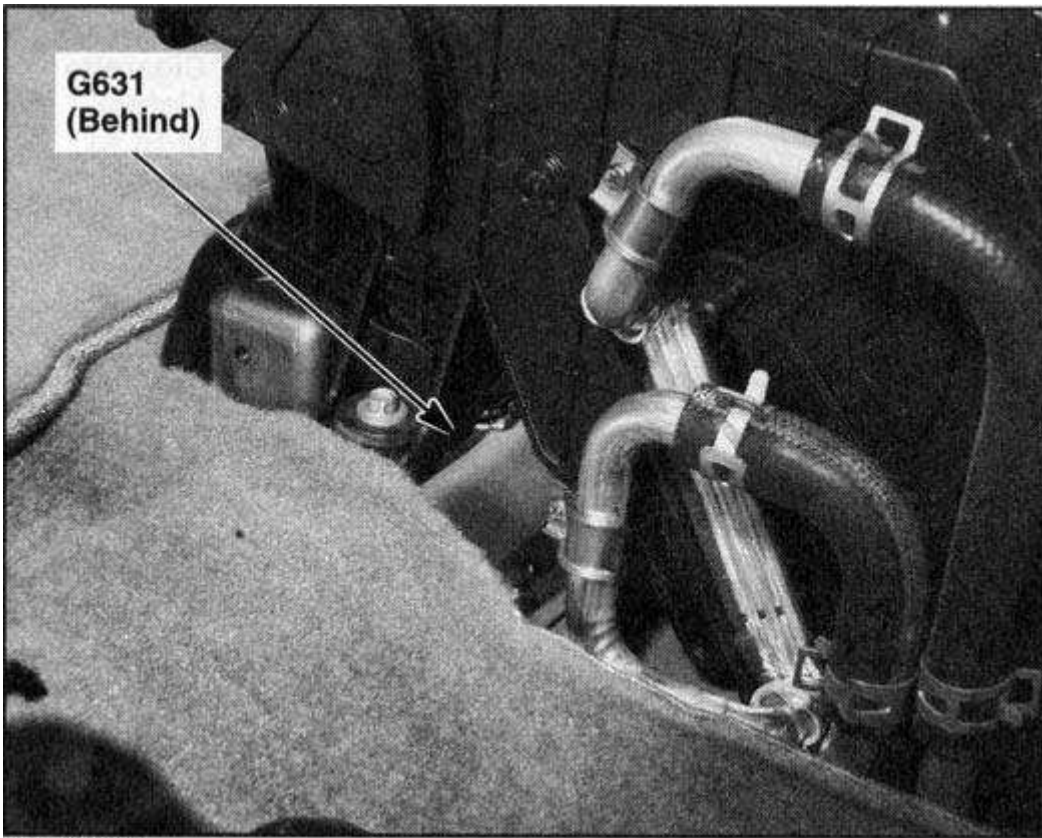

G00267913


Fig. 55: Under Rear Center Console Panel
Courtesy of AMERICAN HONDA MOTOR CO., INC.

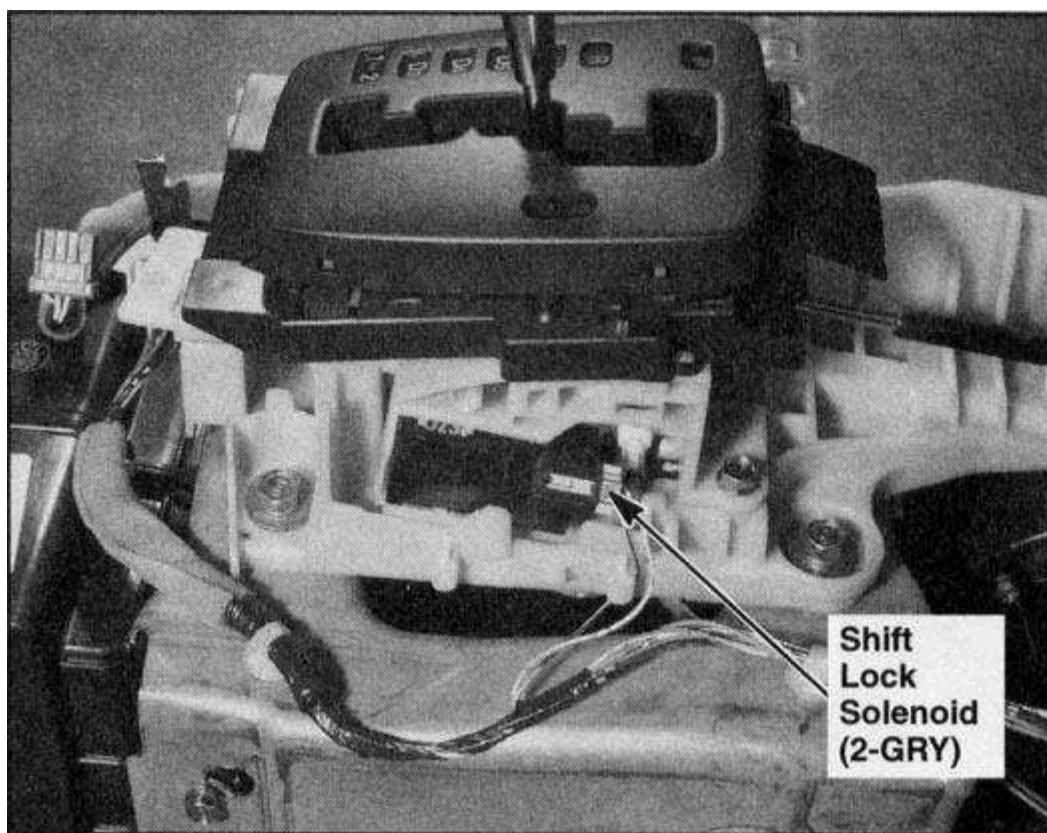

G00267914

Fig. 56: Behind Center Console Panel


Courtesy of AMERICAN HONDA MOTOR CO., INC.

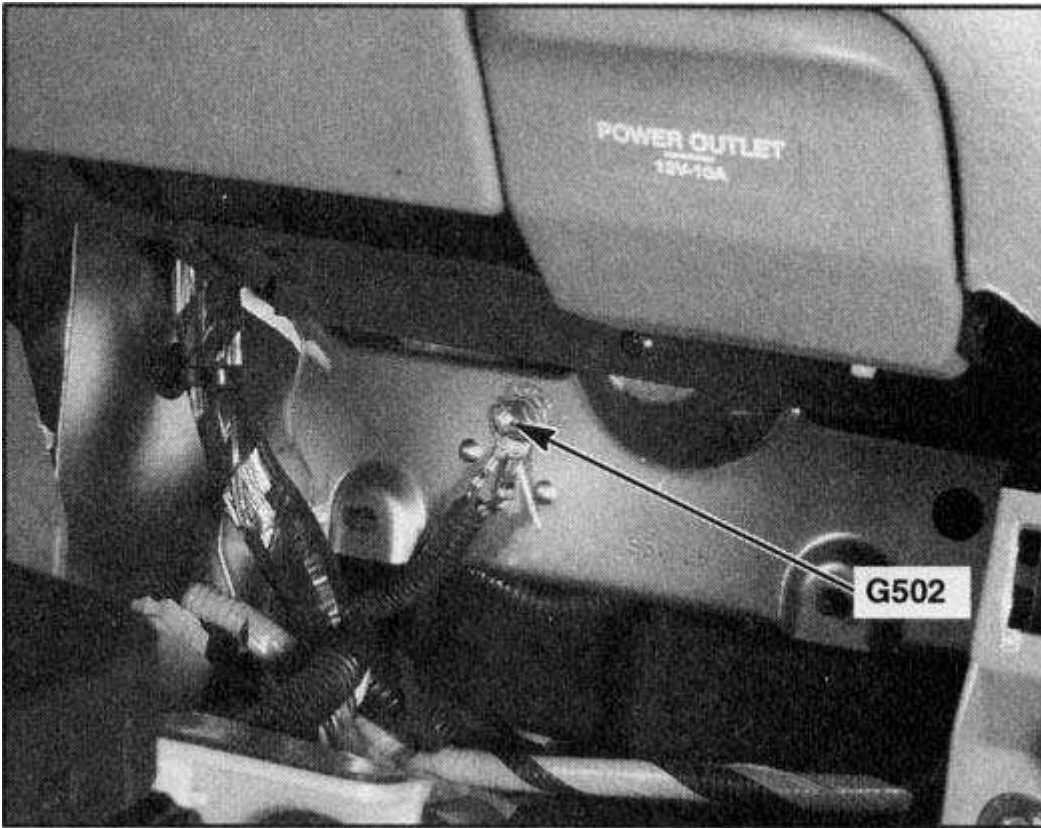

G00267915

Fig. 57: Under Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

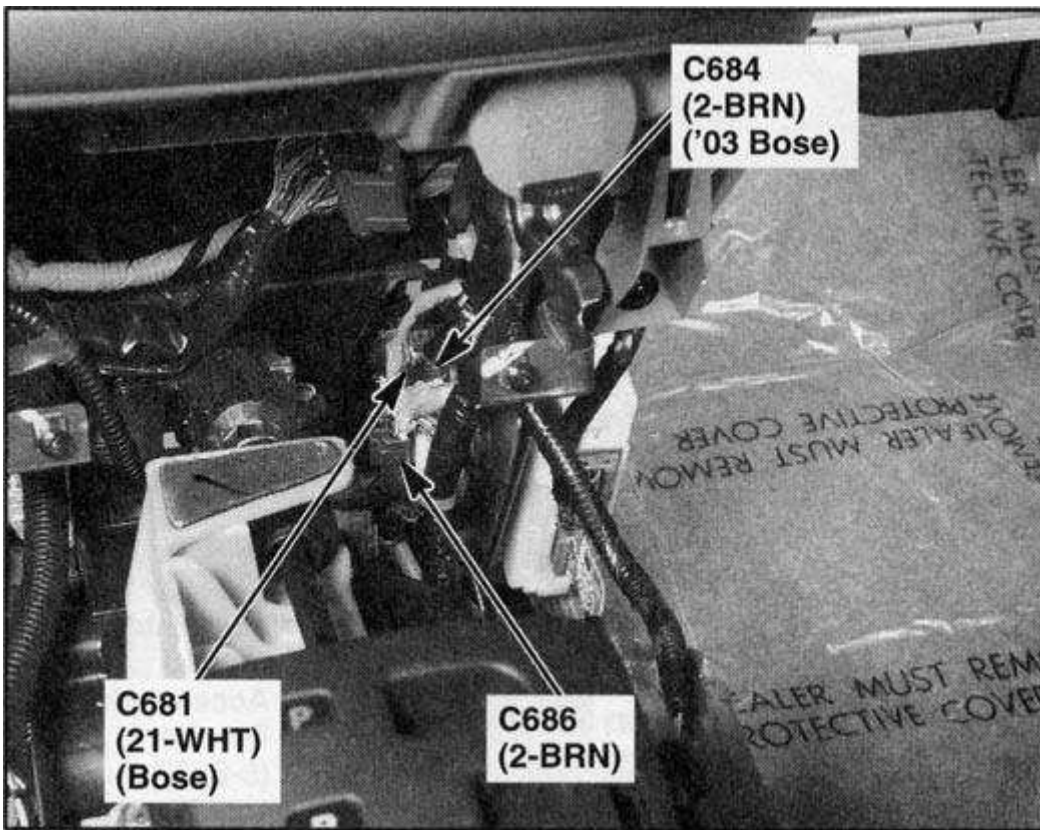

G00267916

Fig. 58: Under Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

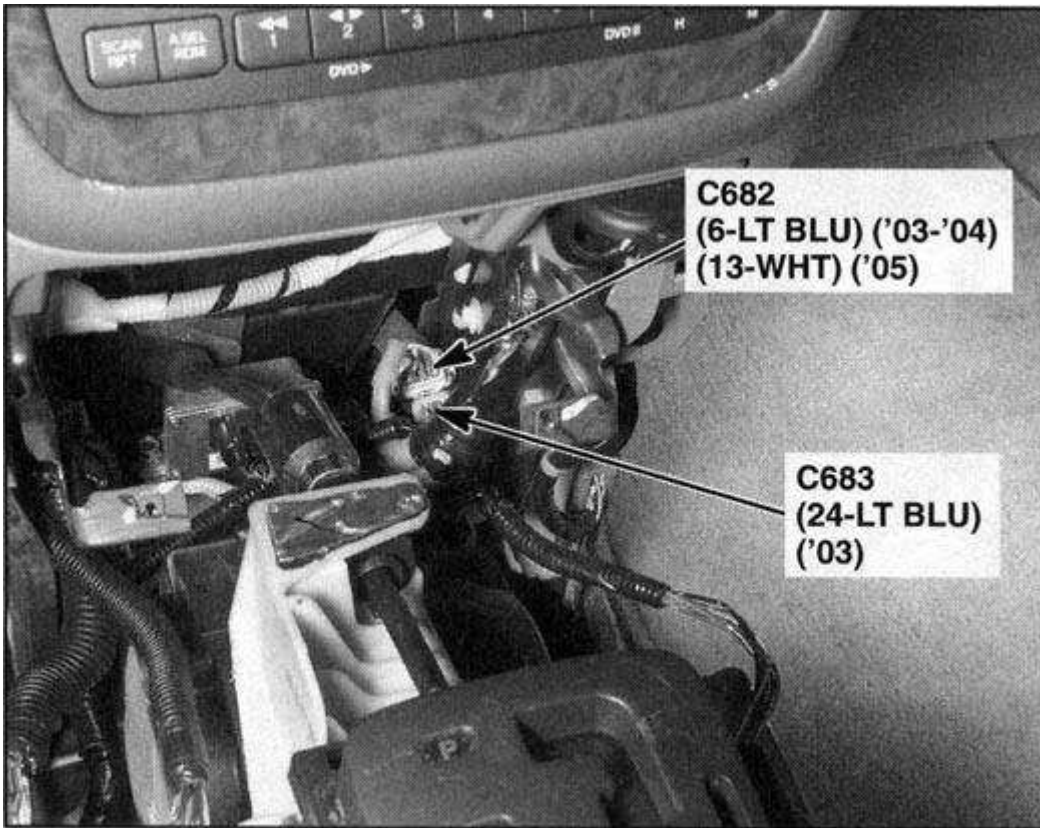

G00360314


Fig. 59: Under Middle Of Dash (Navigation)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

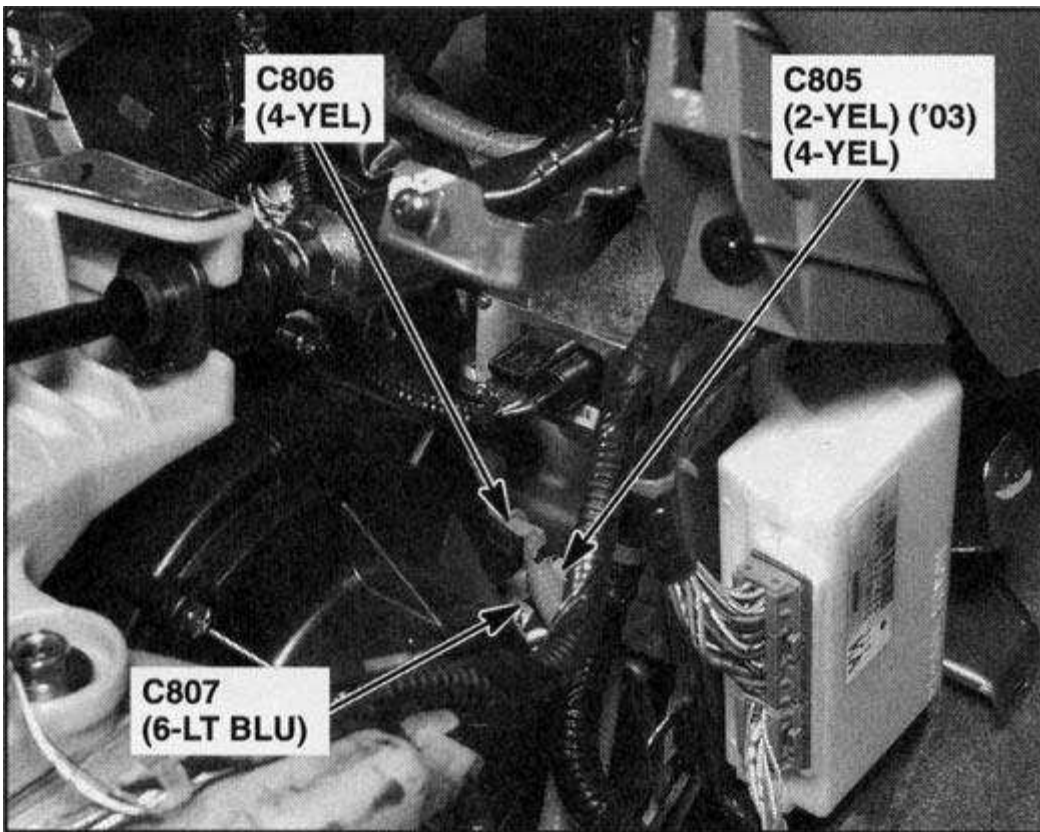


G00267918

Fig. 60: Under Center Console
Courtesy of AMERICAN HONDA MOTOR CO., INC.

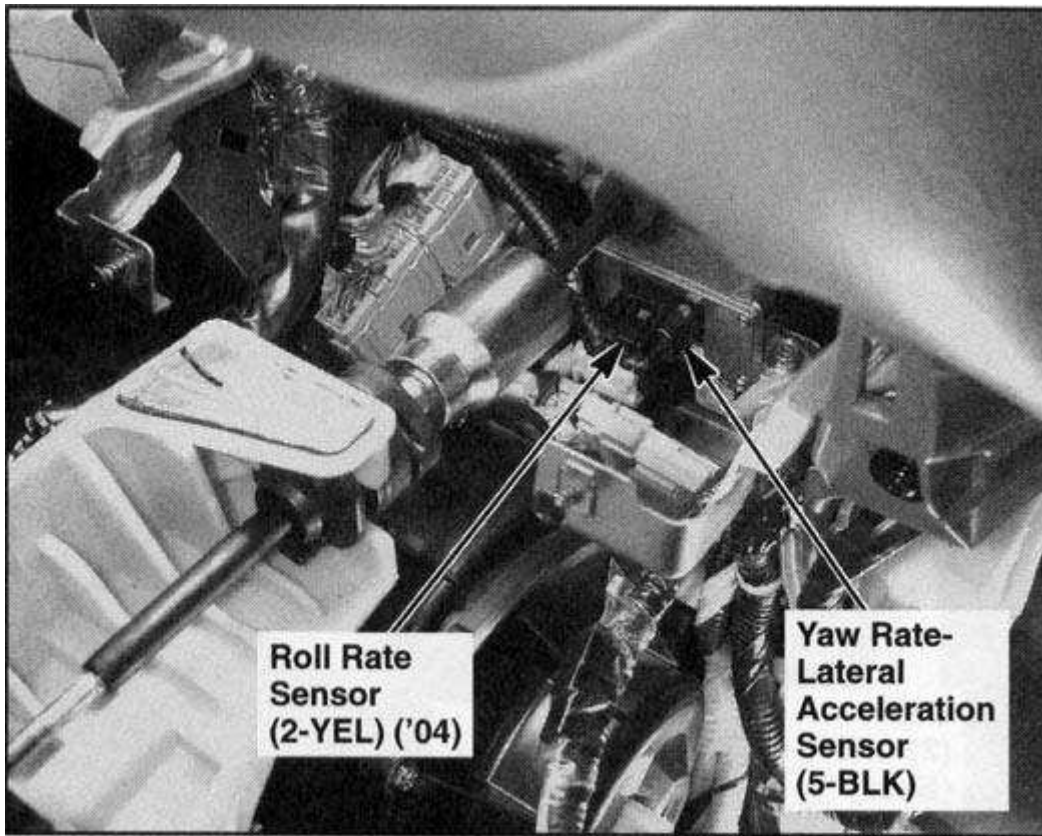

G00267919

Fig. 61: Under Middle Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

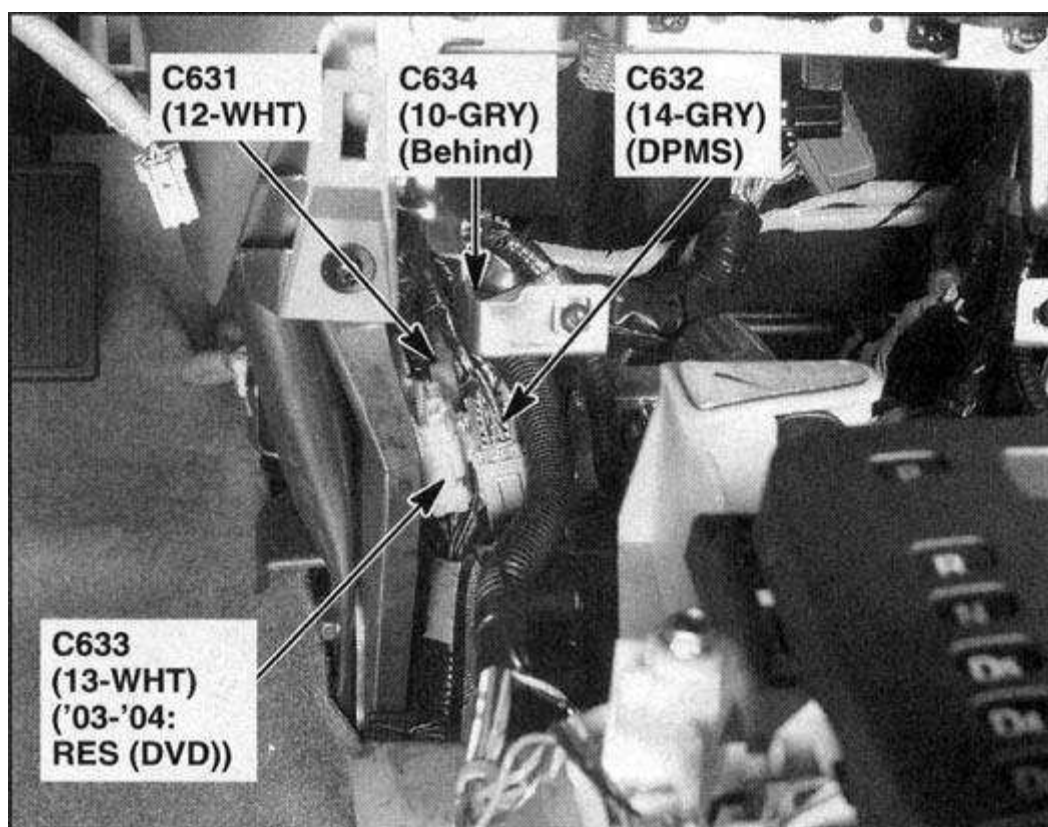

G00360315

Fig. 62: Under Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00267928

Fig. 63: Middle Of Dash (Navigation)


Courtesy of AMERICAN HONDA MOTOR CO., INC.

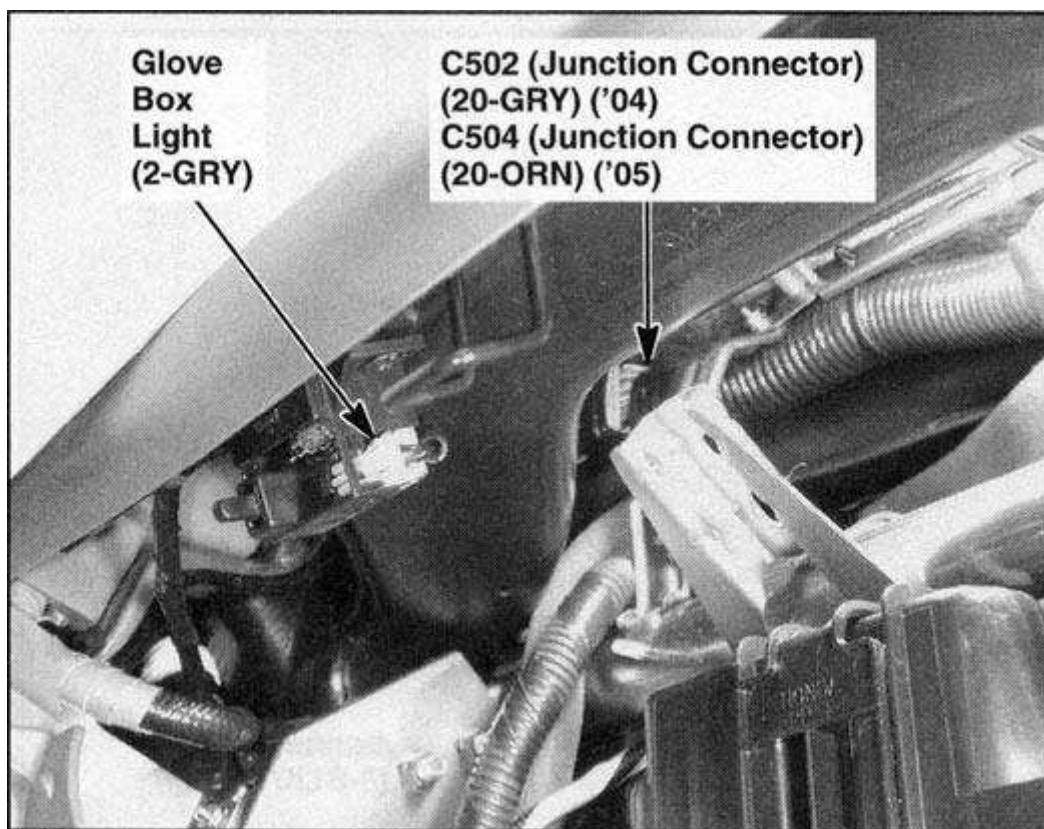

G00360316

Fig. 64: Behind Glove Box


Courtesy of AMERICAN HONDA MOTOR CO., INC.

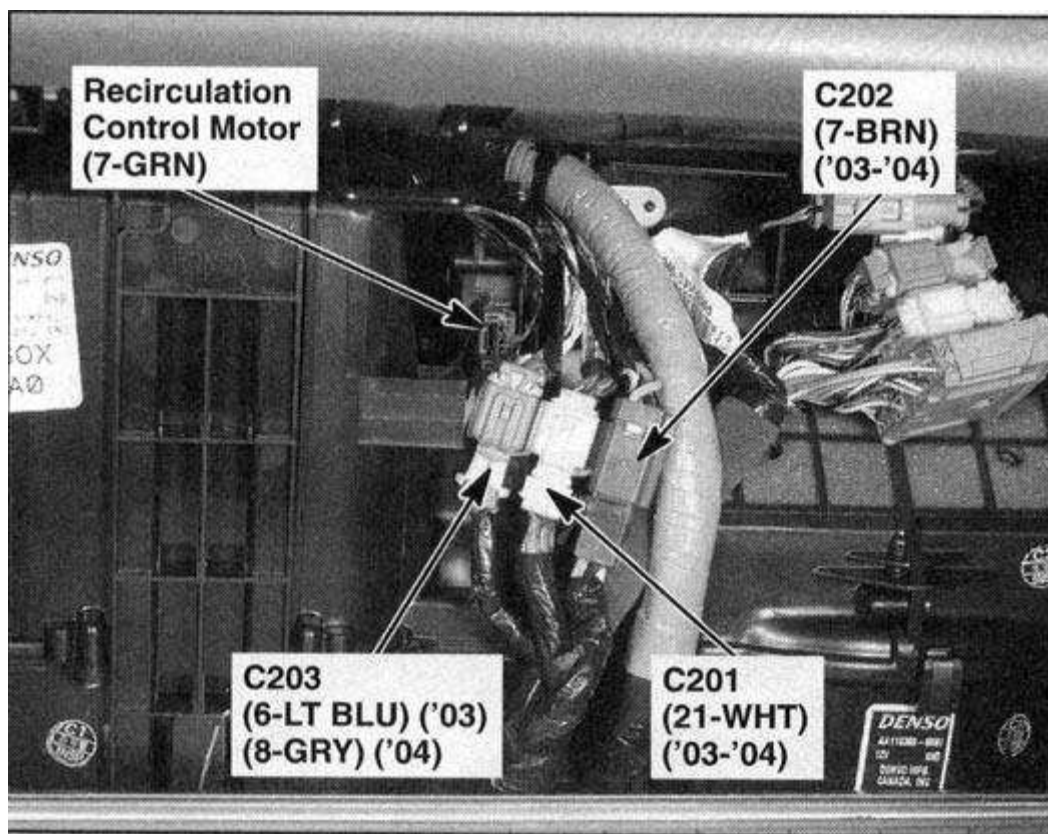

G00360317

Fig. 65: Behind Glove Box


Courtesy of AMERICAN HONDA MOTOR CO., INC.

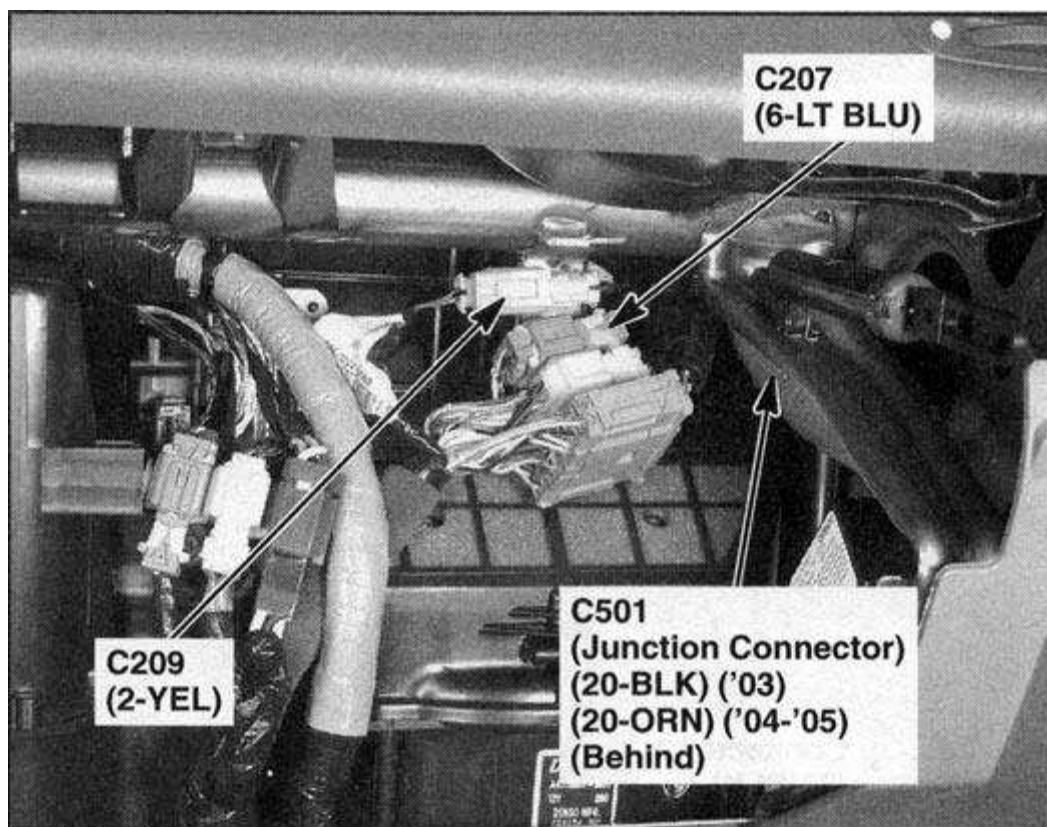

G00360318

Fig. 66: Behind Glove Box


Courtesy of AMERICAN HONDA MOTOR CO., INC.

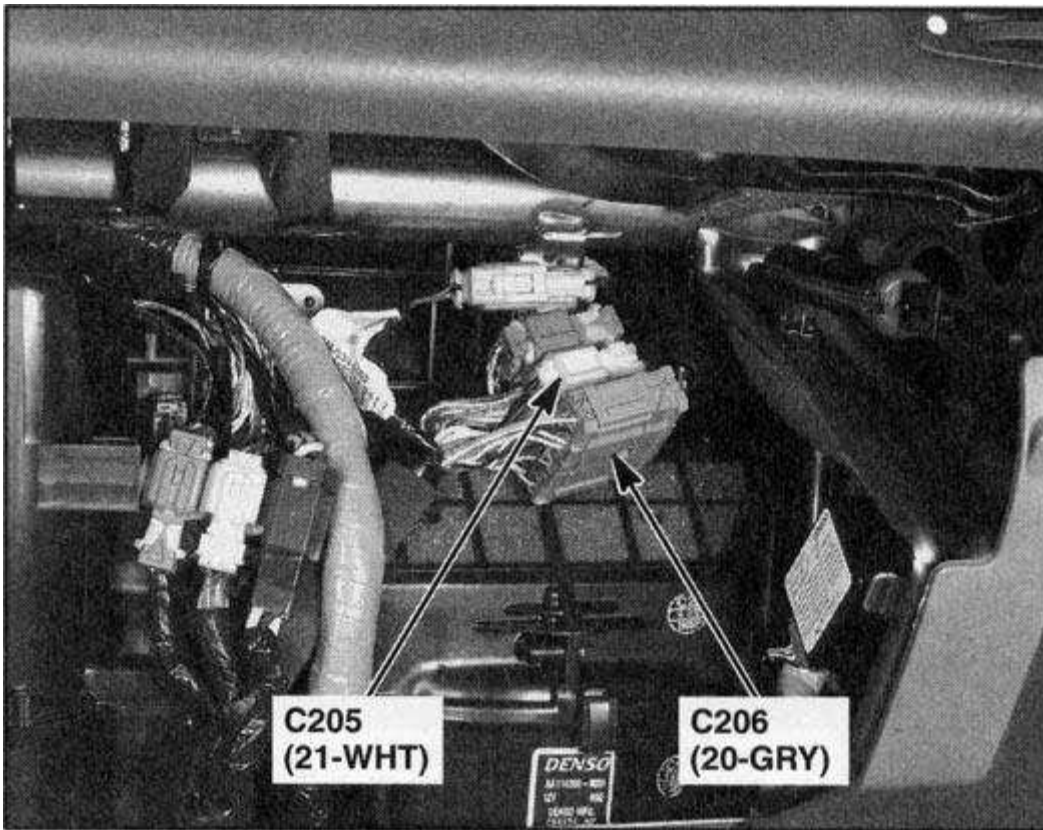

G00267933

Fig. 67: Behind Glove Box


Courtesy of AMERICAN HONDA MOTOR CO., INC.

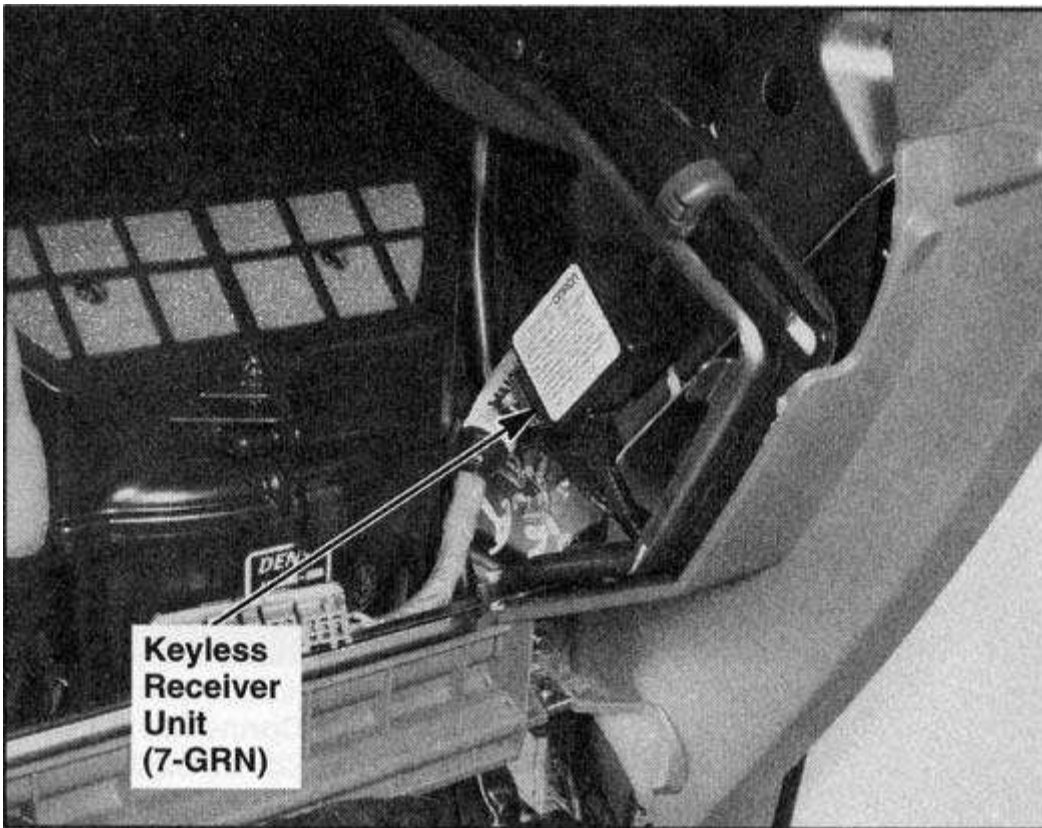

G00267934

Fig. 68: Behind Glove Box


Courtesy of AMERICAN HONDA MOTOR CO., INC.

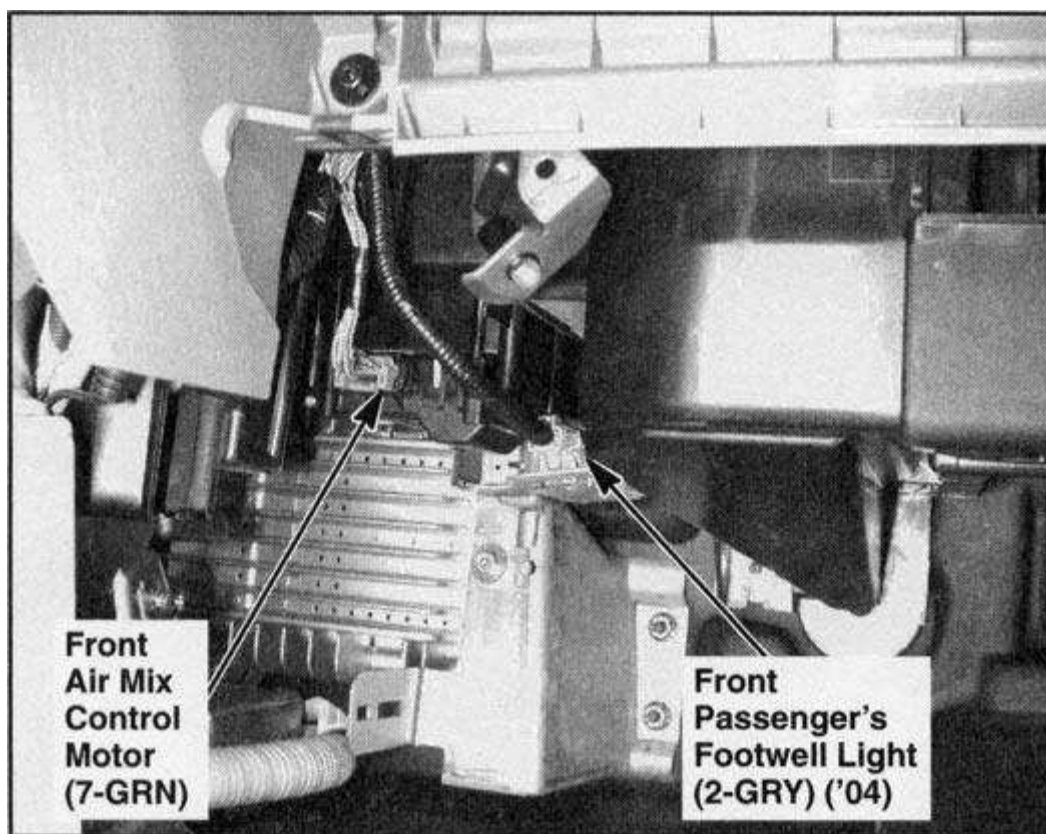

G00267935

Fig. 69: Under Right Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

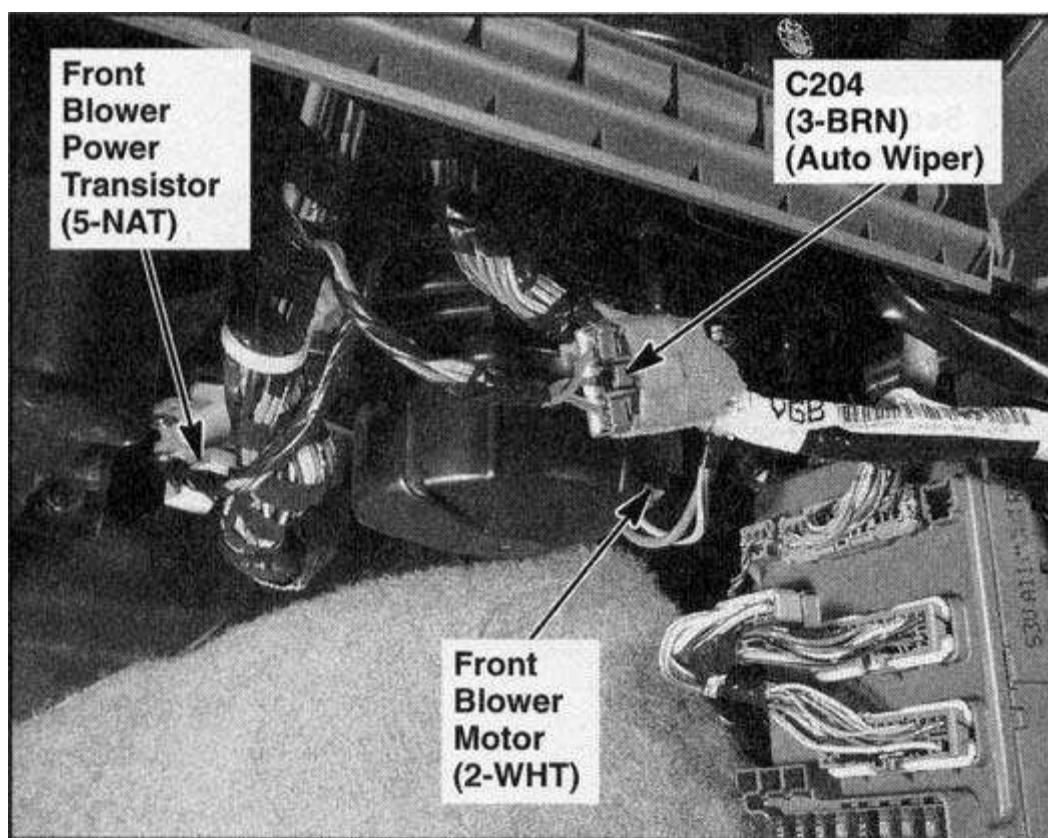

G00267936

Fig. 70: Under Right Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

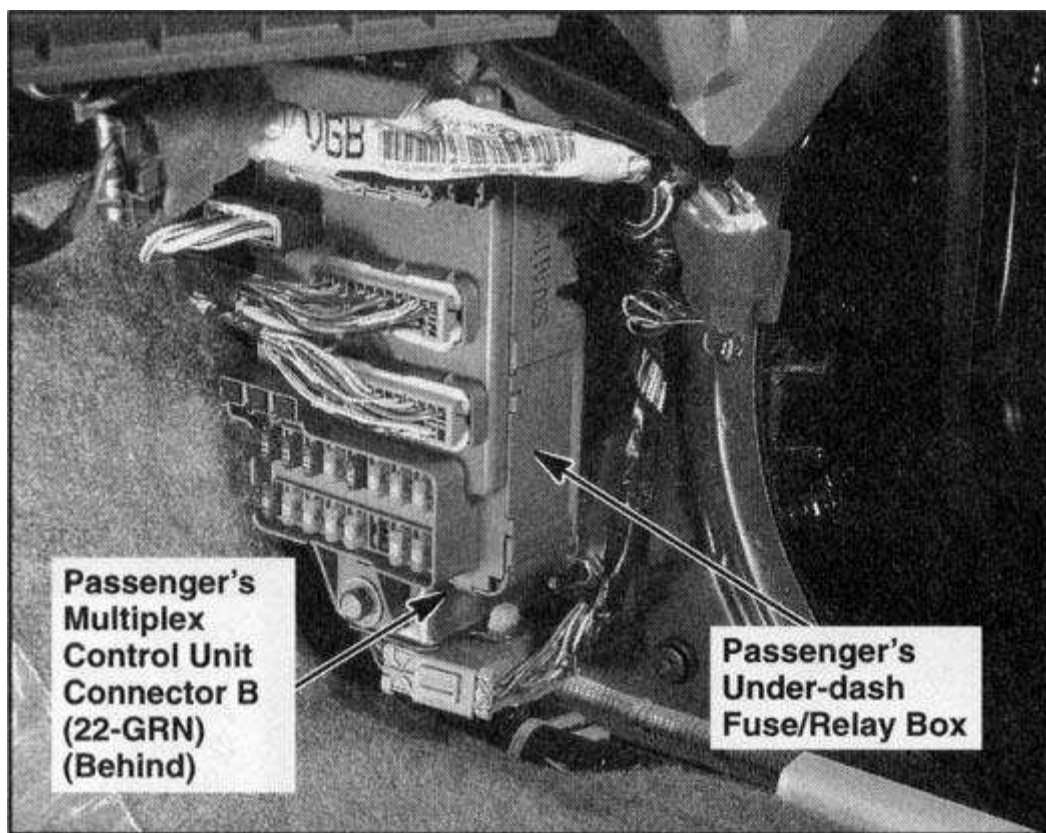

G00267937

Fig. 71: Behind Right Kick Panel


Courtesy of AMERICAN HONDA MOTOR CO., INC.

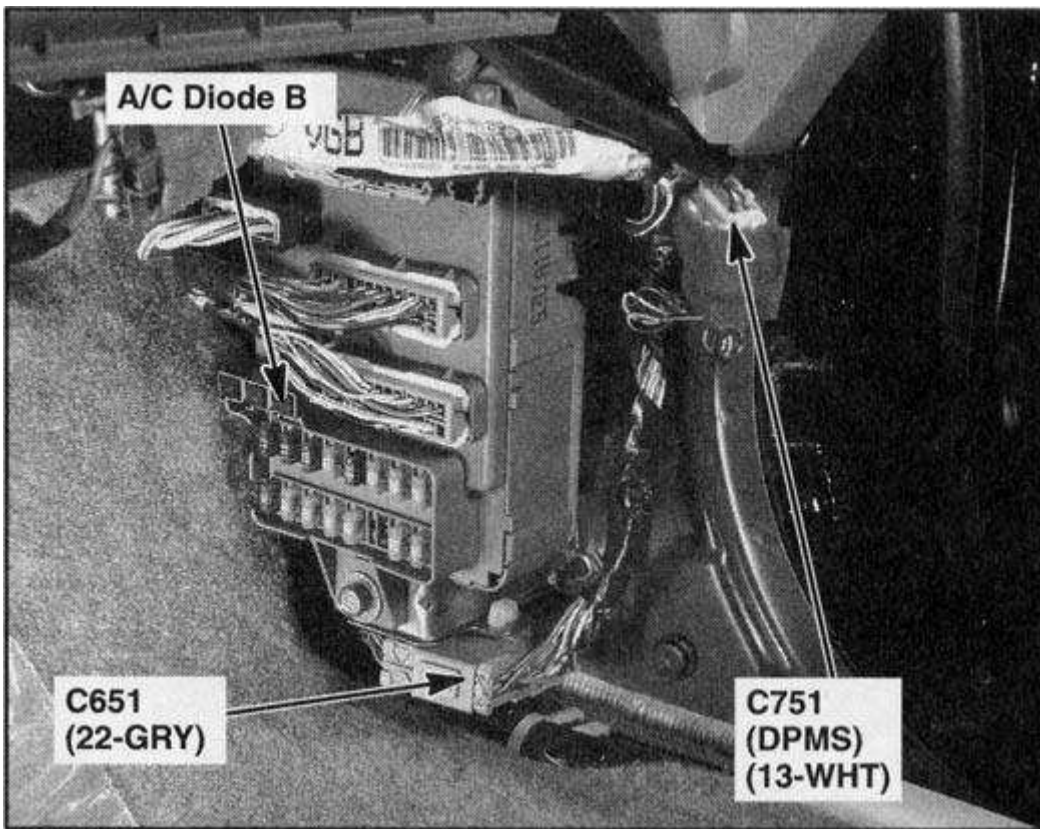

G00267938

Fig. 72: Behind Right Kick Panel


Courtesy of AMERICAN HONDA MOTOR CO., INC.

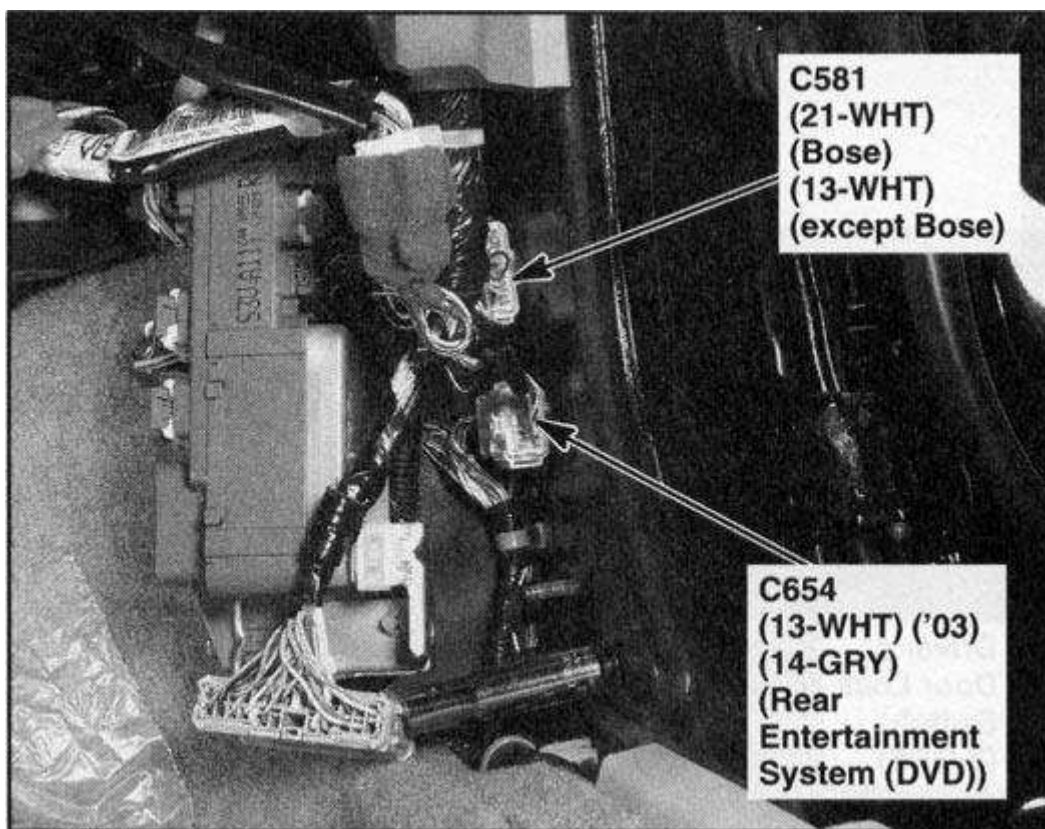

G00267939

Fig. 73: Behind Right Kick Panel


Courtesy of AMERICAN HONDA MOTOR CO., INC.

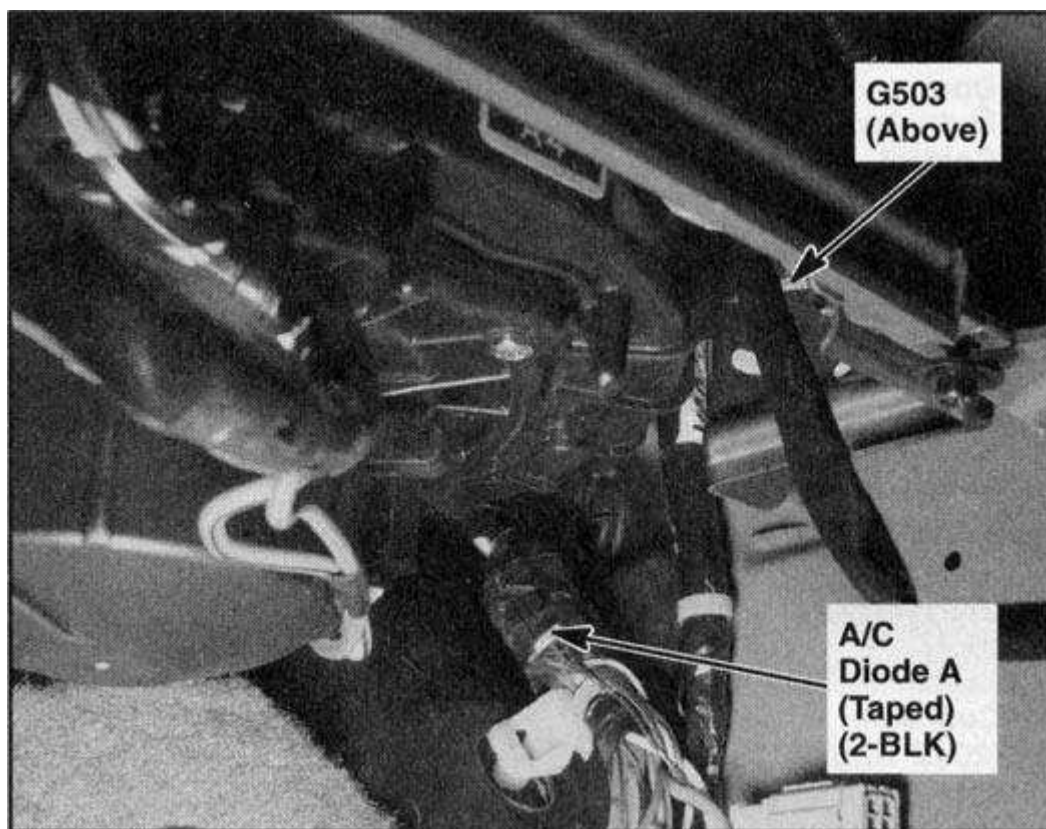

G00267940

Fig. 74: Under Right Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

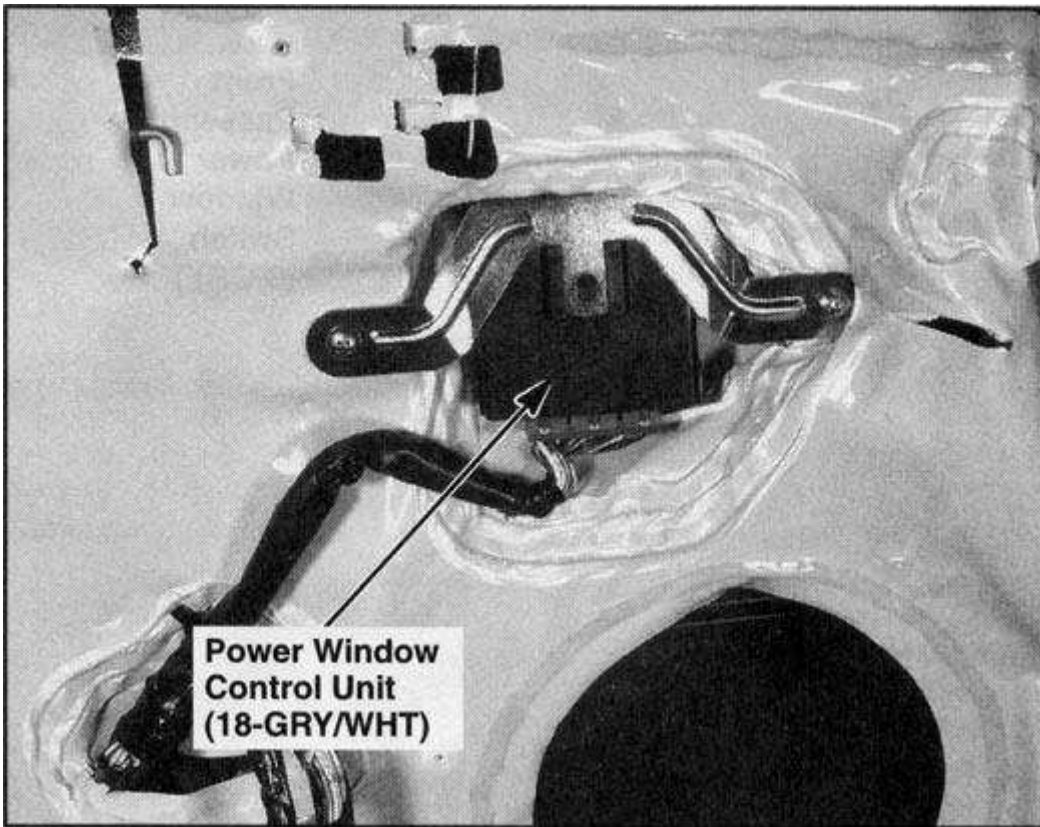

G00267950

Fig. 75: Driver's Door


Courtesy of AMERICAN HONDA MOTOR CO., INC.

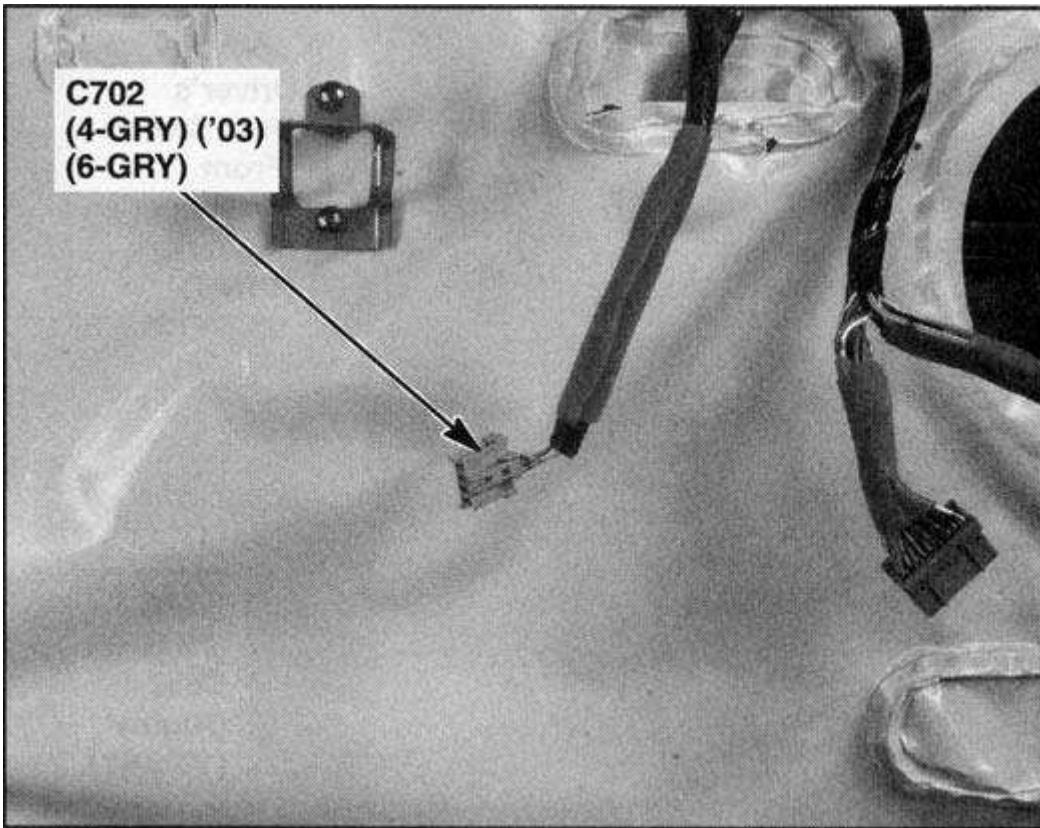

G00267951

Fig. 76: Driver's Door


Courtesy of AMERICAN HONDA MOTOR CO., INC.

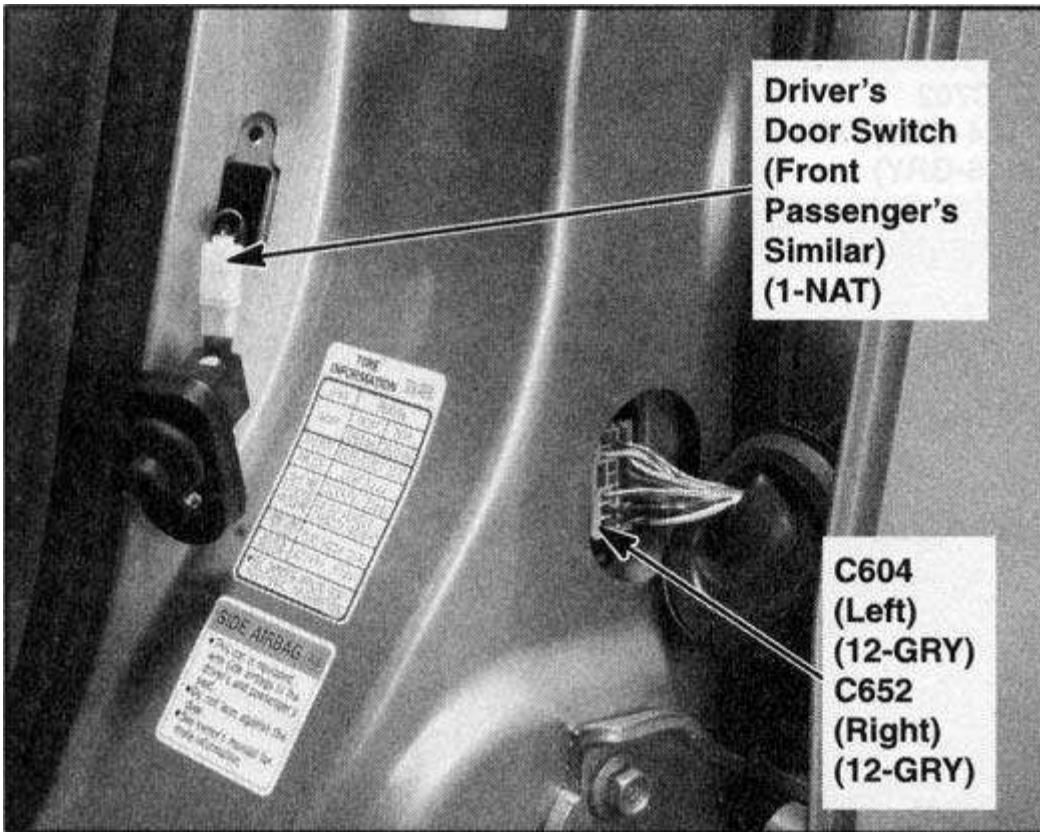

G00267954


Fig. 77: Left "B" Pillar (Right Similar)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

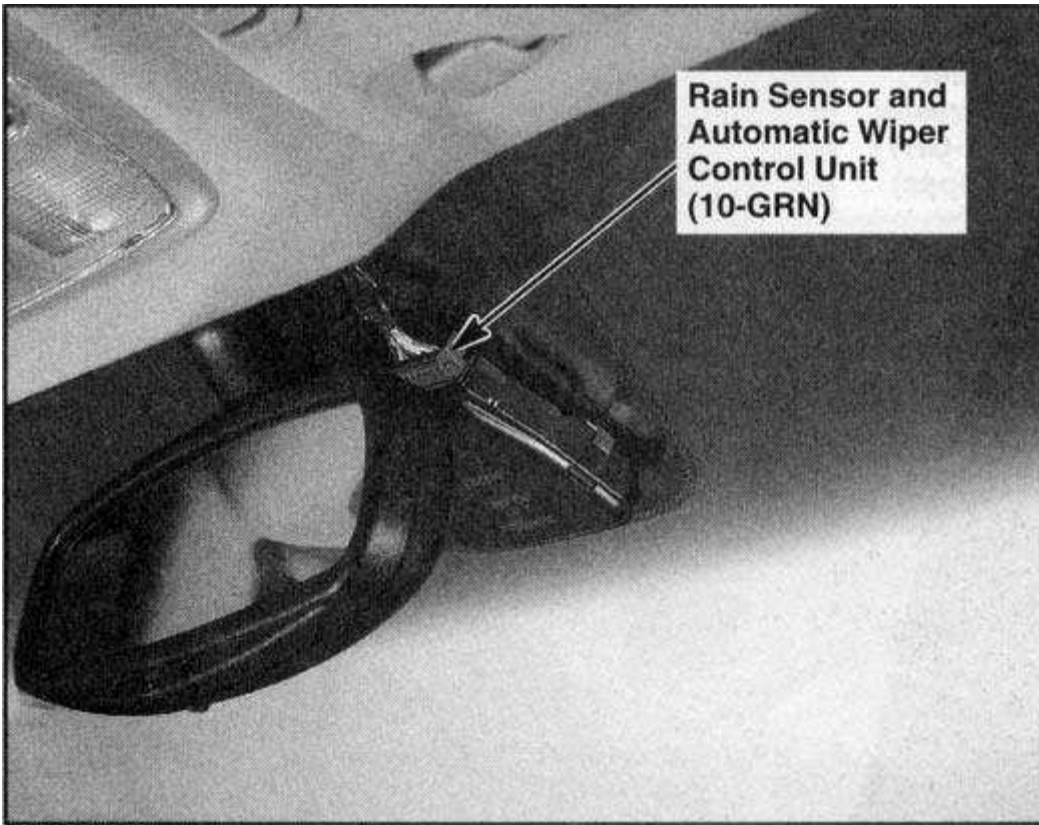

G00267874


Fig. 78: Front Middle Of Roof (Auto Wiper)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

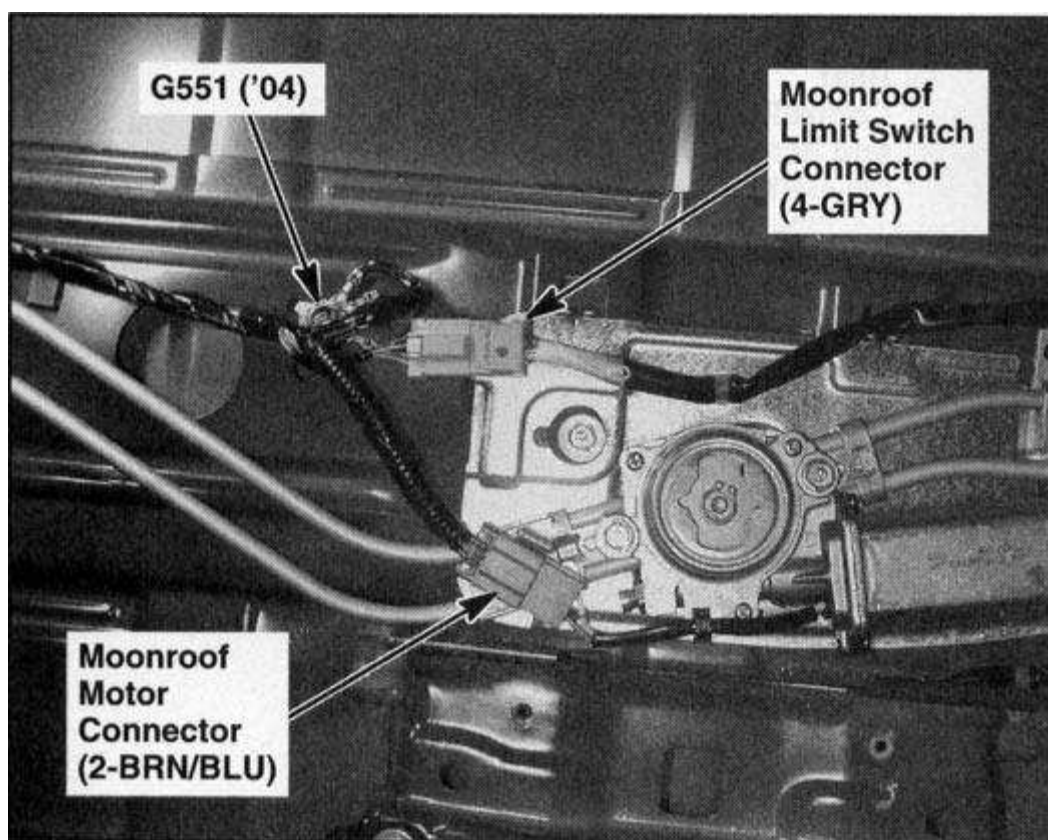

G00267876


Fig. 79: Middle Of Roof

Courtesy of AMERICAN HONDA MOTOR CO., INC.

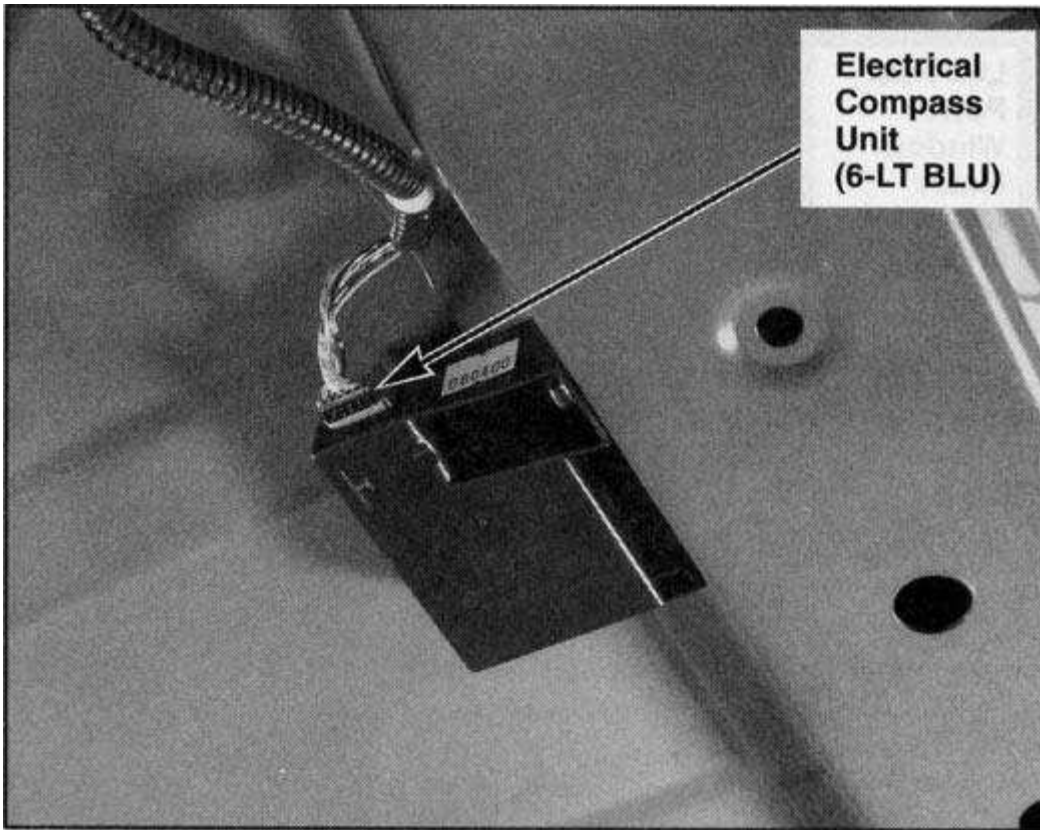

G00267877


Fig. 80: Middle Of Roof (Except Navigation)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

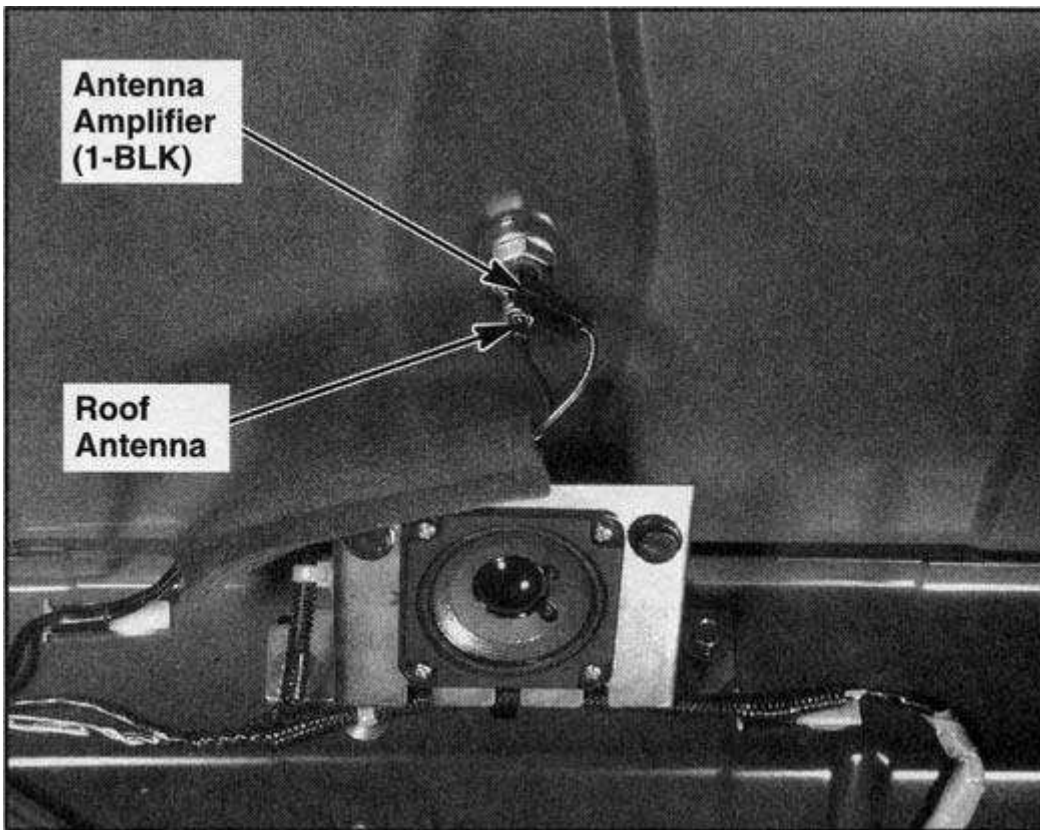

G00267878

Fig. 81: Rear Middle Of Roof


Courtesy of AMERICAN HONDA MOTOR CO., INC.

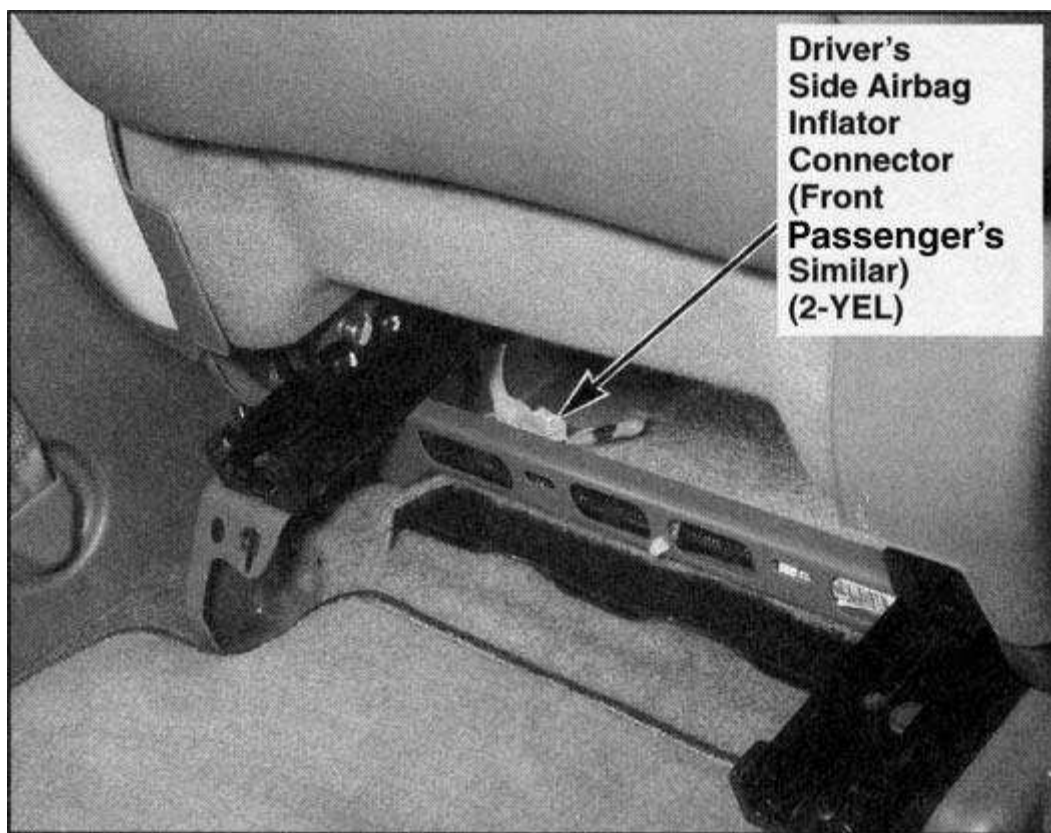

G00267879


Fig. 82: Behind Driver's Seat (Front Passenger's Similar)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

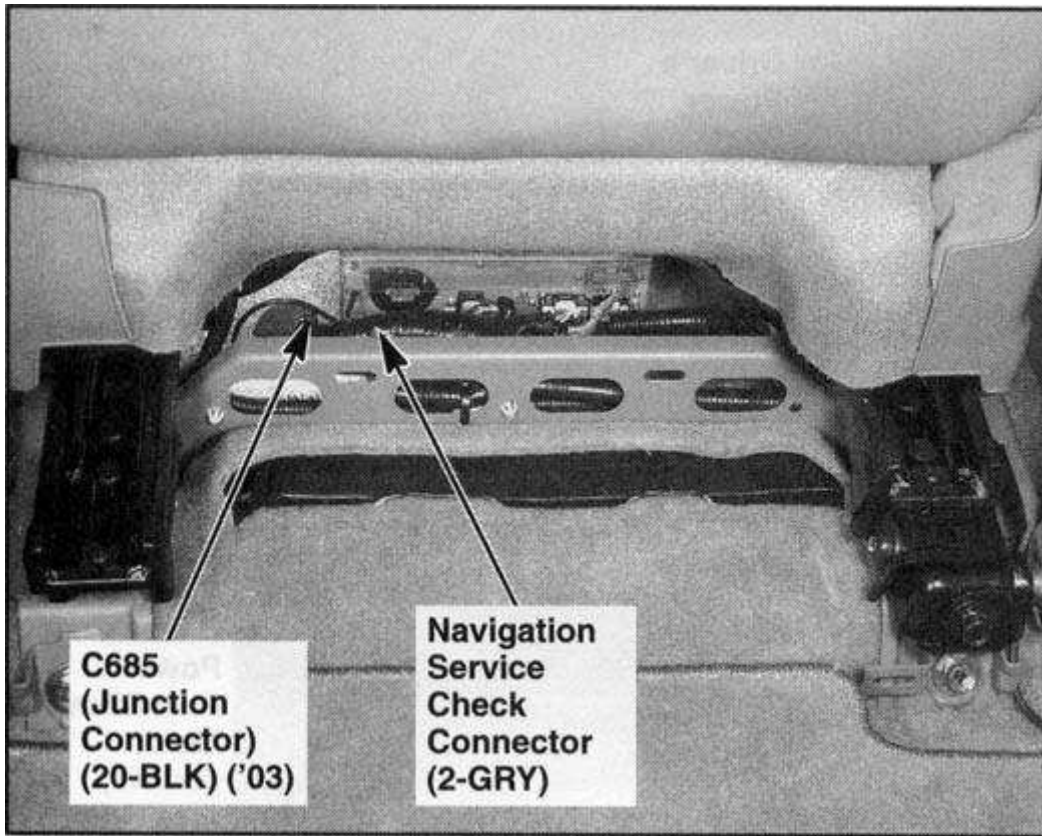


G00267881

Fig. 83: Under Front Passenger's Seat (Navigation)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

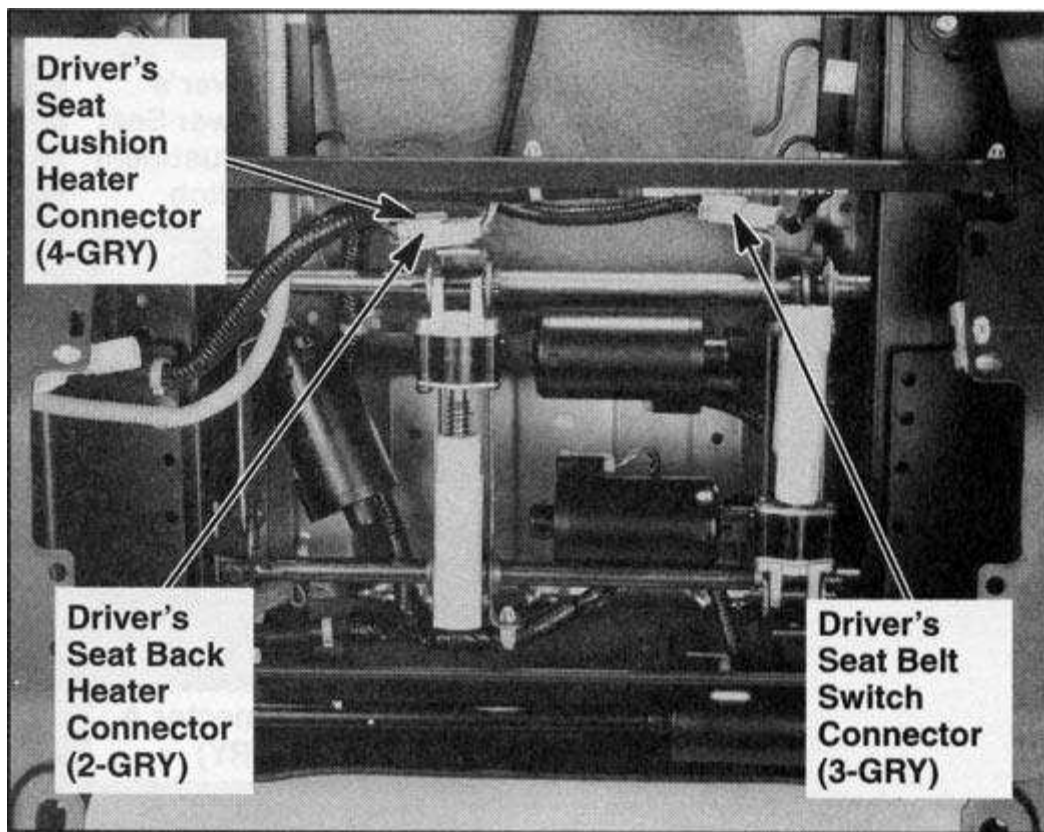


G00267882

Fig. 84: Under Driver's Seat (Except DPMS)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

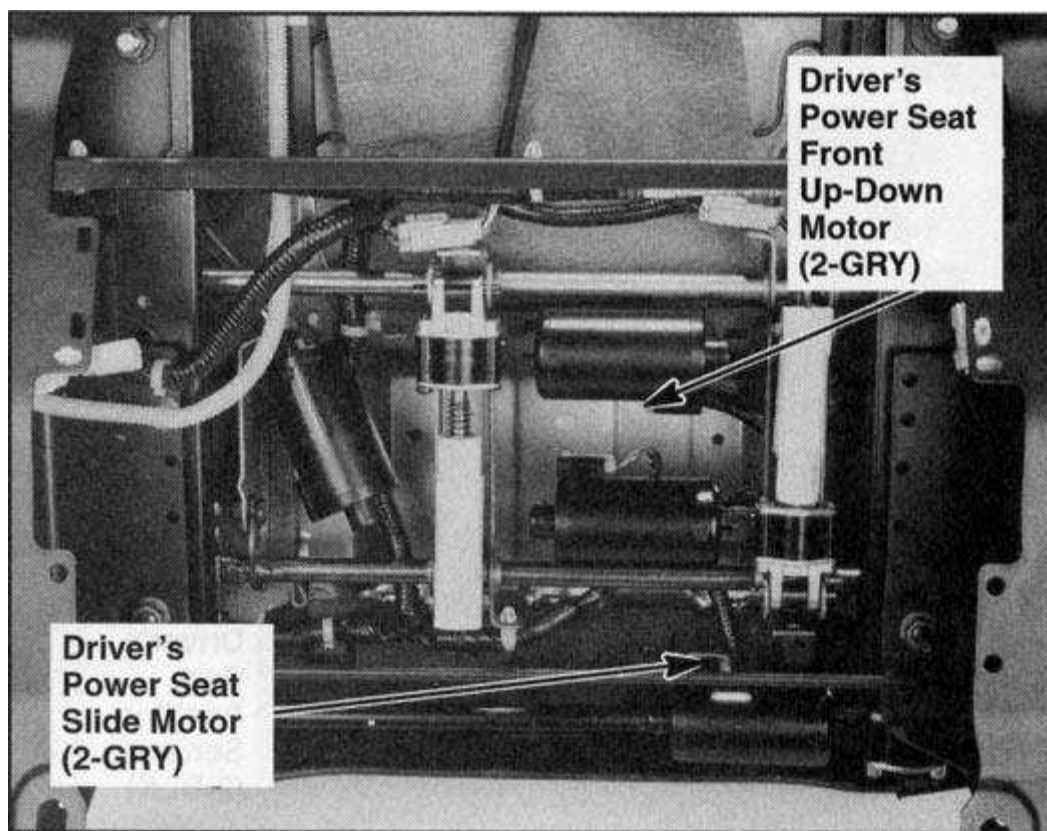

G00267884


Fig. 85: Under Driver's Seat (Except DPMS)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

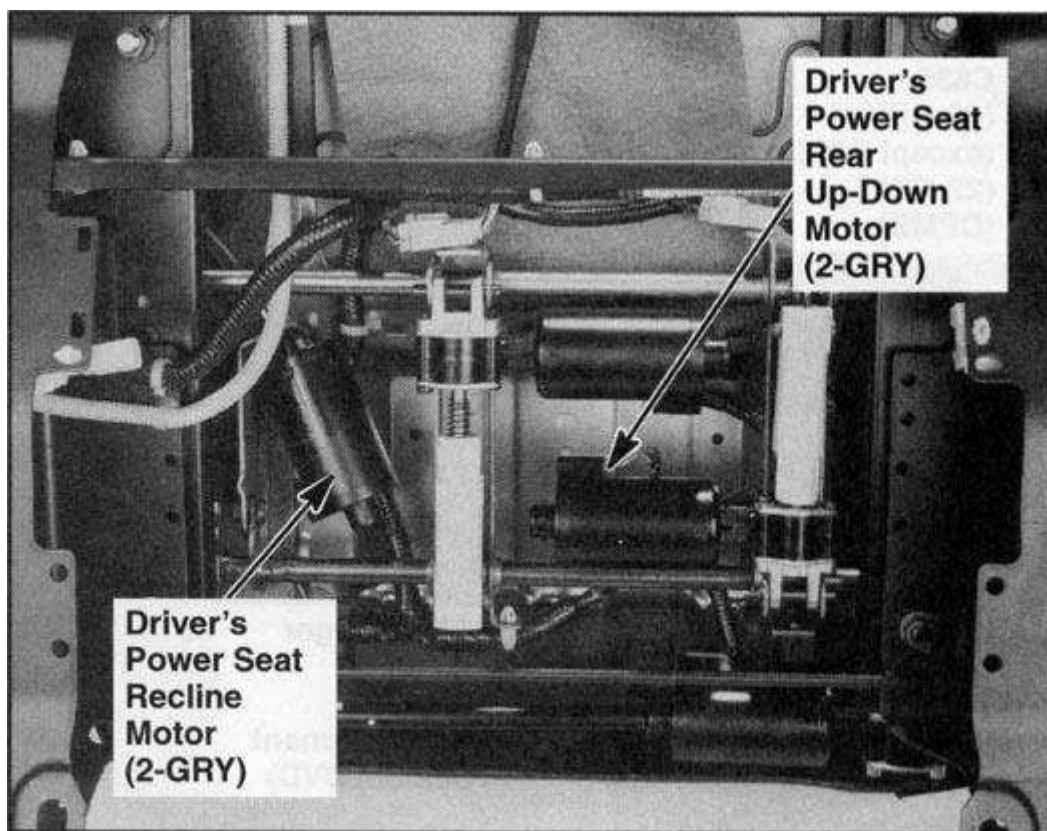

G00267904


Fig. 86: Under Driver's Seat (Except DPMS)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

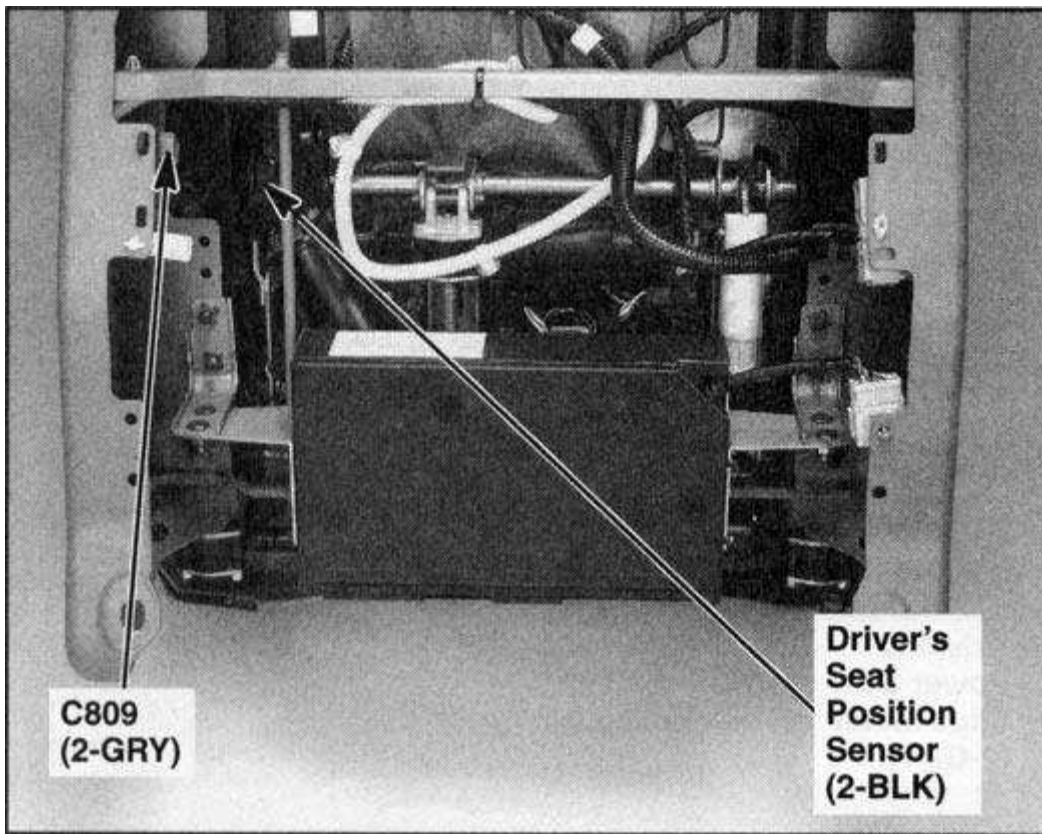


G00267907

Fig. 87: Under Driver's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

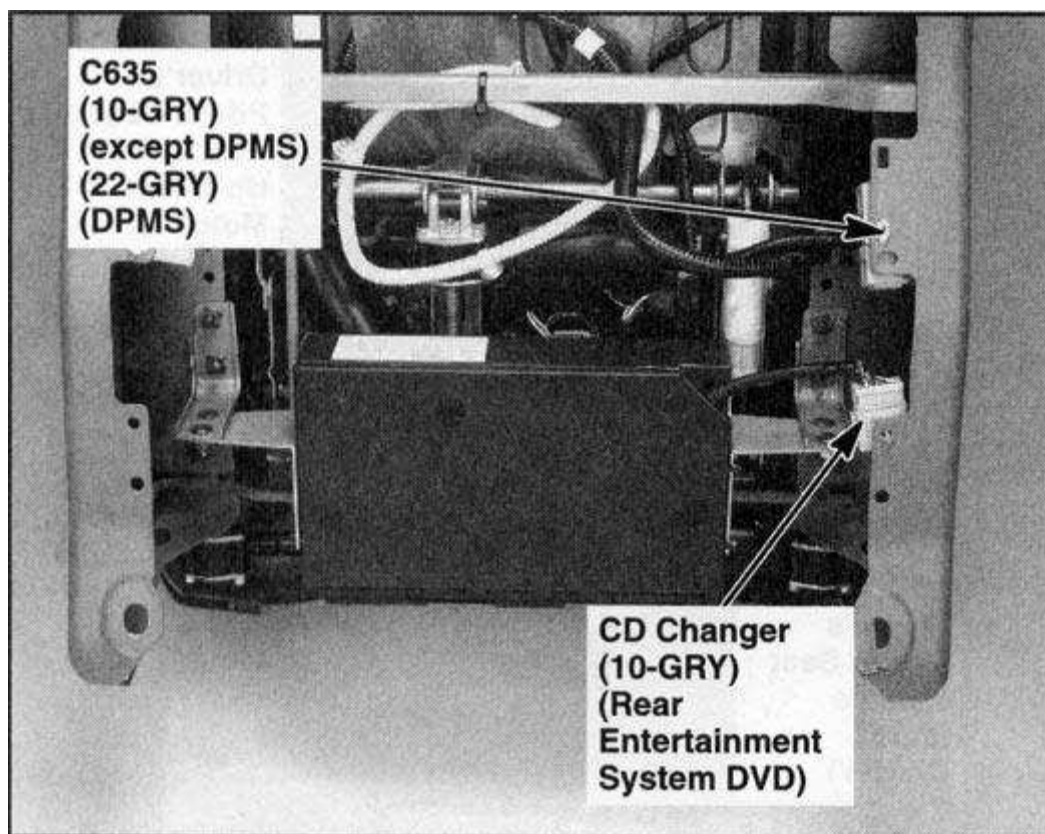


G00267908

Fig. 88: Under Driver's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

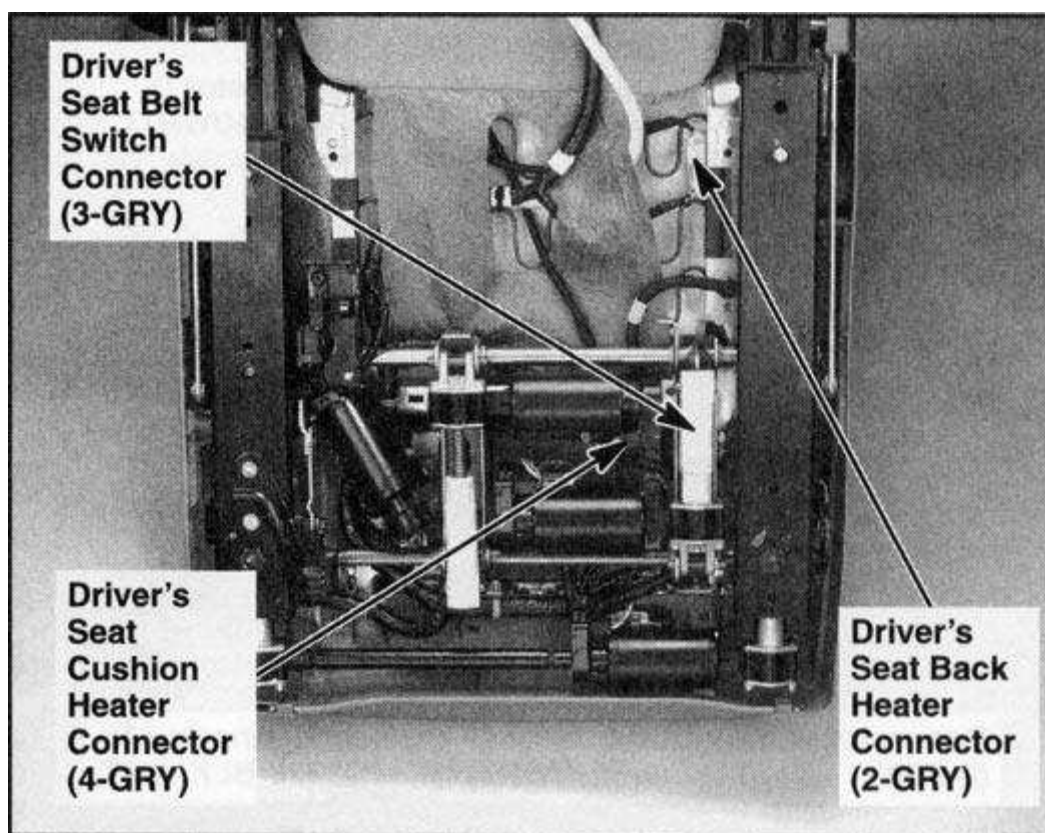

G00267922


Fig. 89: Under Driver's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

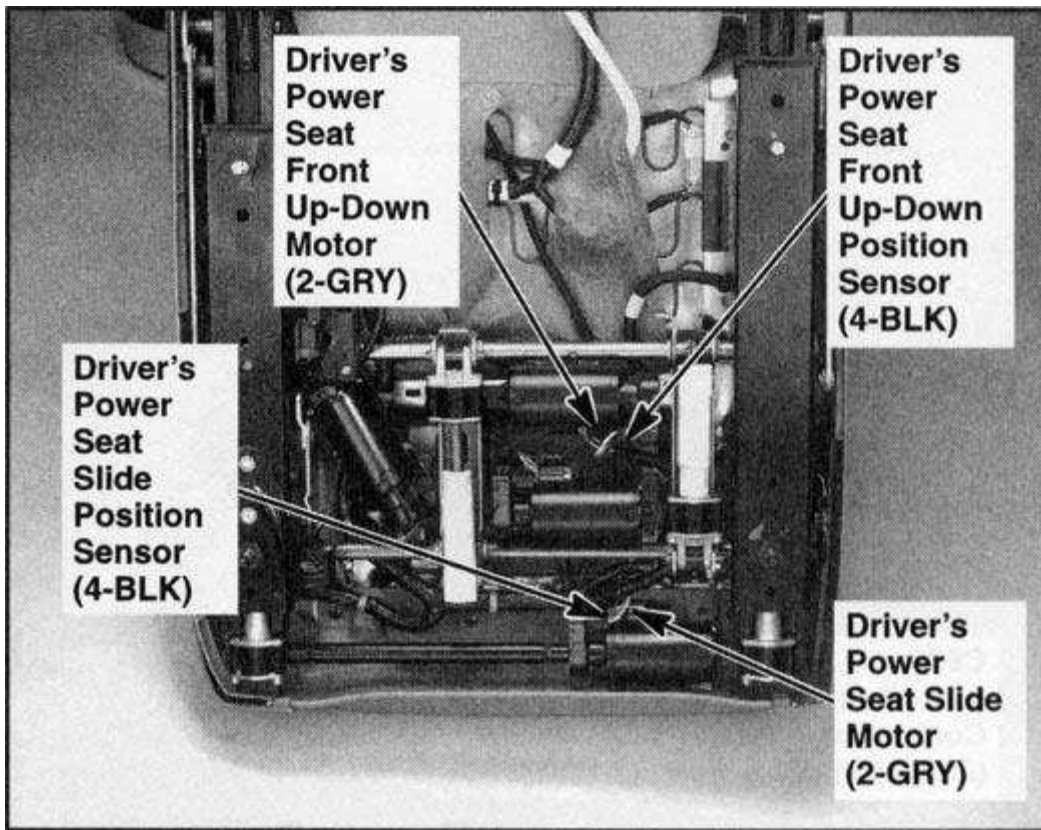

G00267923

Fig. 90: Under Driver's Seat (DPMS)


Courtesy of AMERICAN HONDA MOTOR CO., INC.

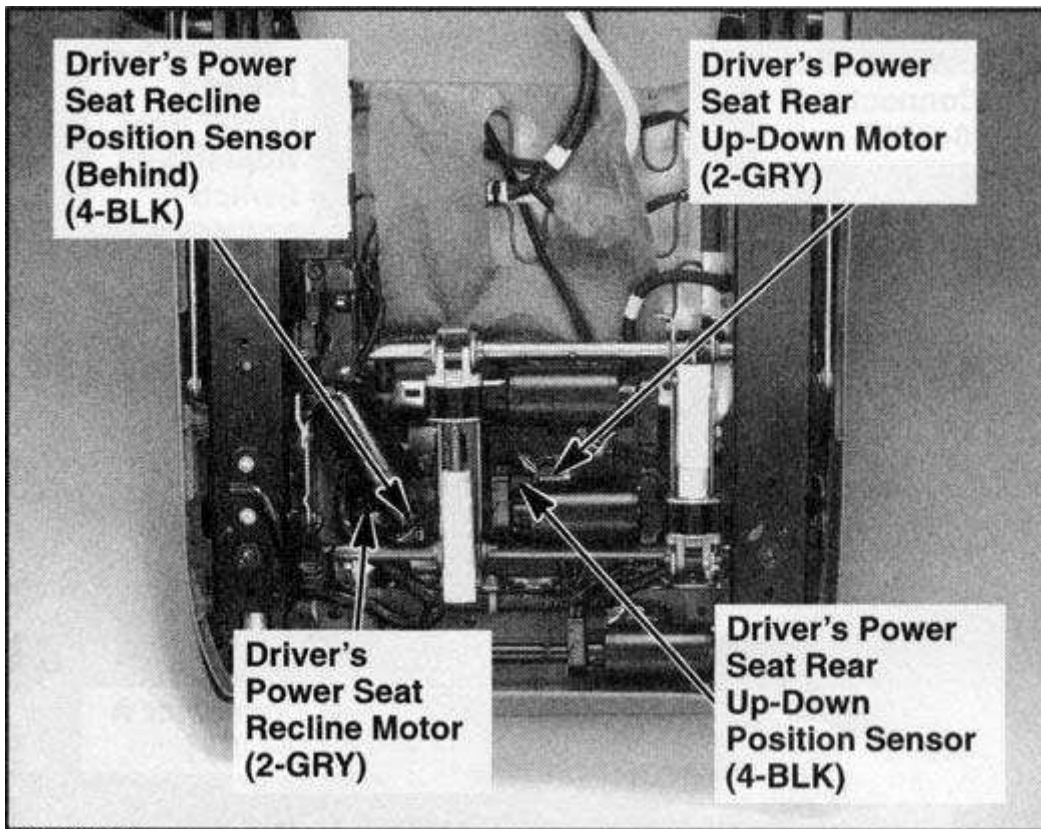

G00267924

Fig. 91: Under Driver's Seat (DPMS)


Courtesy of AMERICAN HONDA MOTOR CO., INC.

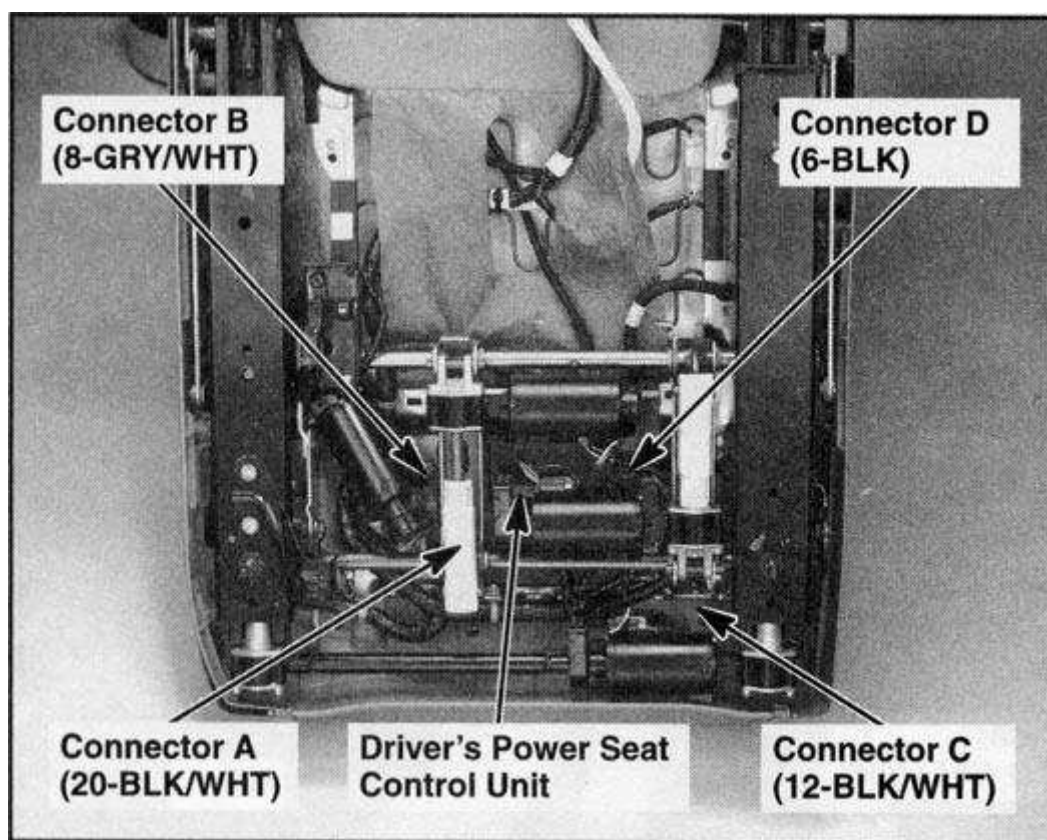

G00267925


Fig. 92: Under Driver's Seat (DPMS)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

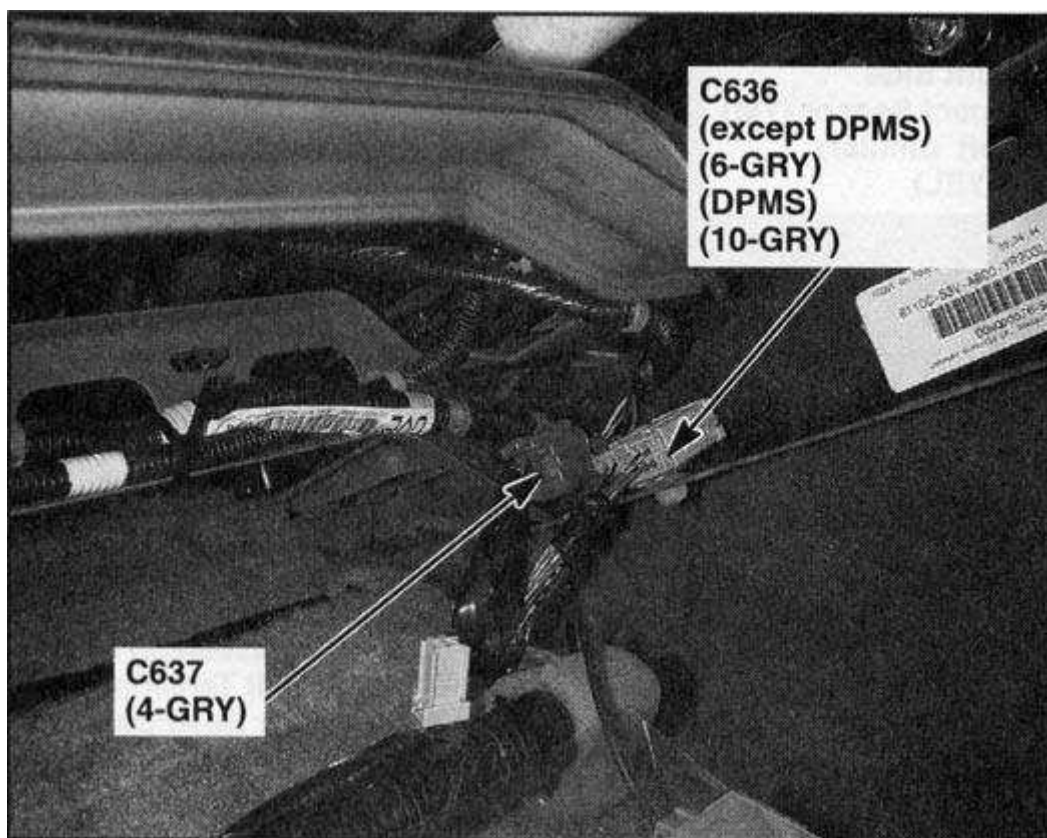


G00267926

Fig. 93: Under Front Passenger's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

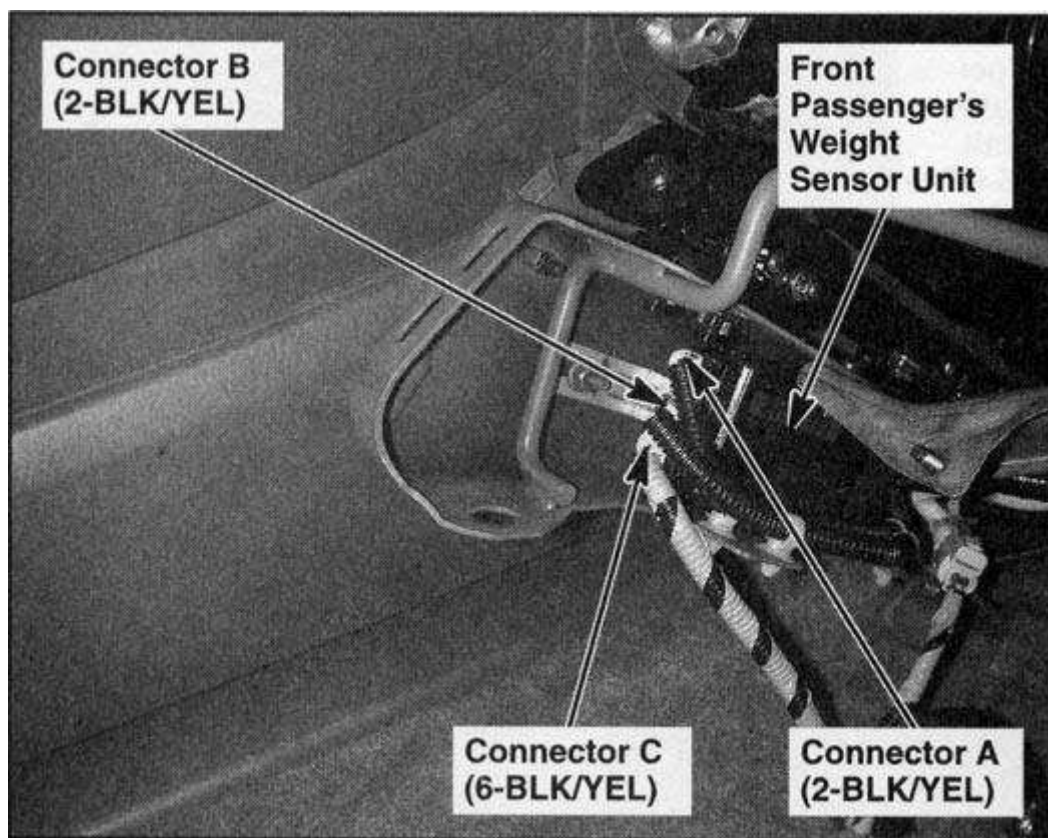


G00267927

Fig. 94: Under Front Passenger's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

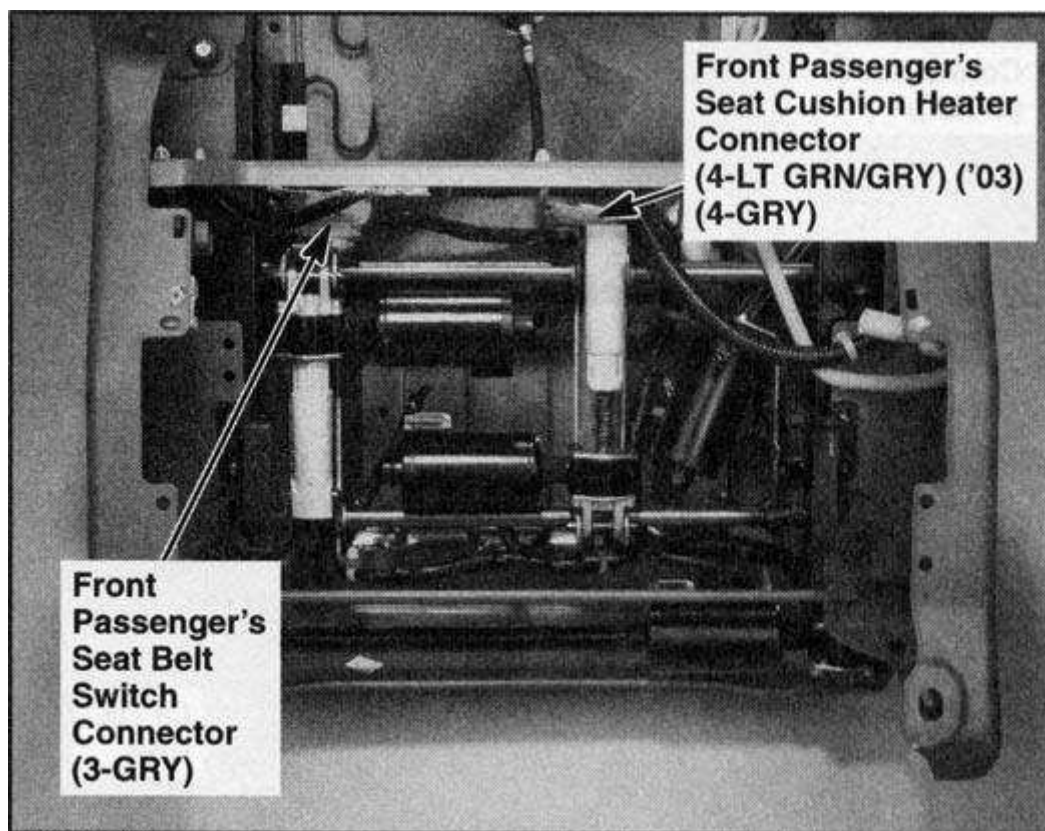


G00267941

Fig. 95: Under Front Passenger's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

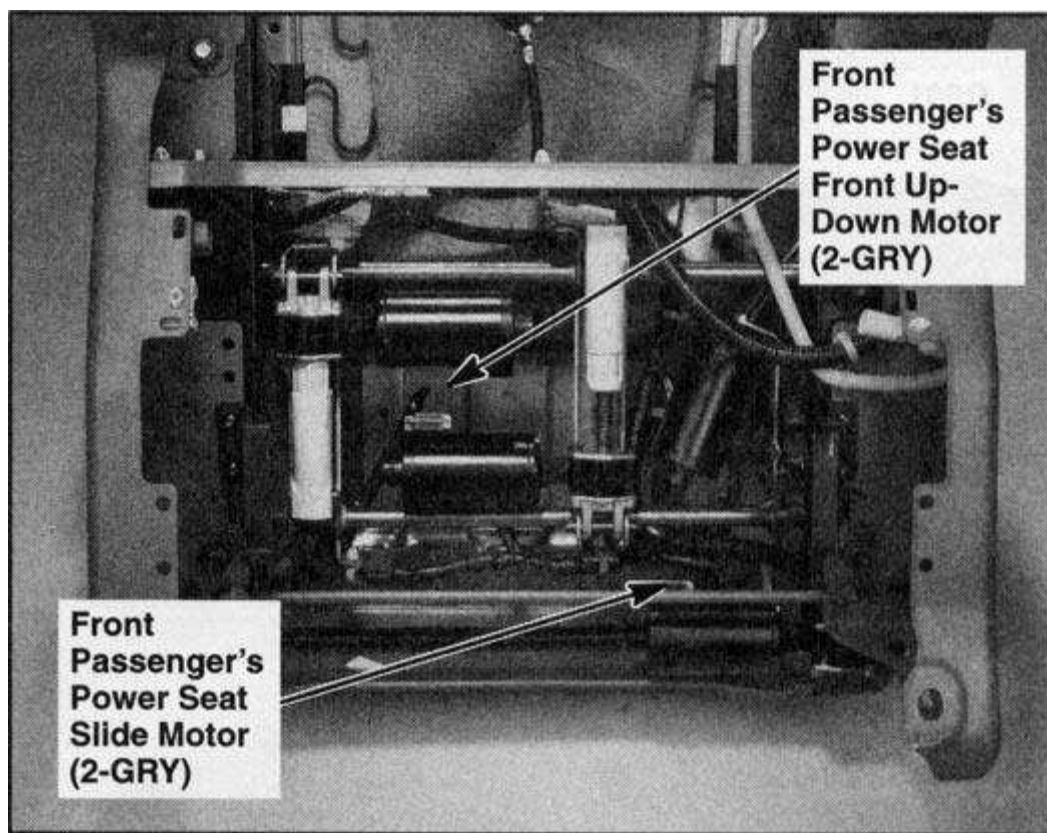


G00267942

Fig. 96: Under Front Passenger's Seat (DPMS)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

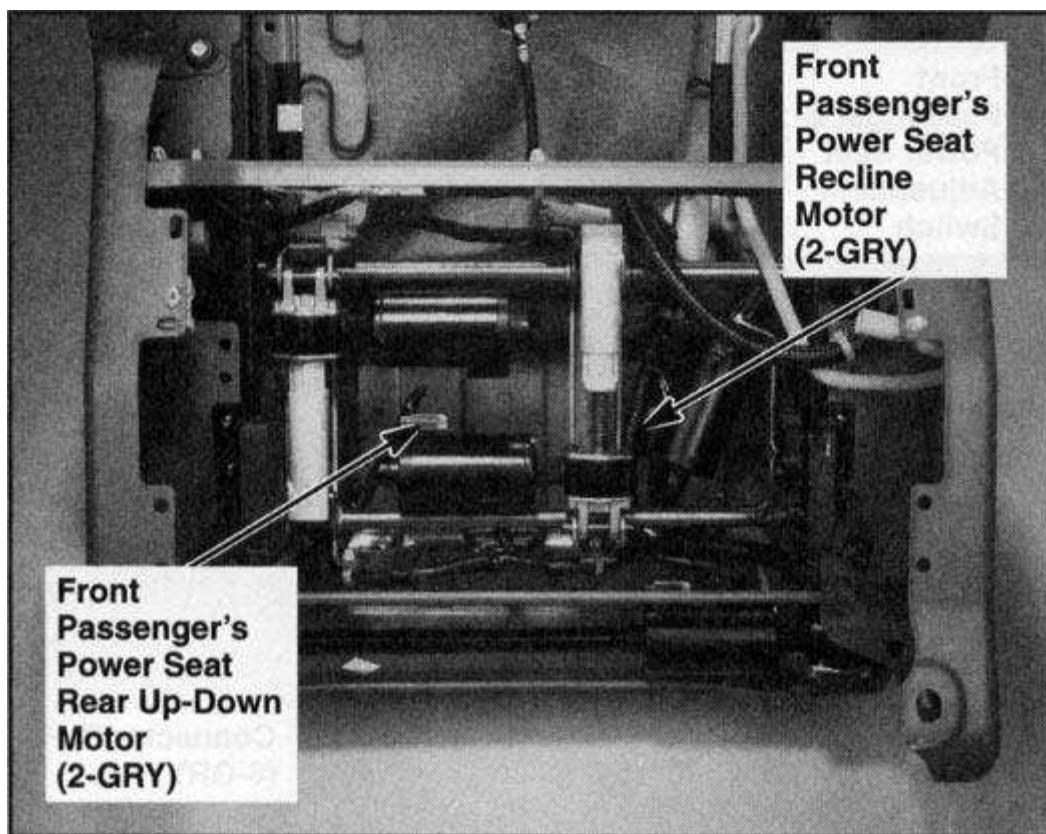


G00267943

Fig. 97: Under Front Passenger's Seat (DPMS)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

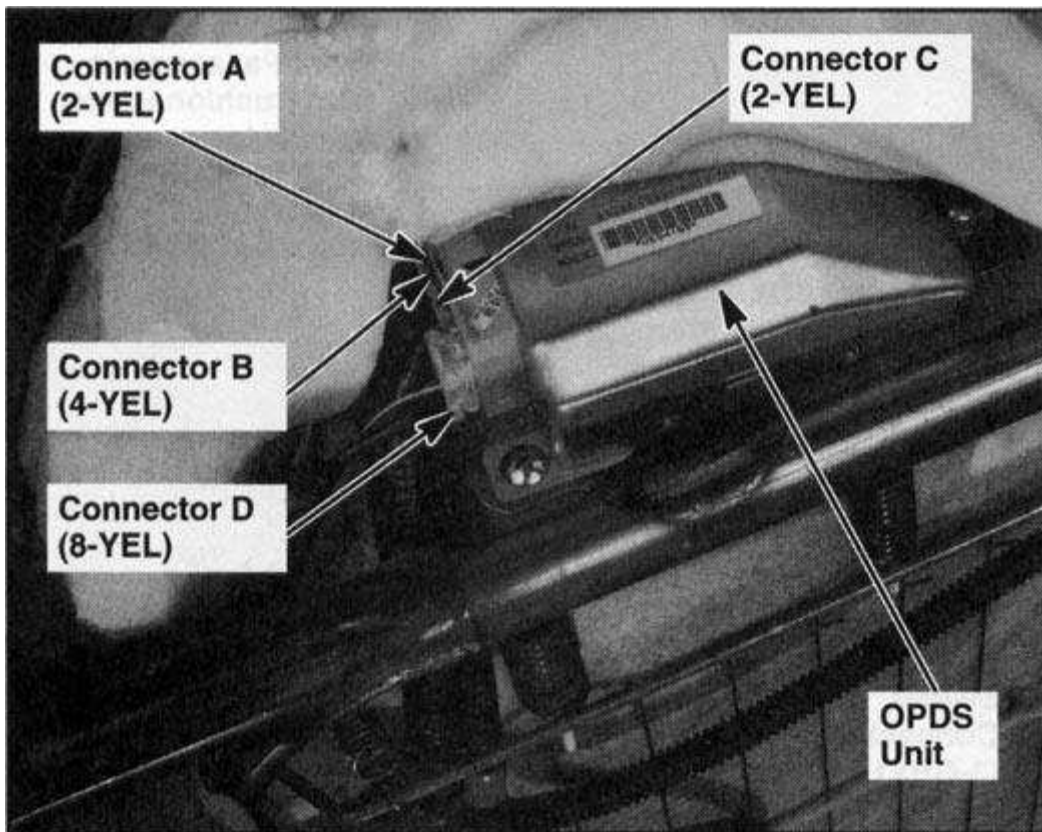

G00267944


Fig. 98: Front Passenger's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

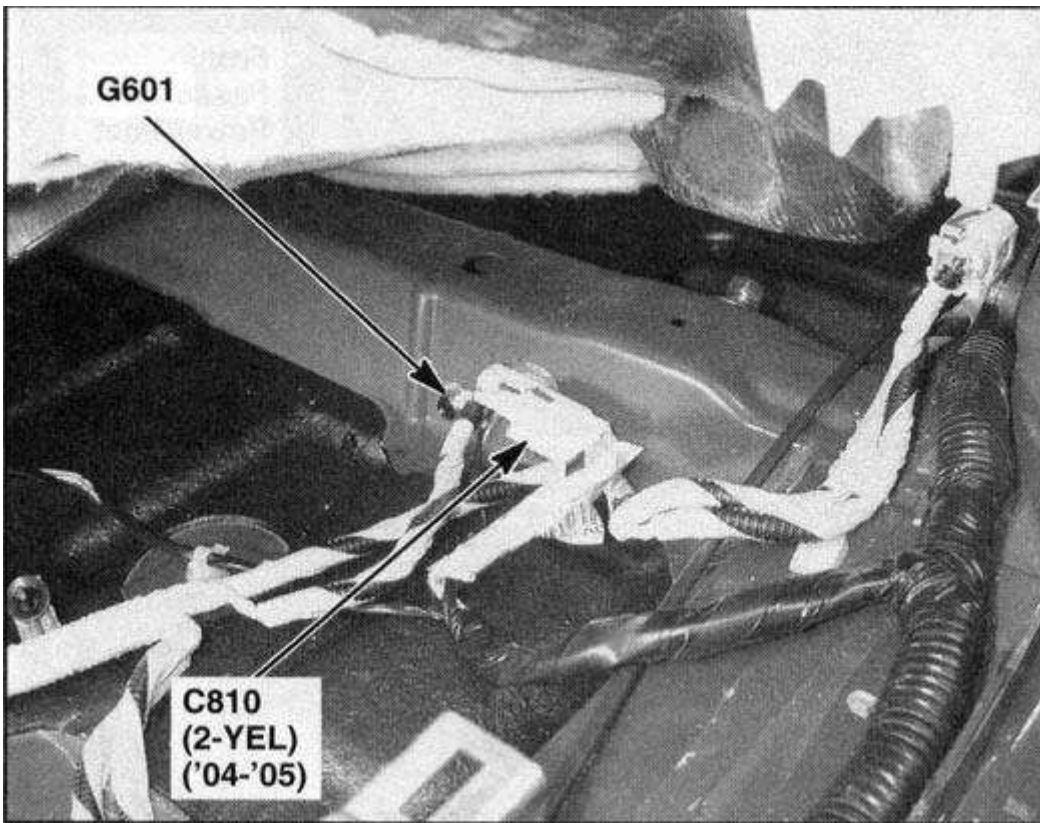

G00363387

Fig. 99: Left Side Of Floor

Courtesy of AMERICAN HONDA MOTOR CO., INC.

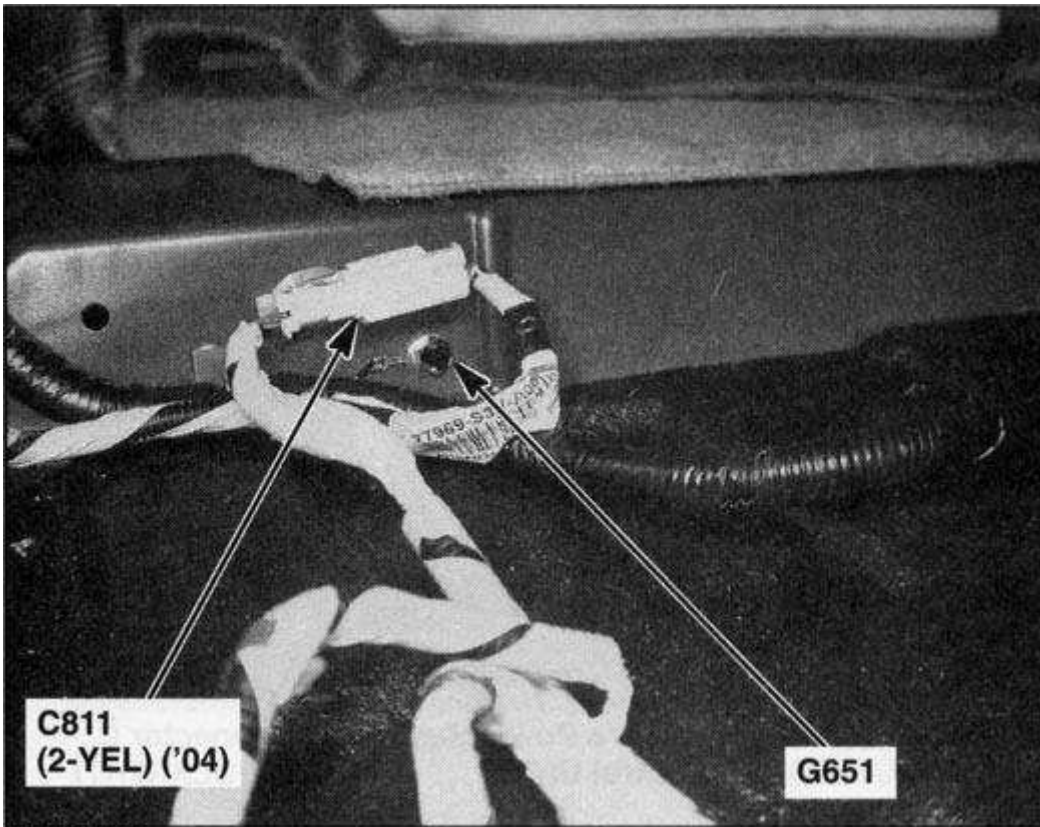

G00267946

Fig. 100: Right Side Of Floor

Courtesy of AMERICAN HONDA MOTOR CO., INC.


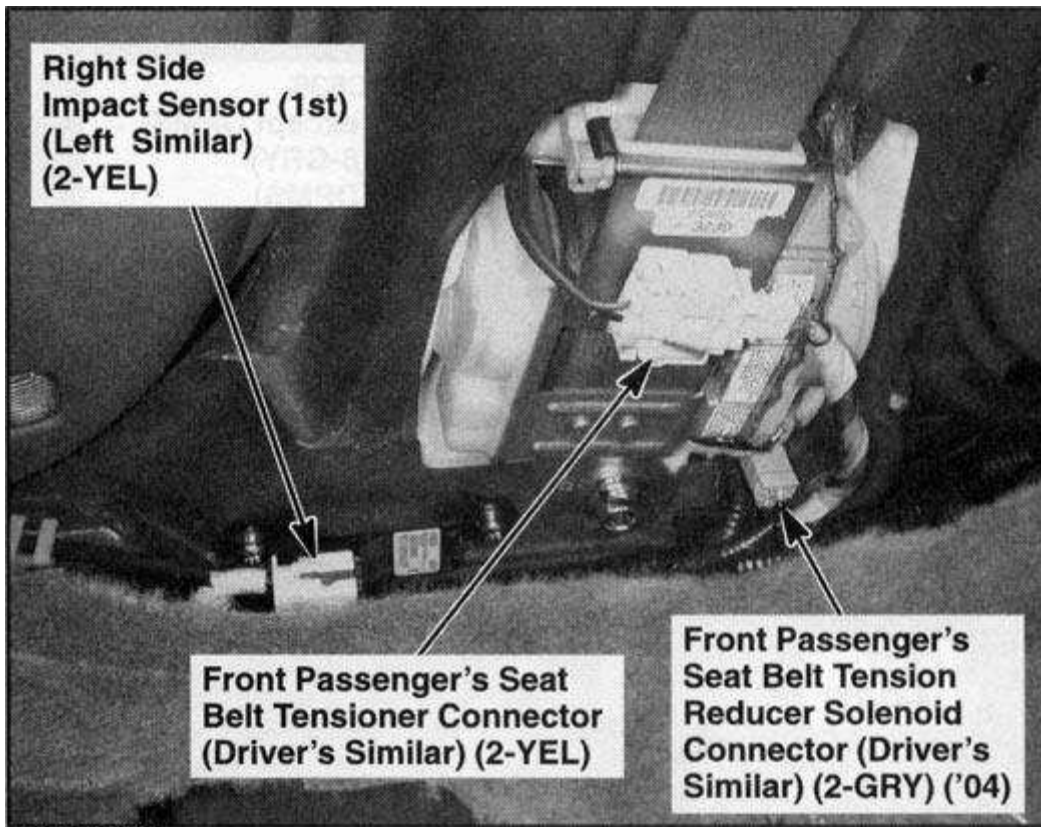


Fig. 101: Right "B" Pillar (Left Similar)


Courtesy of AMERICAN HONDA MOTOR CO., INC.

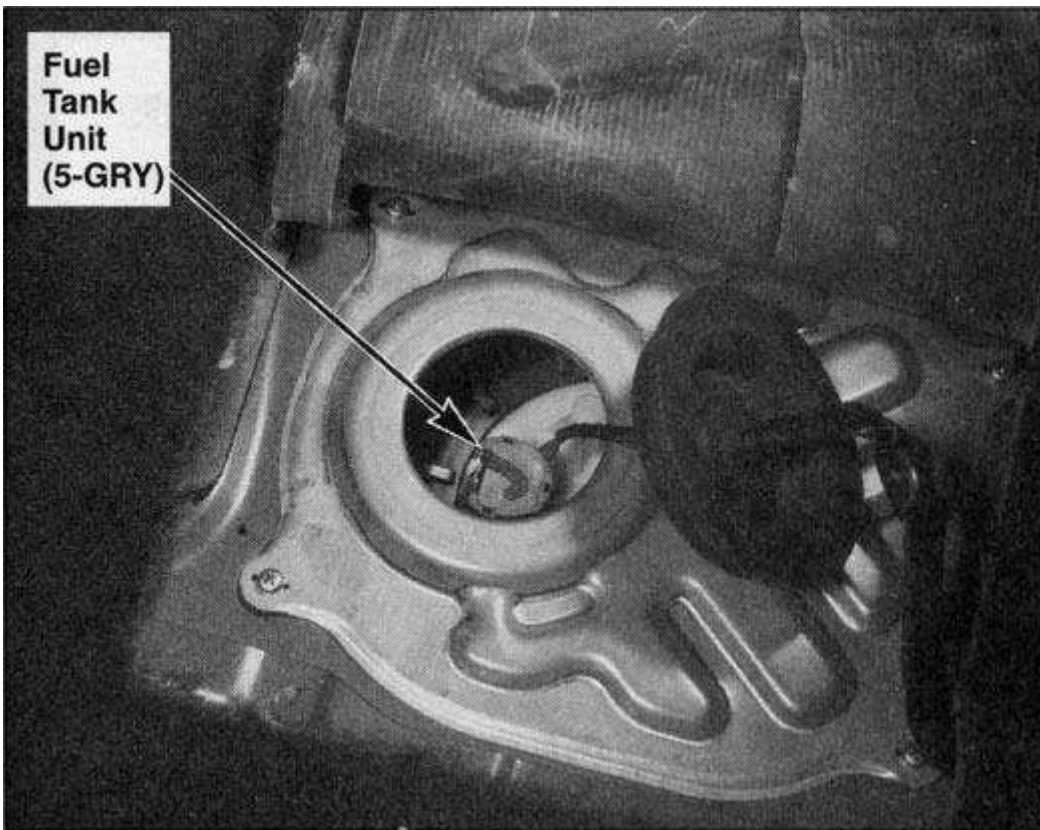

G00267948


Fig. 102: Middle Of Floor

Courtesy of AMERICAN HONDA MOTOR CO., INC.

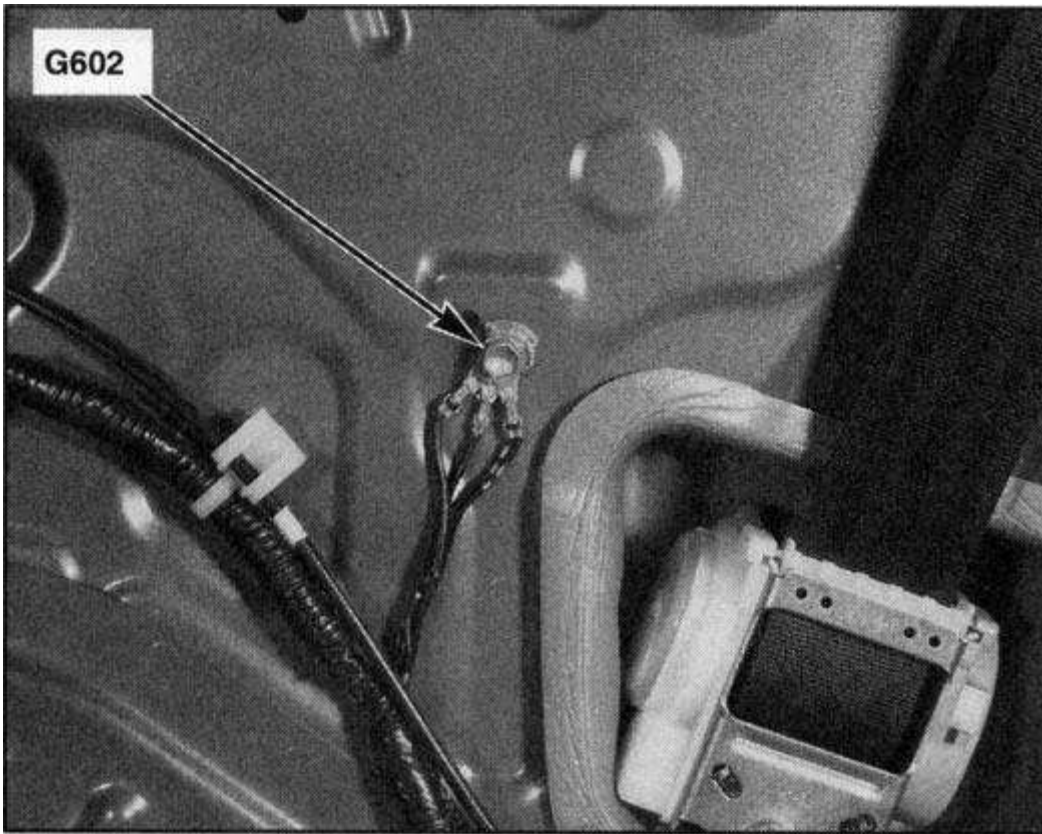

G00267952

Fig. 103: Behind Left Rear Lining
Courtesy of AMERICAN HONDA MOTOR CO., INC.

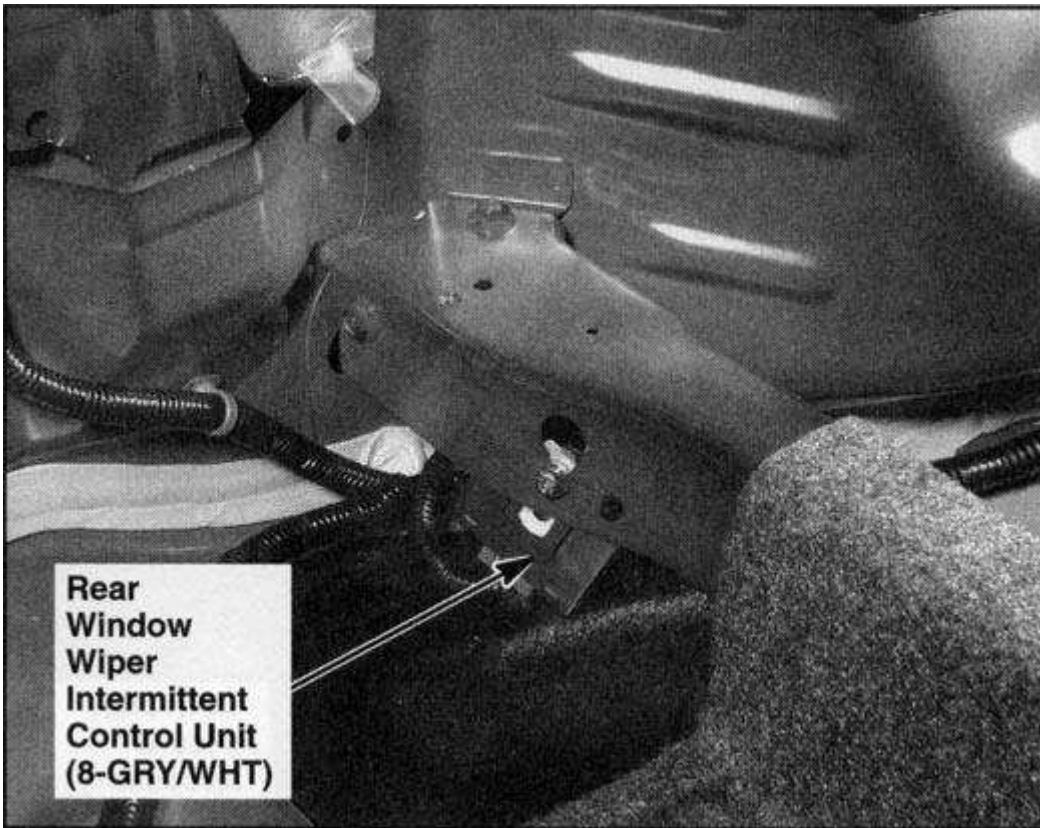

G00267953

Fig. 104: Left Side Of Cargo Area

Courtesy of AMERICAN HONDA MOTOR CO., INC.


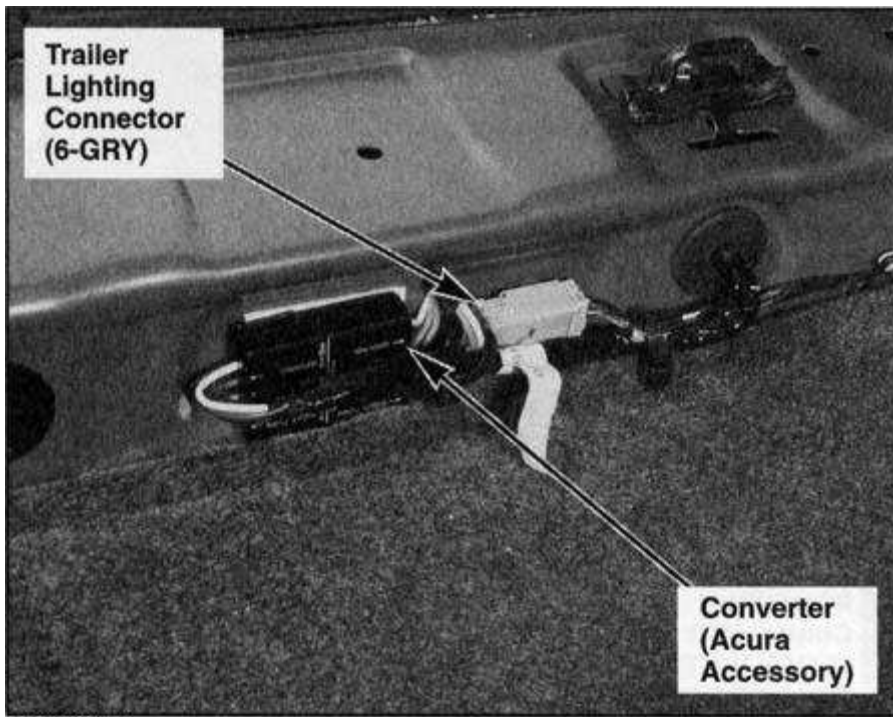



Fig. 105: Left Side Of Cargo Area

Courtesy of AMERICAN HONDA MOTOR CO., INC.

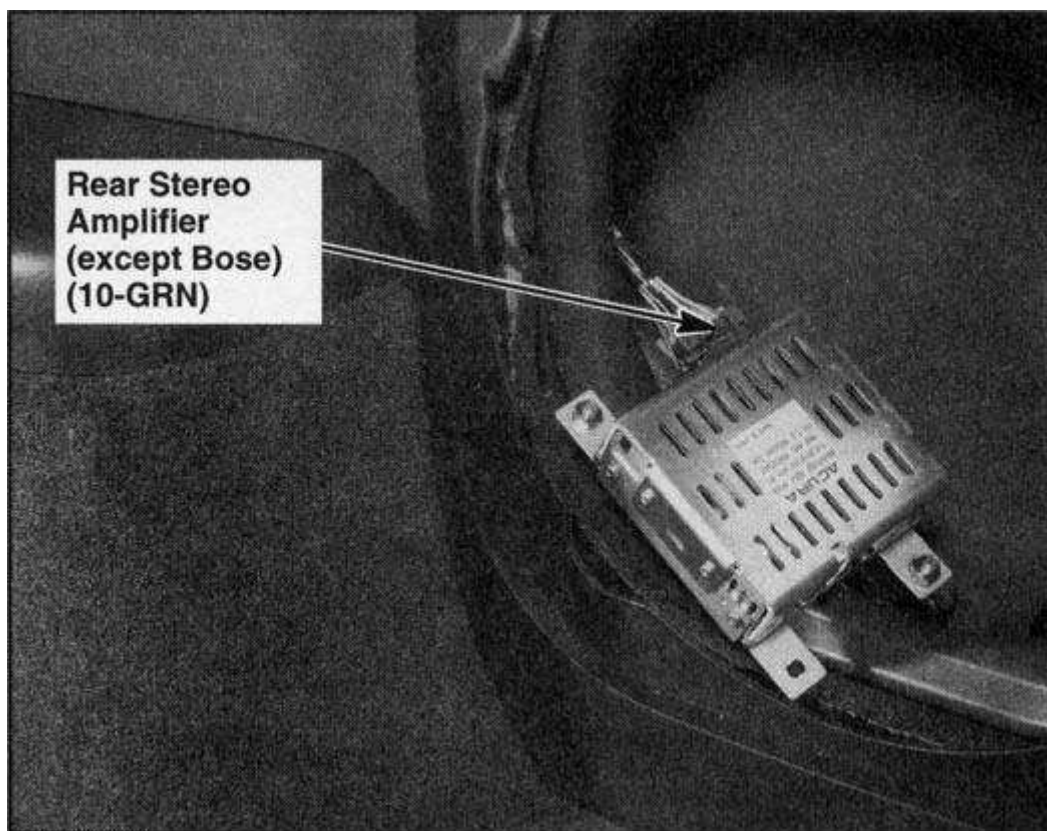

G00267959


Fig. 106: Right Side Of Cargo Area (Except Bose)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

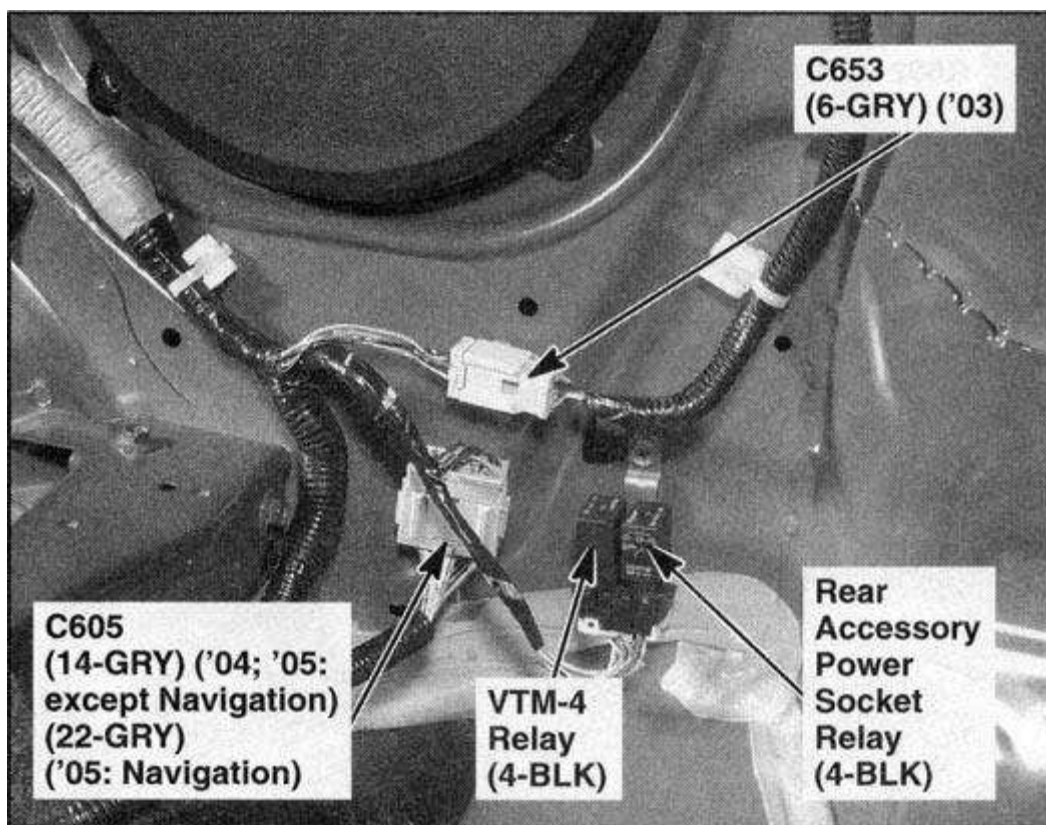

G00360320

Fig. 107: Right Side Of Cargo Area


Courtesy of AMERICAN HONDA MOTOR CO., INC.

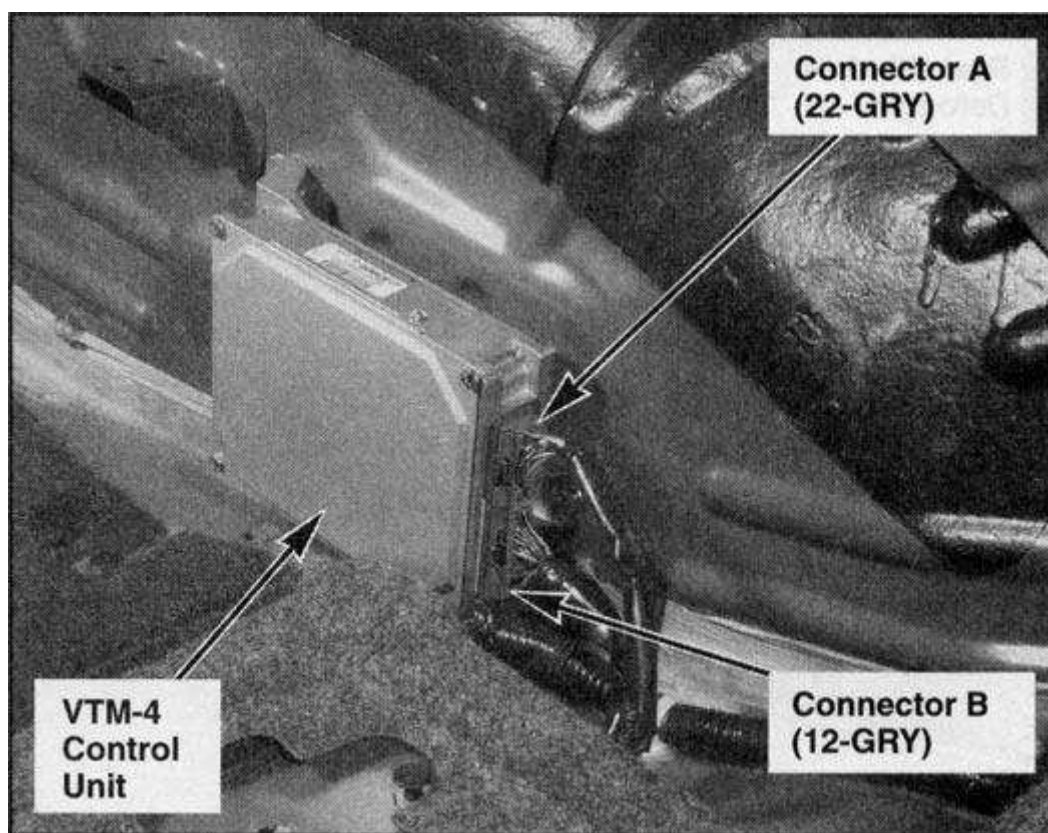

G00264158

Fig. 108: Right Side Of Cargo Area


Courtesy of AMERICAN HONDA MOTOR CO., INC.

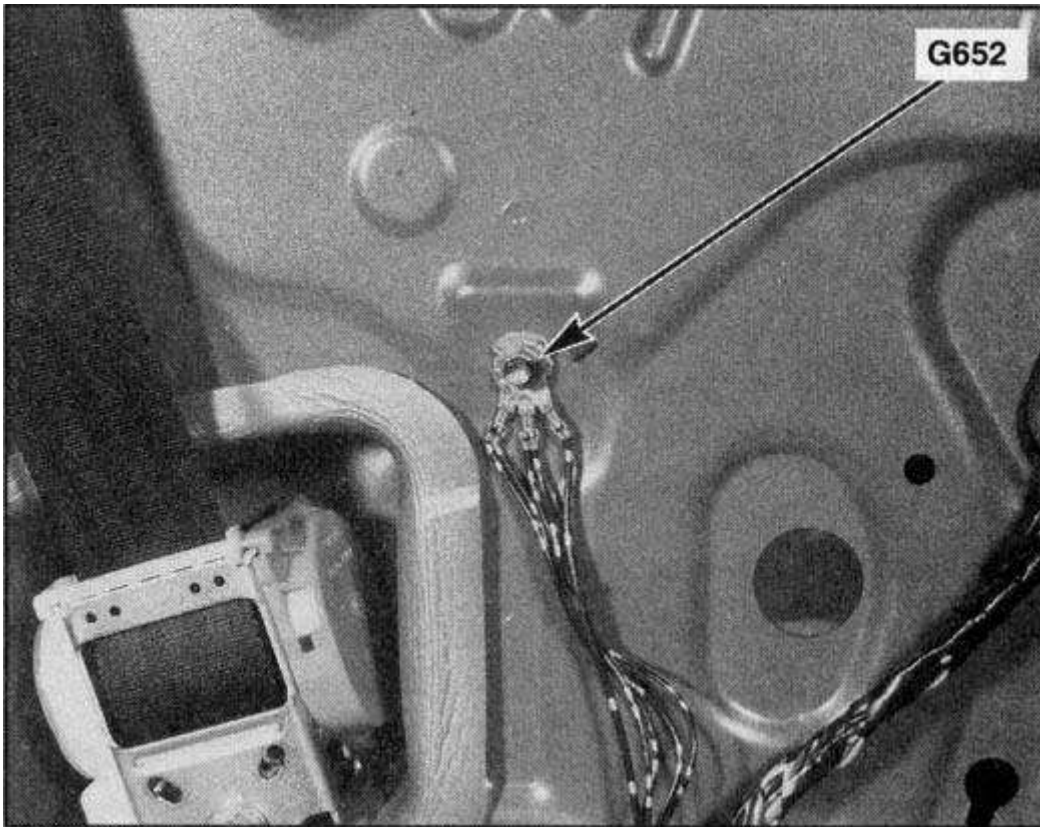

G00268196

Fig. 109: Behind Right Rear Lining


Courtesy of AMERICAN HONDA MOTOR CO., INC.

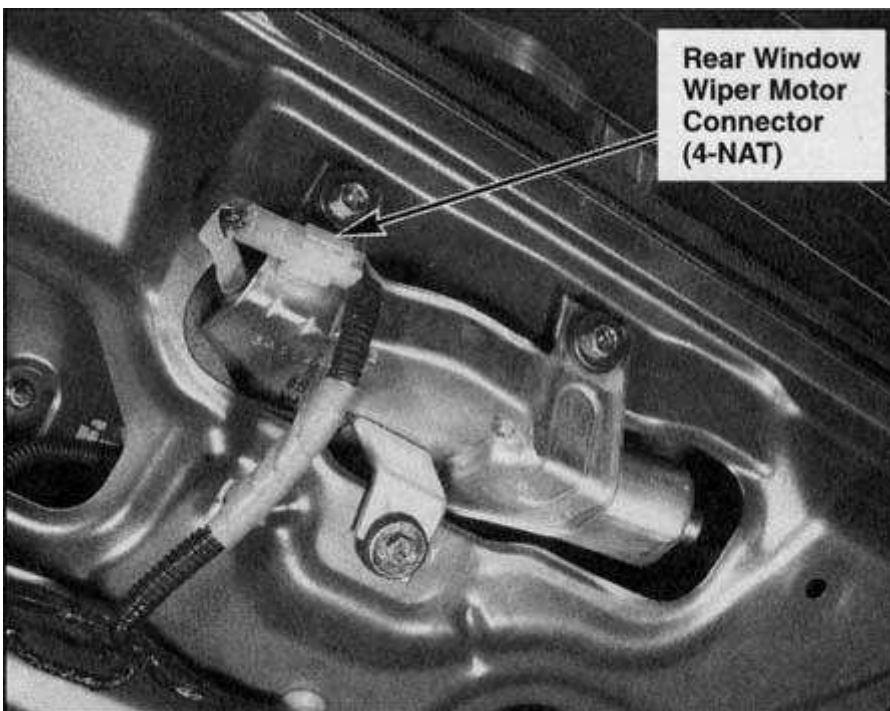

G00268198

Fig. 110: Behind Tailgate Trim Panel


Courtesy of AMERICAN HONDA MOTOR CO., INC.

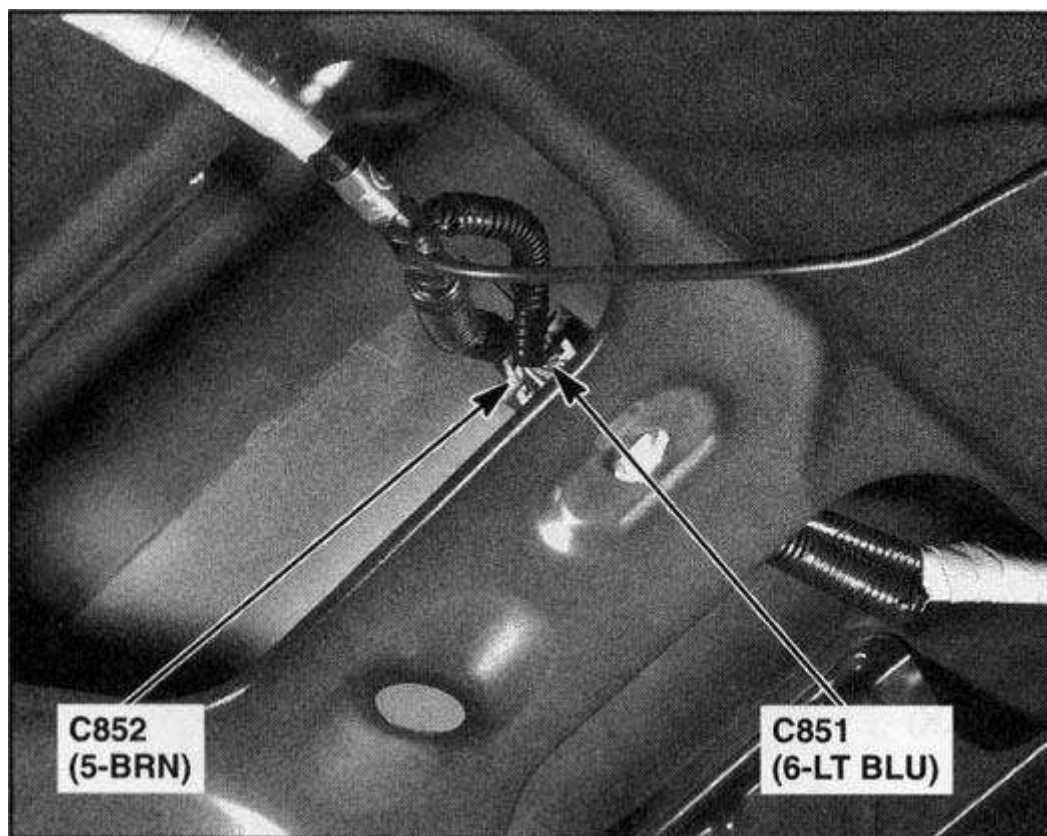

G00268199

Fig. 111: Behind Tailgate Trim Panel


Courtesy of AMERICAN HONDA MOTOR CO., INC.

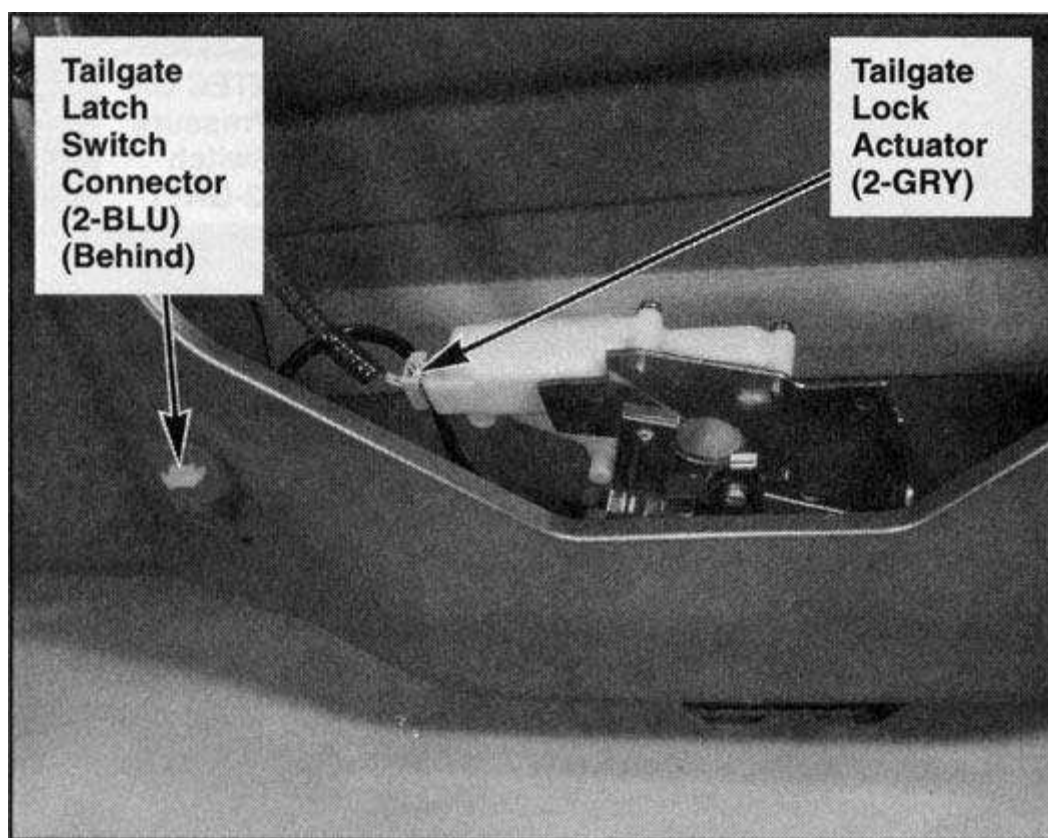

G00268200

Fig. 112: Behind Tailgate Trim Panel


Courtesy of AMERICAN HONDA MOTOR CO., INC.

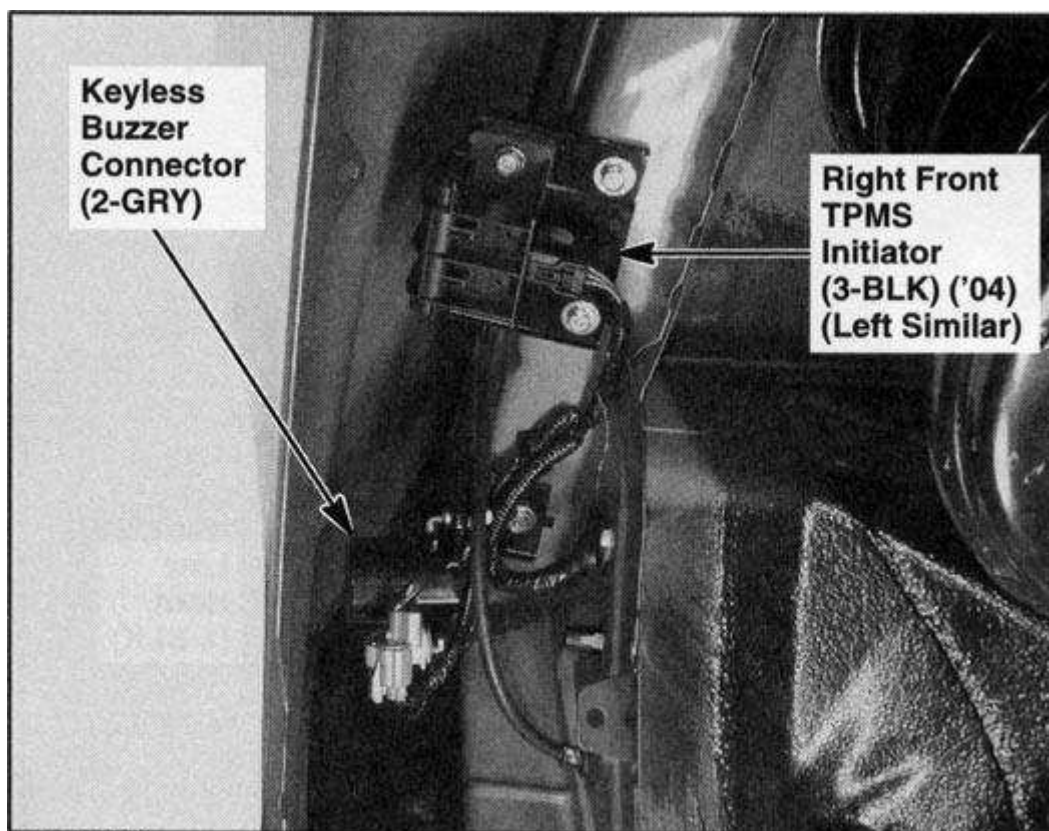

G00268201


Fig. 113: Behind Right Fender

Courtesy of AMERICAN HONDA MOTOR CO., INC.

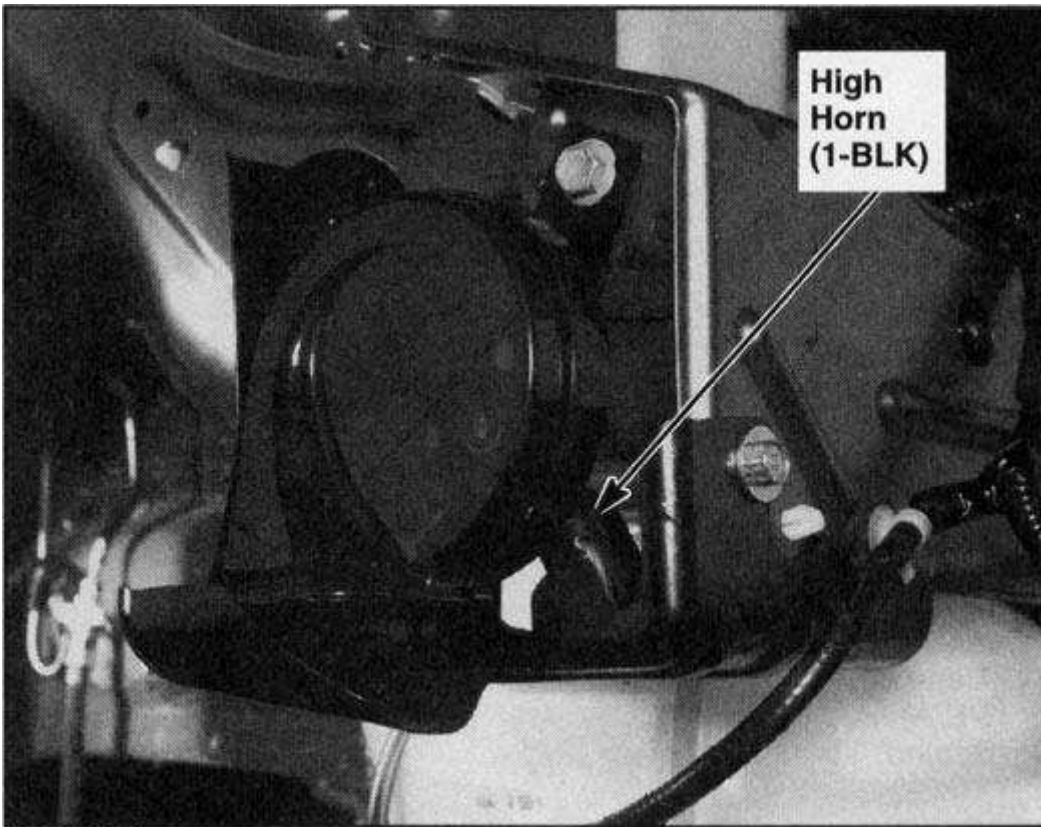


G00268202

Fig. 114: Right Side Of Front Bumper
Courtesy of AMERICAN HONDA MOTOR CO., INC.

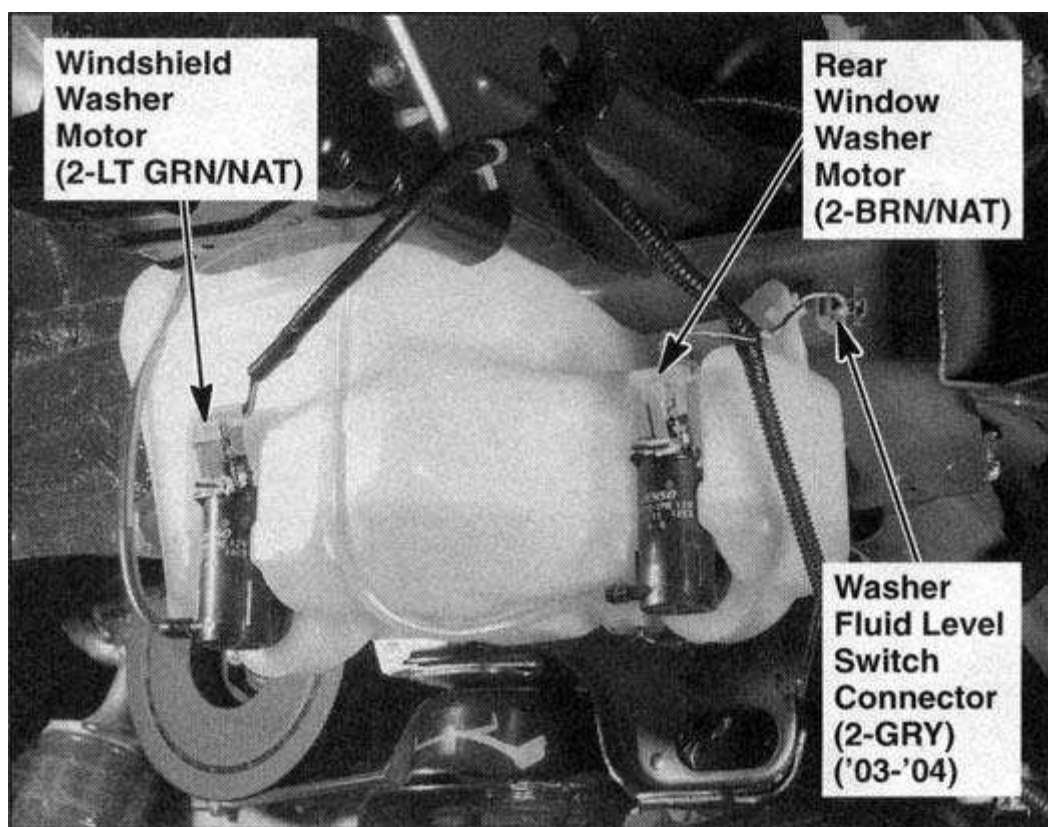


G00360322

Fig. 115: Behind Right Side Of Front Bumper
Courtesy of AMERICAN HONDA MOTOR CO., INC.

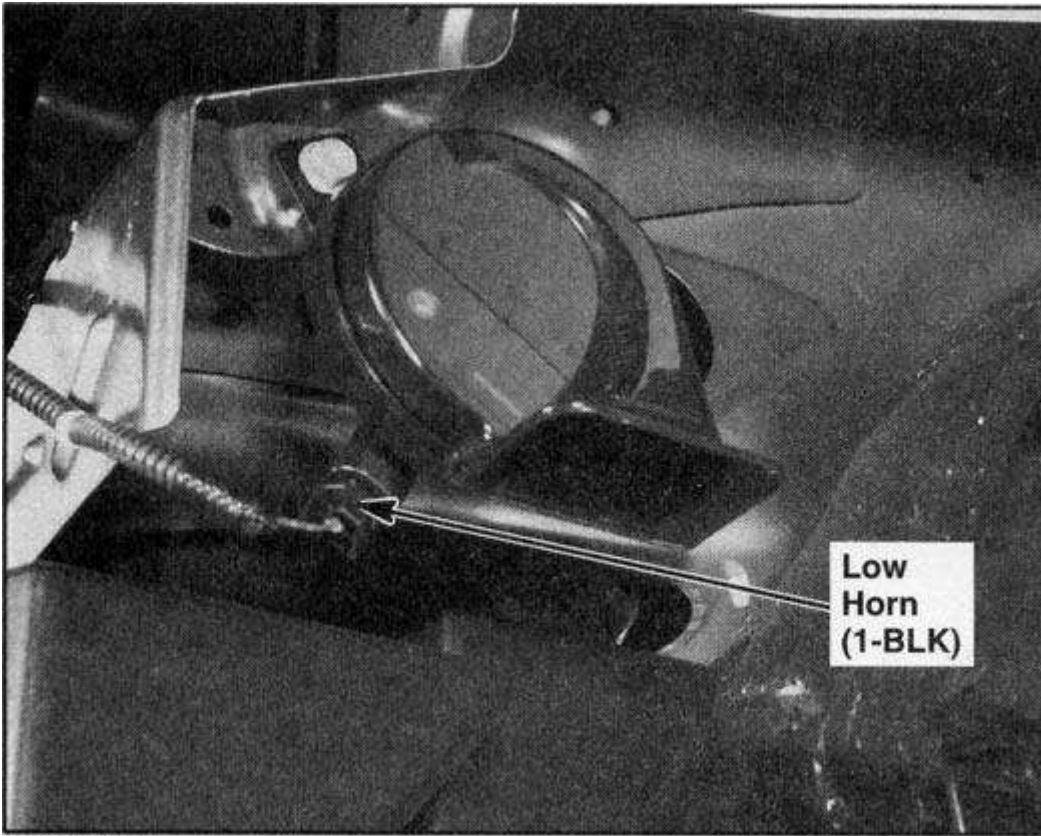


G00268204

Fig. 116: Behind Left Side Of Front Bumper
Courtesy of AMERICAN HONDA MOTOR CO., INC.

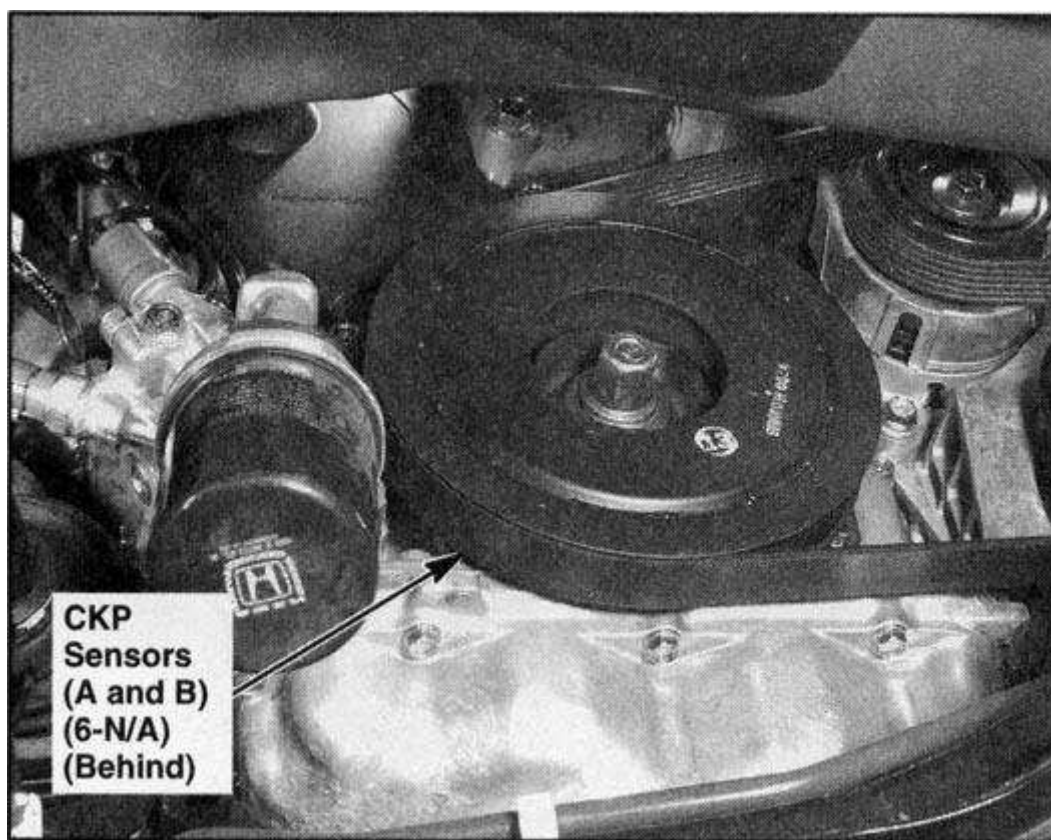


G00268205

Fig. 117: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

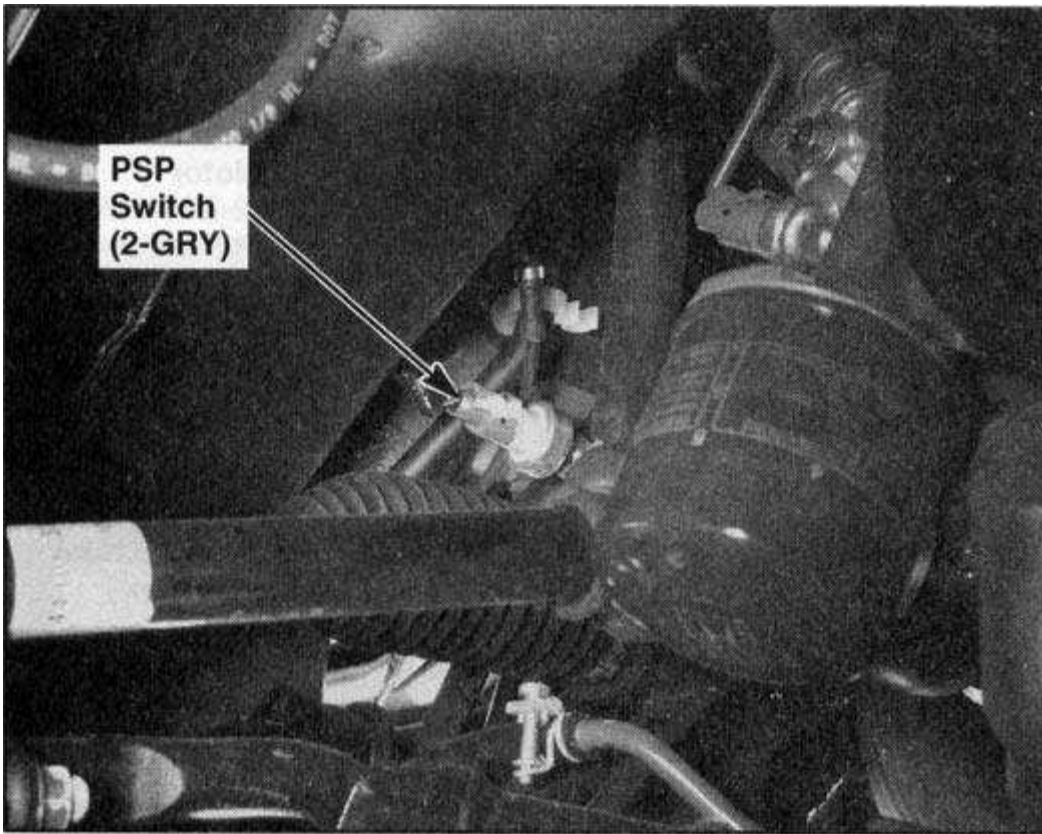

G00268206

Fig. 118: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

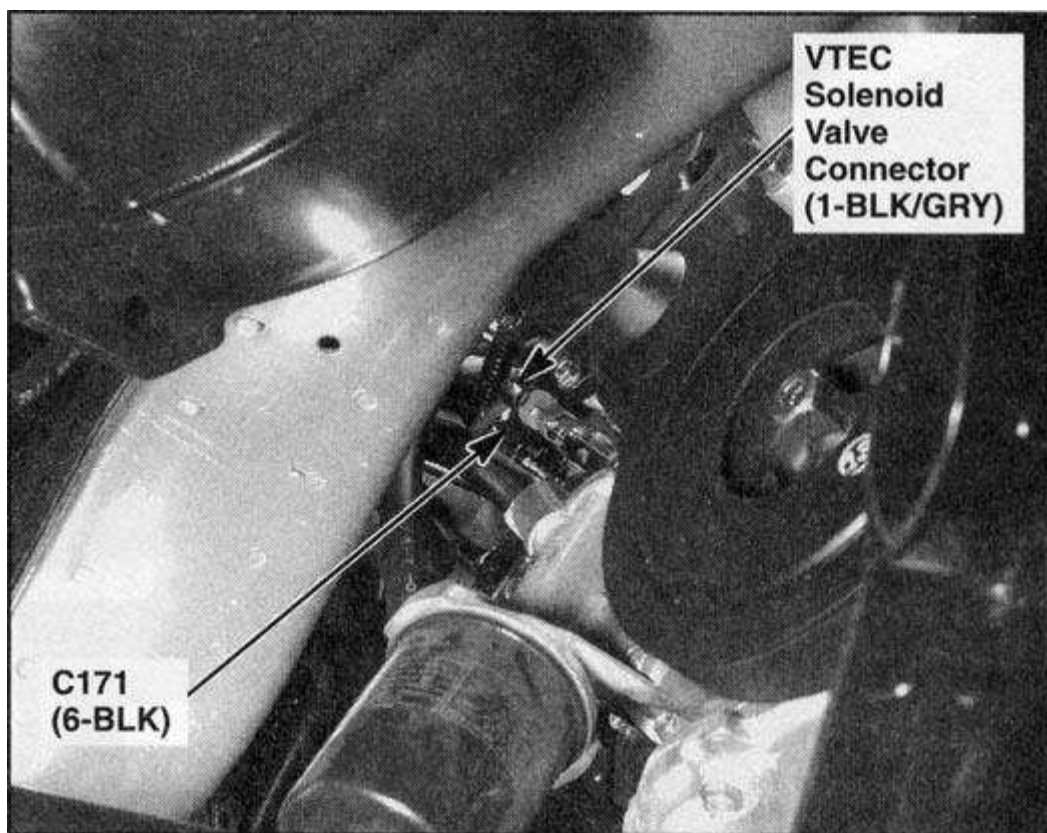


G00263705

Fig. 119: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.




G00263706

Fig. 120: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

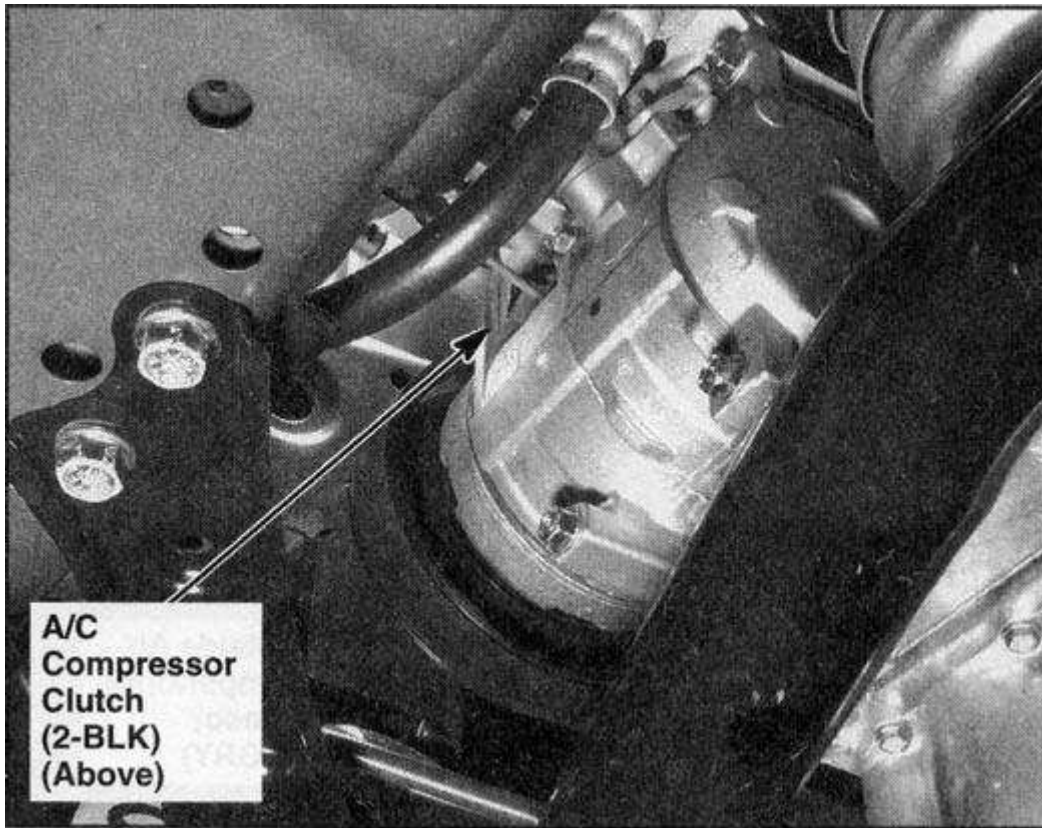

G00263707


Fig. 121: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

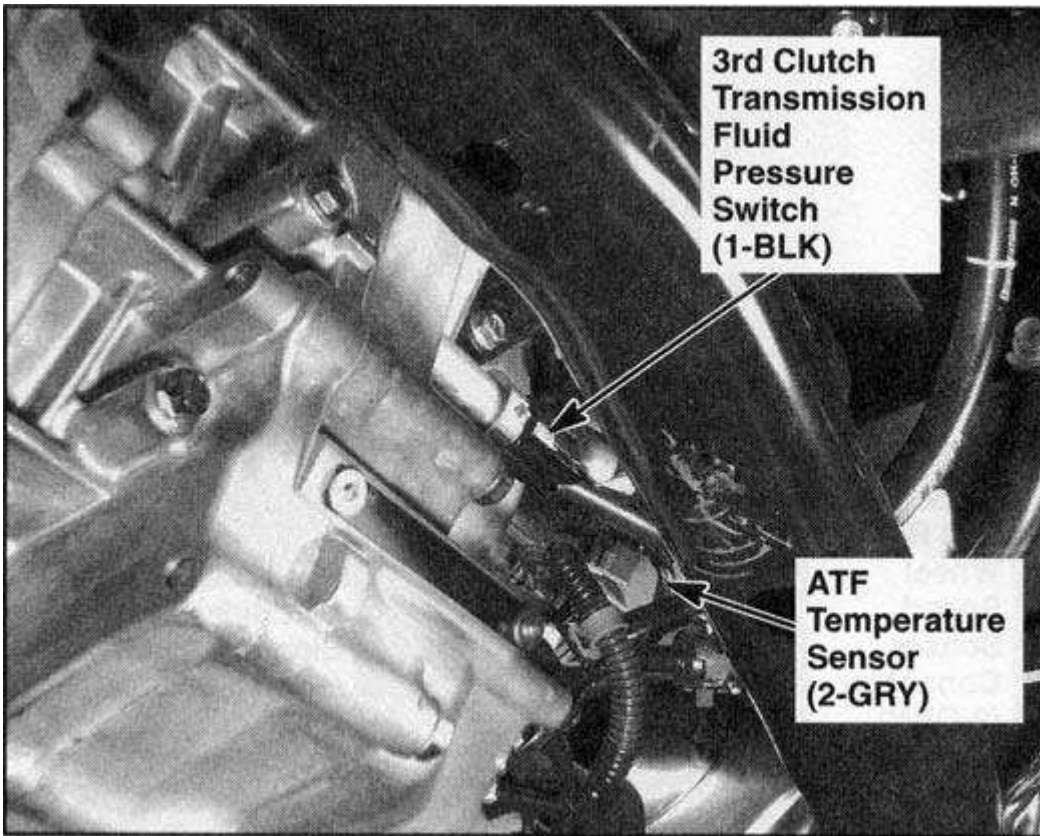

G00263708

Fig. 122: Transmission Housing


Courtesy of AMERICAN HONDA MOTOR CO., INC.

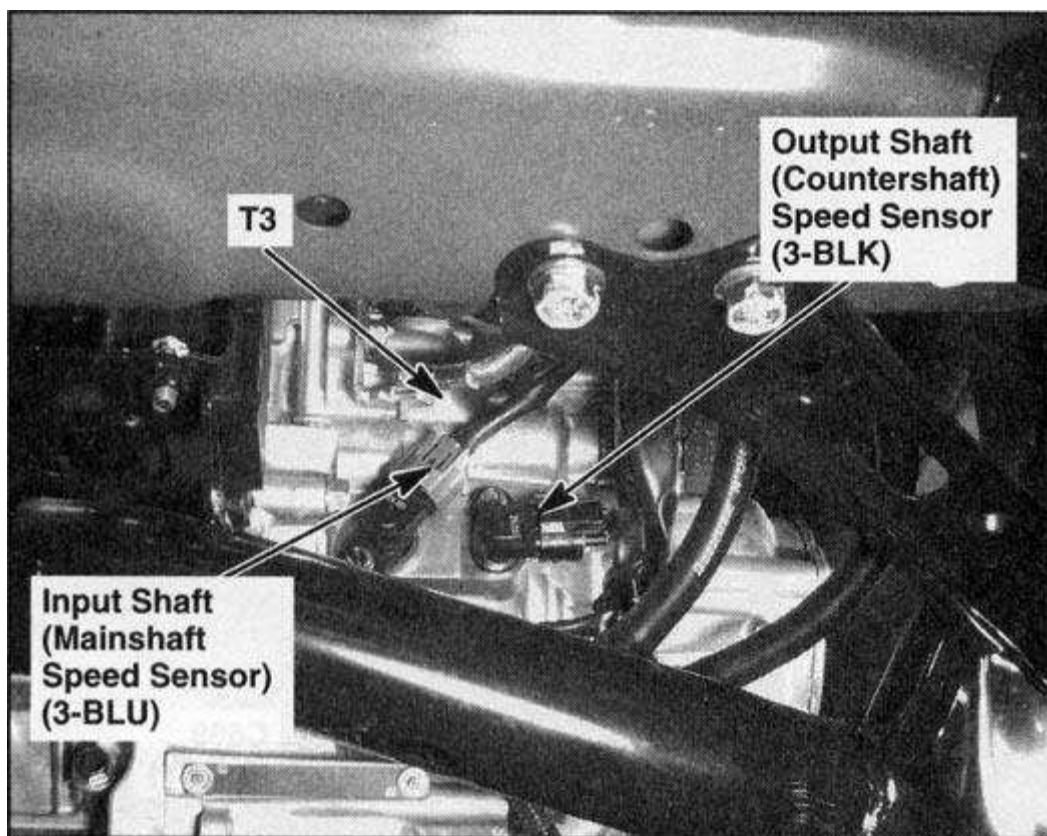

G00263709

Fig. 123: Transmission Housing


Courtesy of AMERICAN HONDA MOTOR CO., INC.

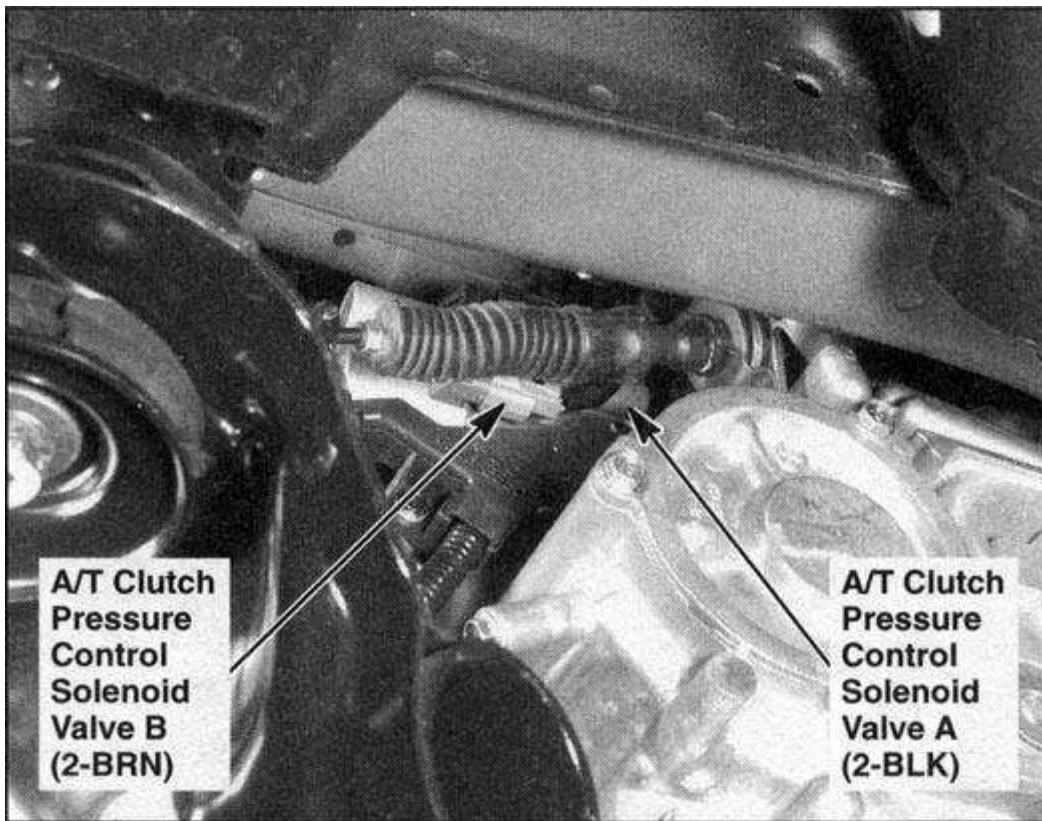

G00360323


Fig. 124: Transmission Housing

Courtesy of AMERICAN HONDA MOTOR CO., INC.

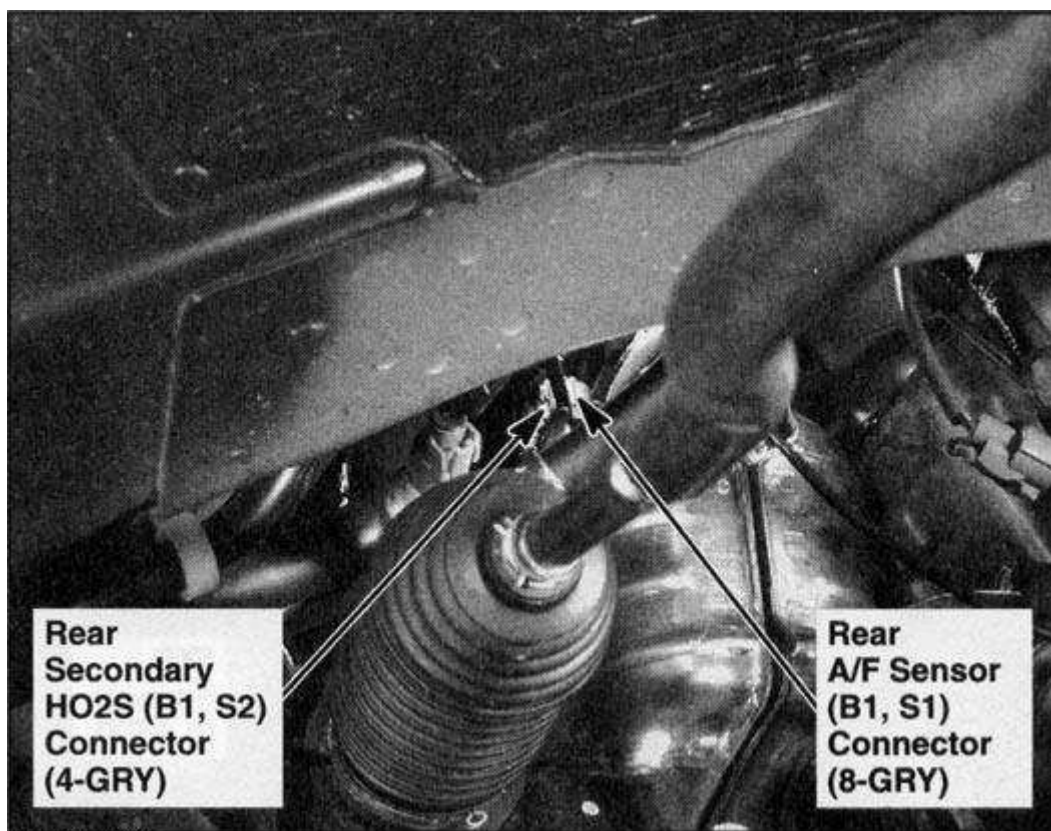

G00263713


Fig. 125: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

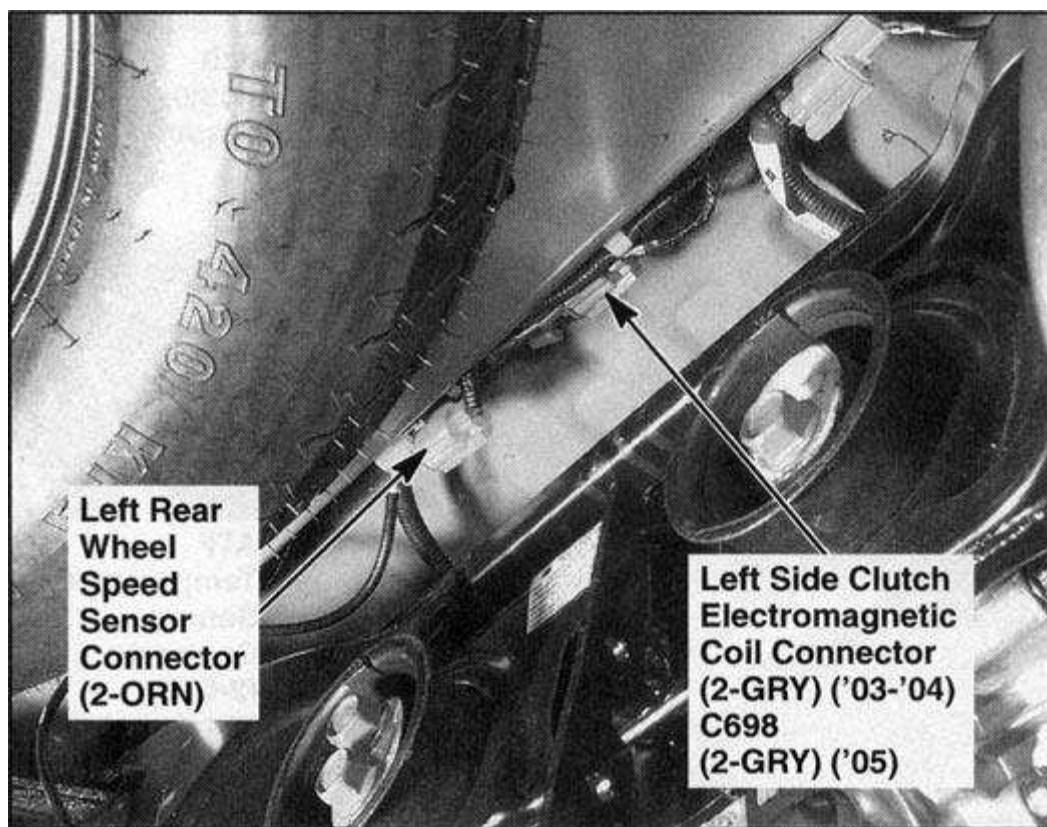

G00360324

Fig. 126: Under Rear Of Vehicle


Courtesy of AMERICAN HONDA MOTOR CO., INC.

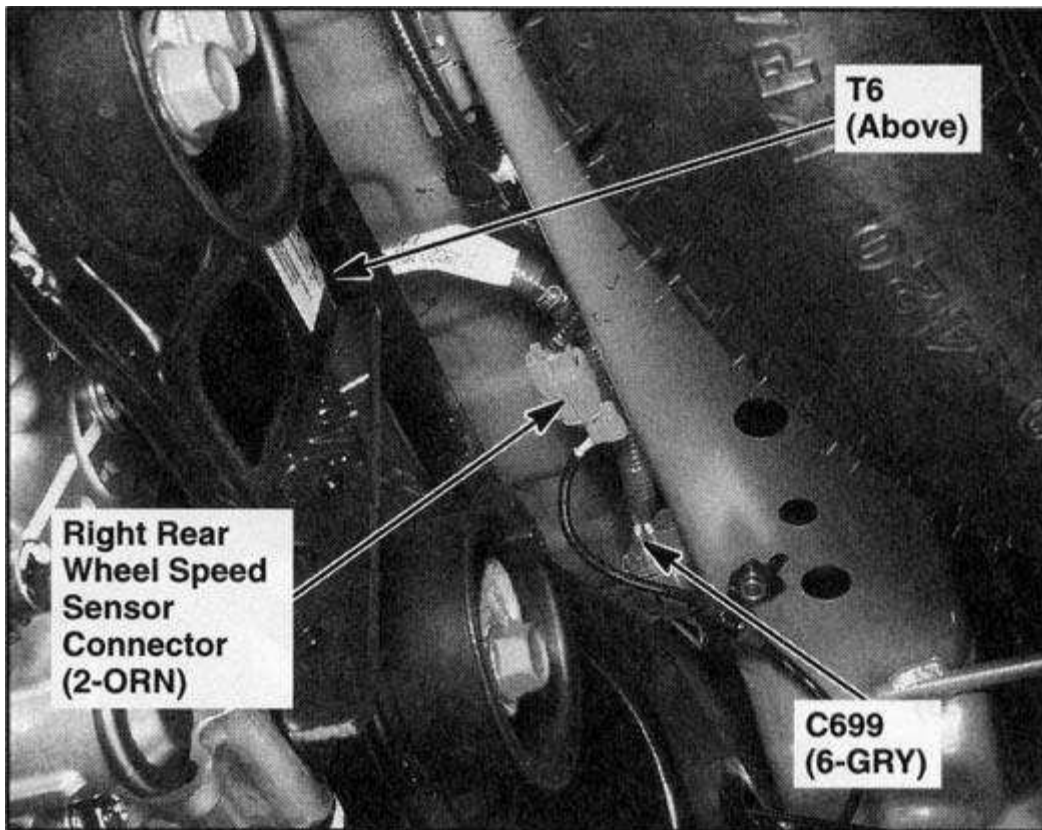

G00263718

Fig. 127: Under Rear Of Vehicle


Courtesy of AMERICAN HONDA MOTOR CO., INC.

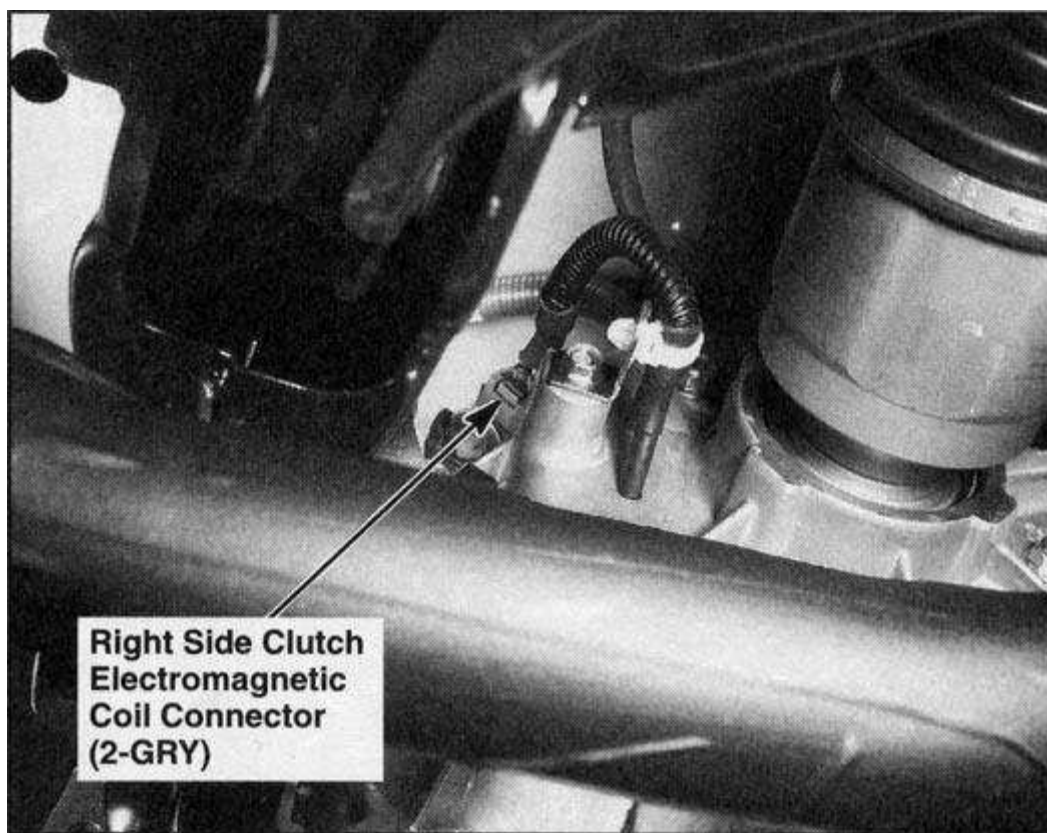

G00263719


Fig. 128: Under Rear Of Vehicle

Courtesy of AMERICAN HONDA MOTOR CO., INC.

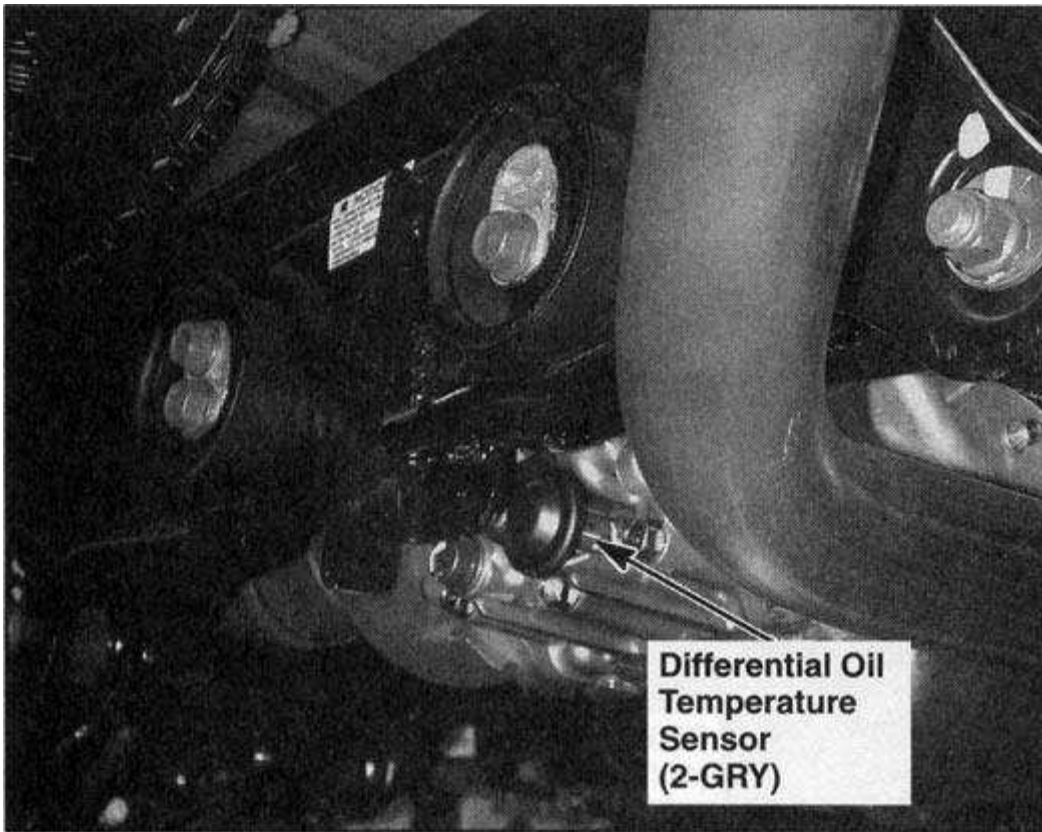


G00263720

Fig. 129: Differential Oil Temperature Sensor
Courtesy of AMERICAN HONDA MOTOR CO., INC.

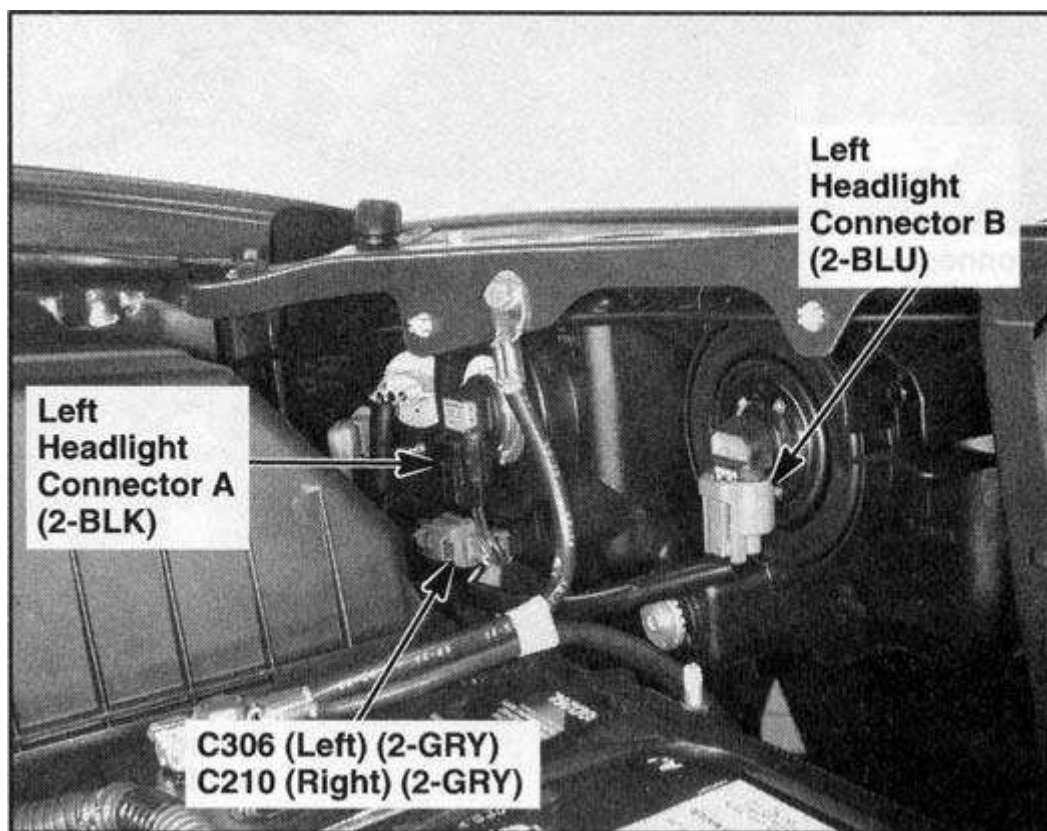

G00263721


Fig. 130: Behind Left Headlight Assembly (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

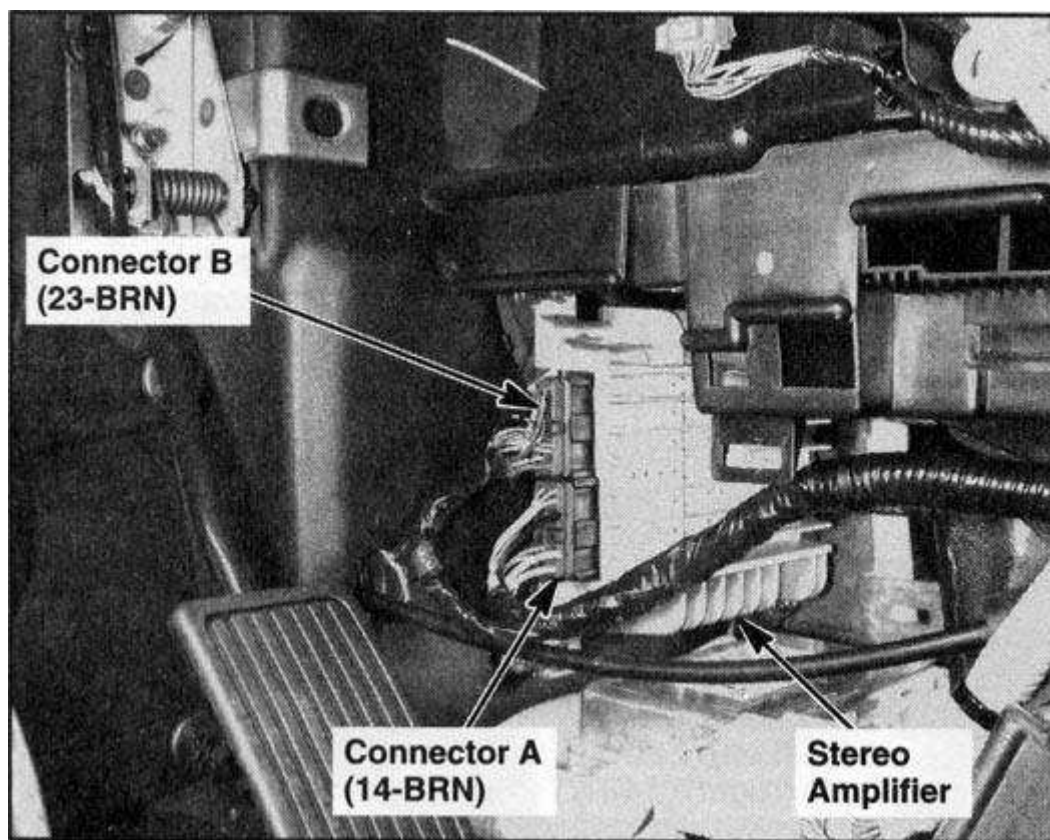

G00263734

Fig. 131: Under Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

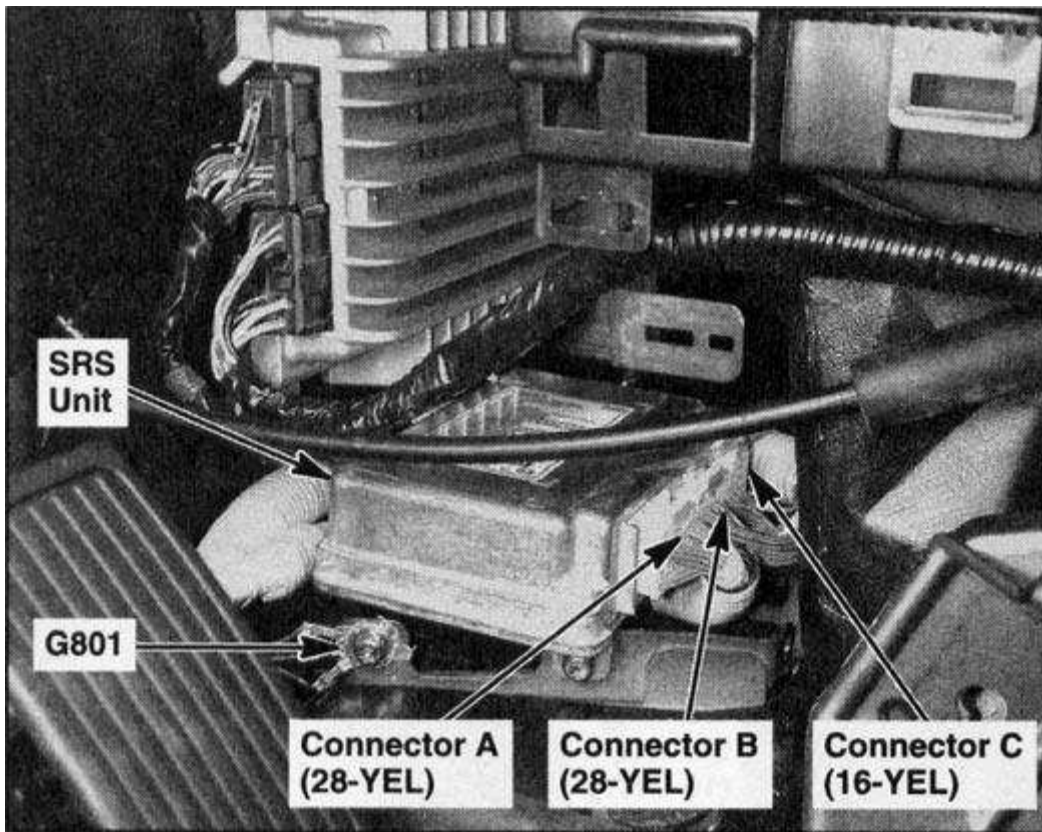

G00263722


Fig. 132: Under Middle Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.

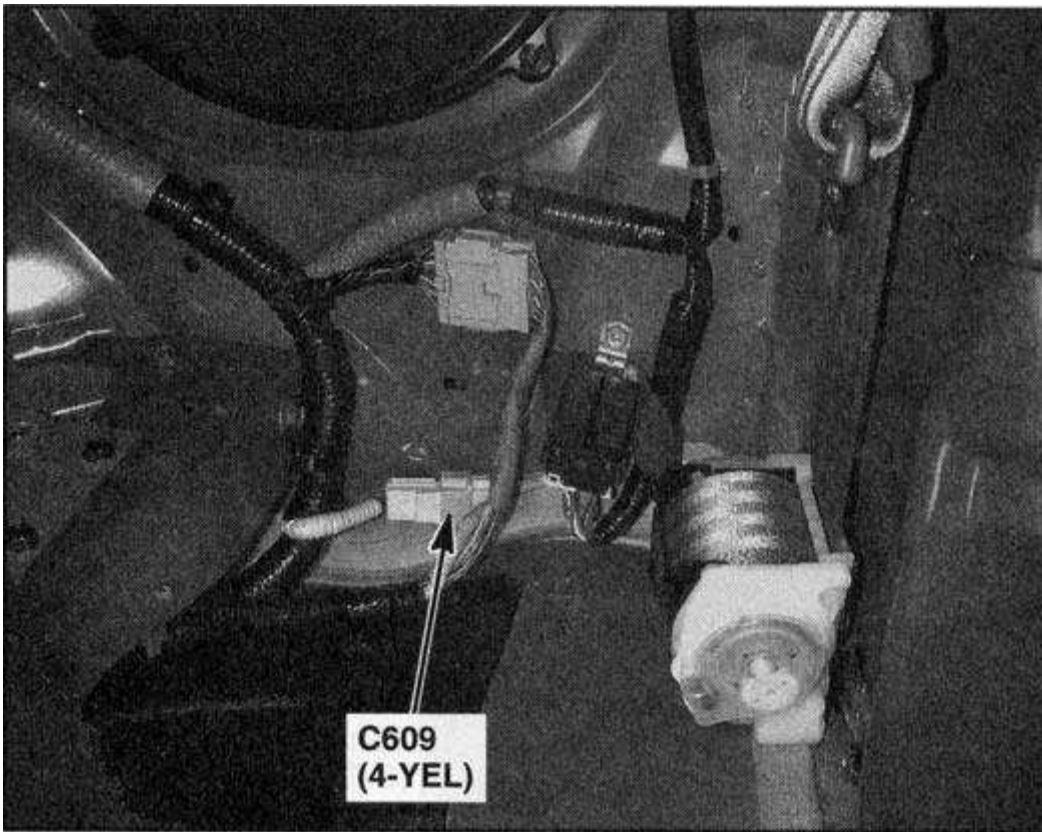

G00263723


Fig. 133: Right Side Of Cargo Area
Courtesy of AMERICAN HONDA MOTOR CO., INC.

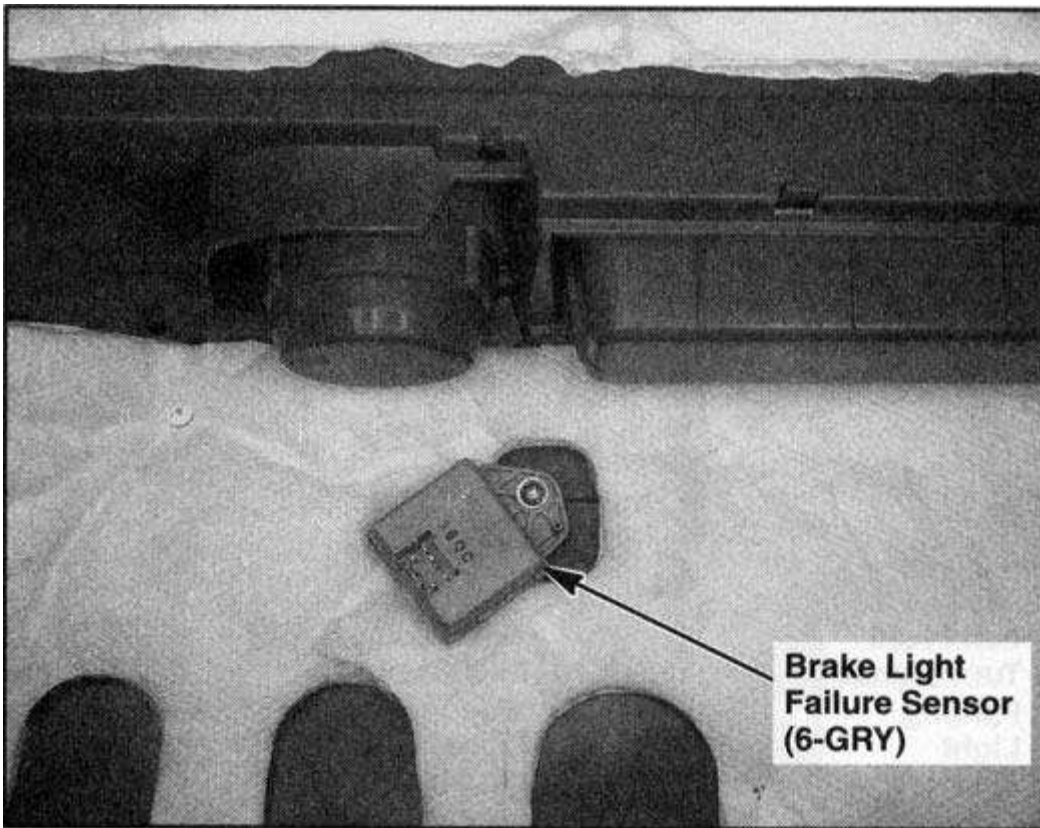

G00263724


Fig. 134: Behind Left Rear Lining

Courtesy of AMERICAN HONDA MOTOR CO., INC.

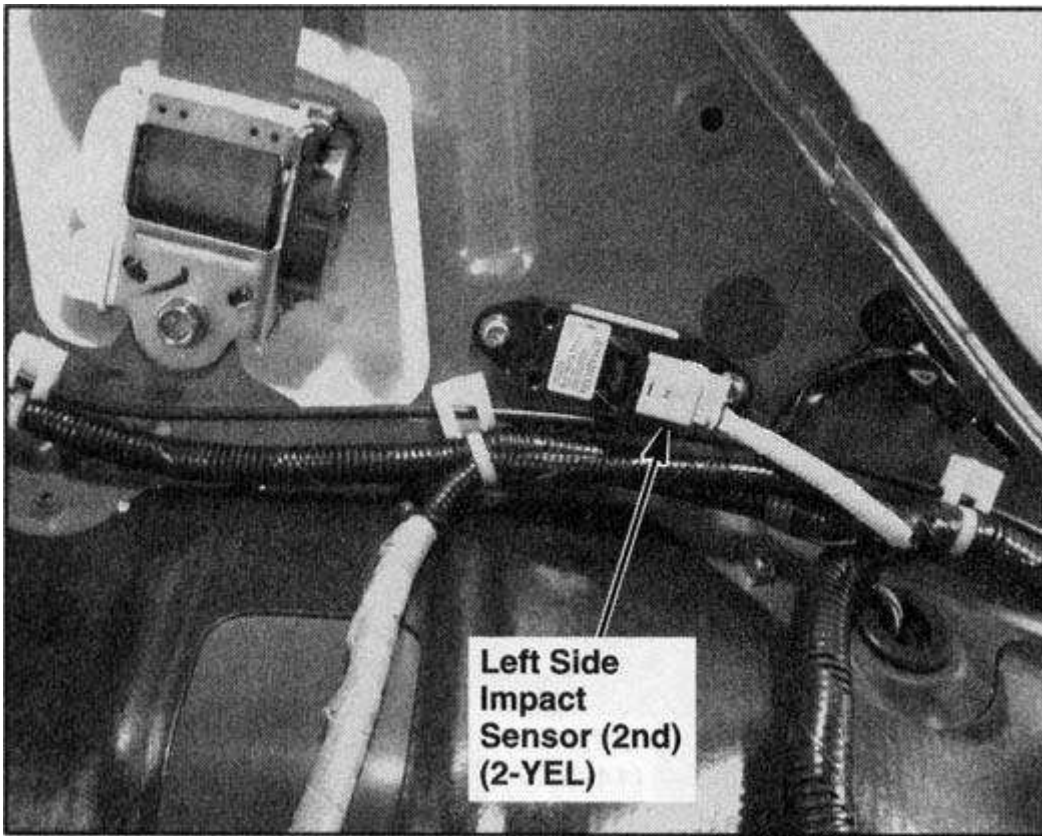


G00263725

Fig. 135: Behind Left Rear Lining (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

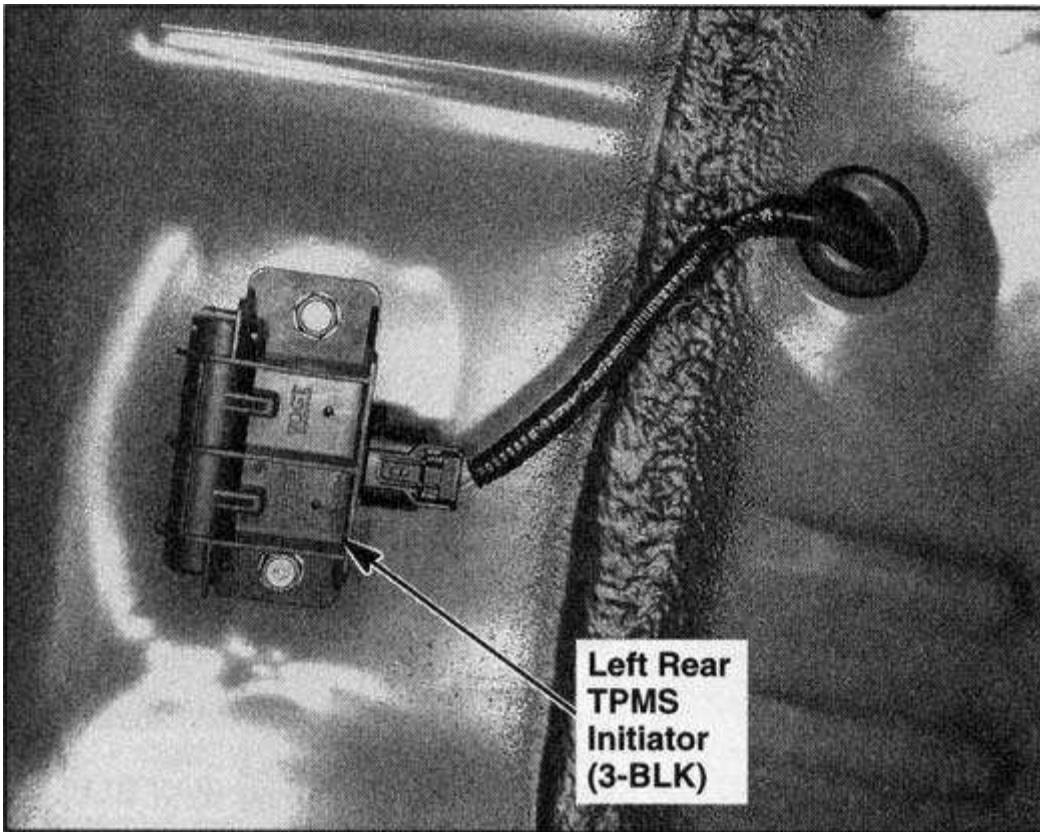


G00263726

Fig. 136: Front of Left Rear Wheelwell (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

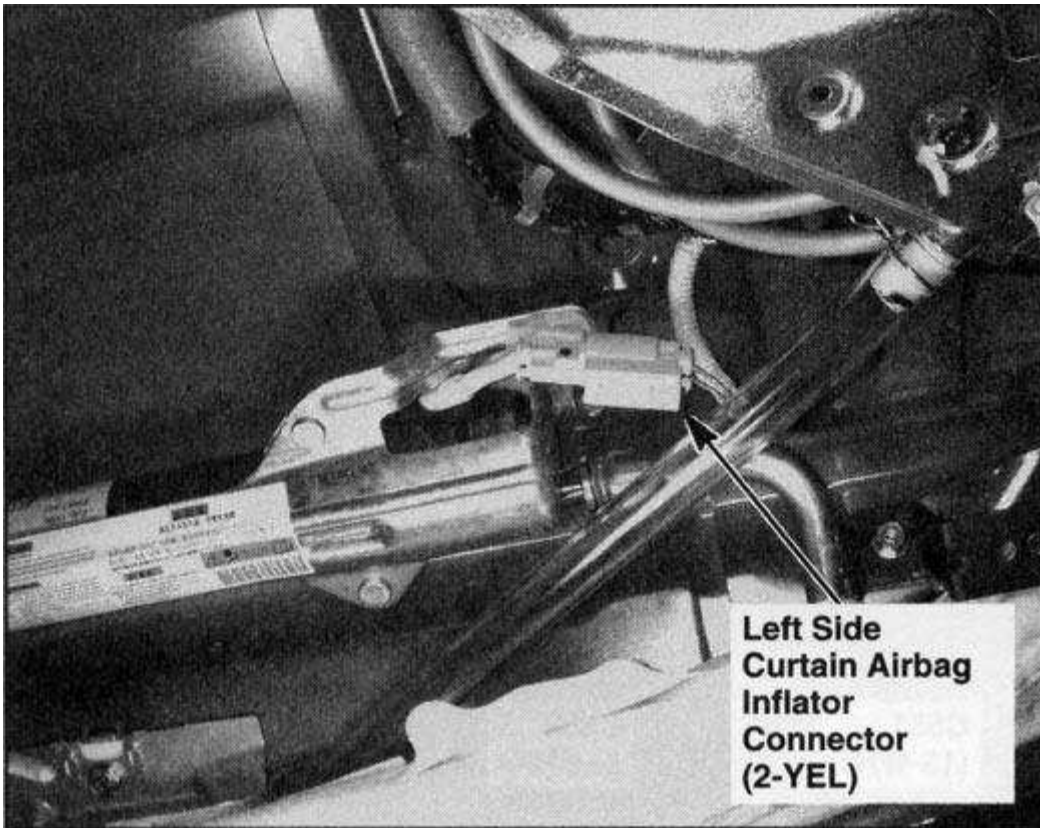


G00263727

Fig. 137: Left Side Of Roof (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

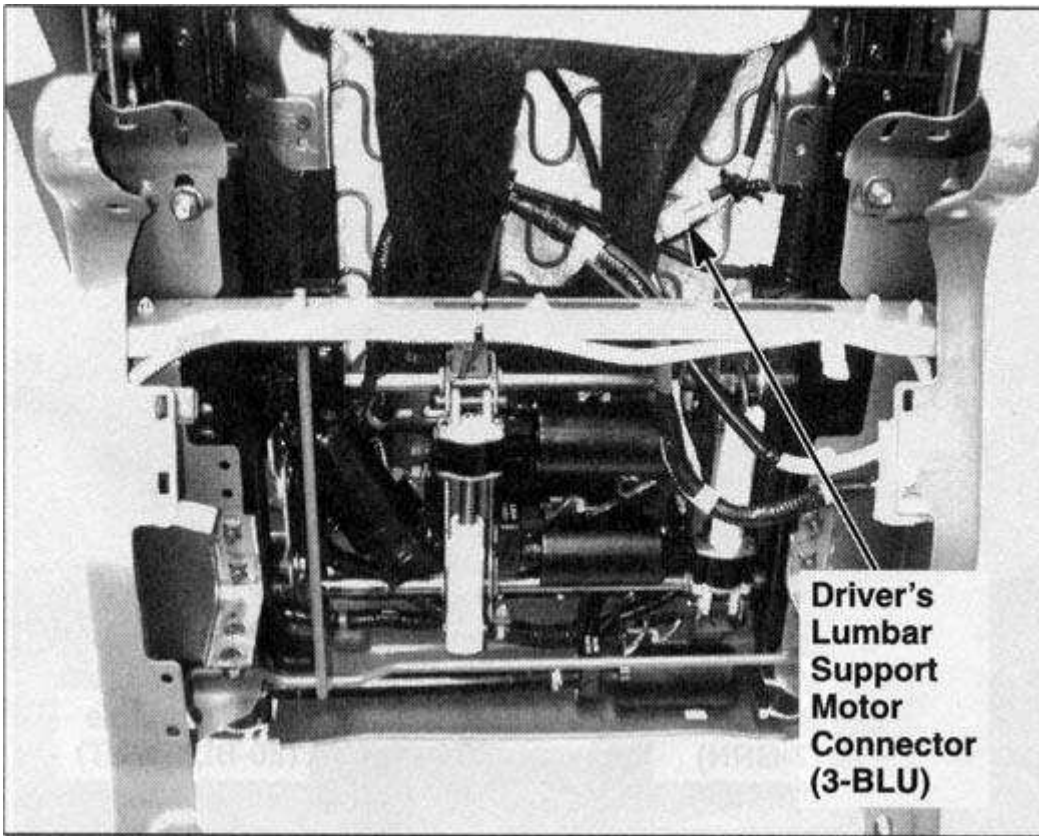

G00263730


Fig. 138: Under Driver's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

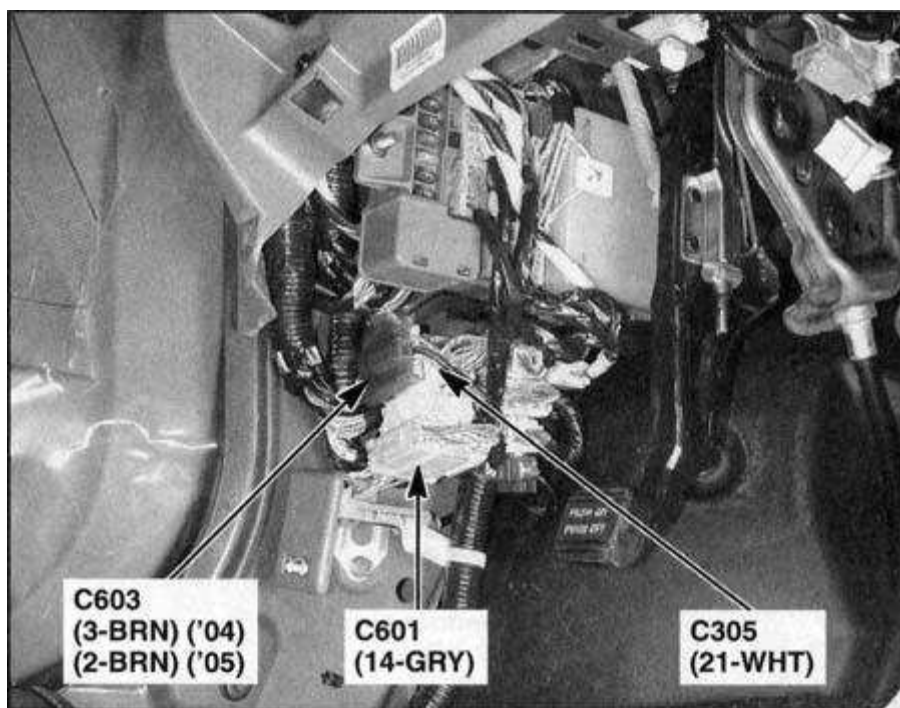

G00360326

Fig. 139: Behind Left Kick Panel


Courtesy of AMERICAN HONDA MOTOR CO., INC.

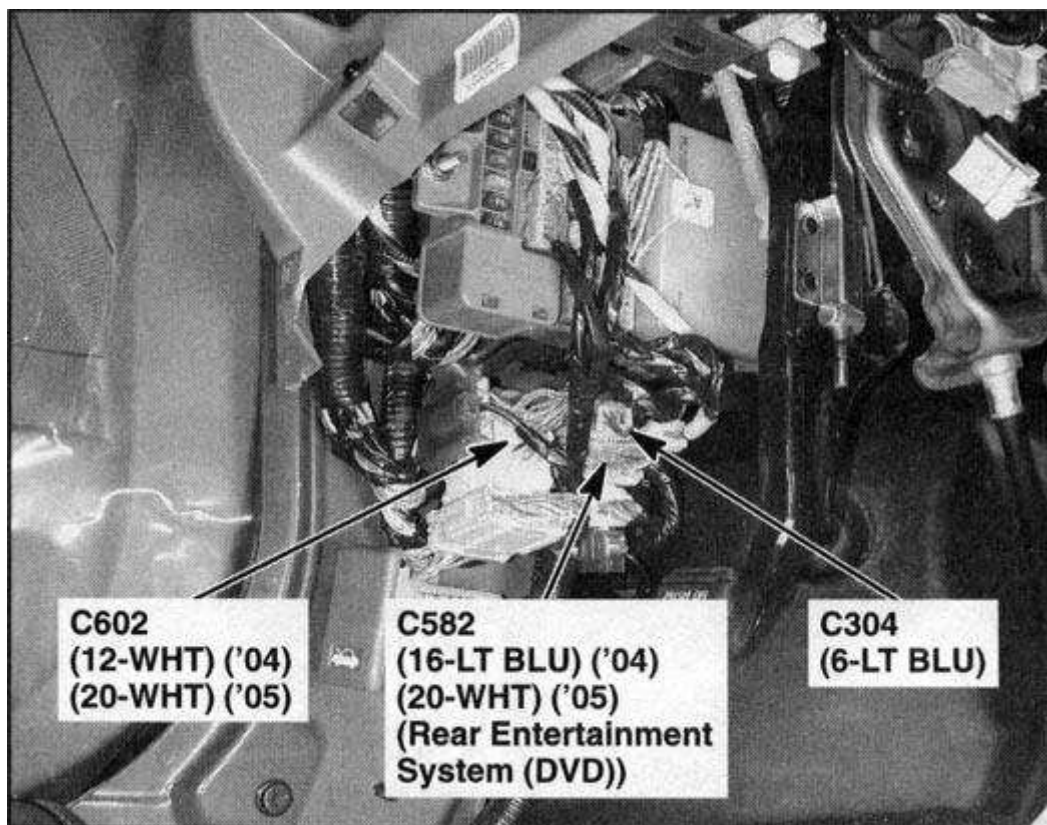

G00360327

Fig. 140: Behind Left Kick Panel


Courtesy of AMERICAN HONDA MOTOR CO., INC.

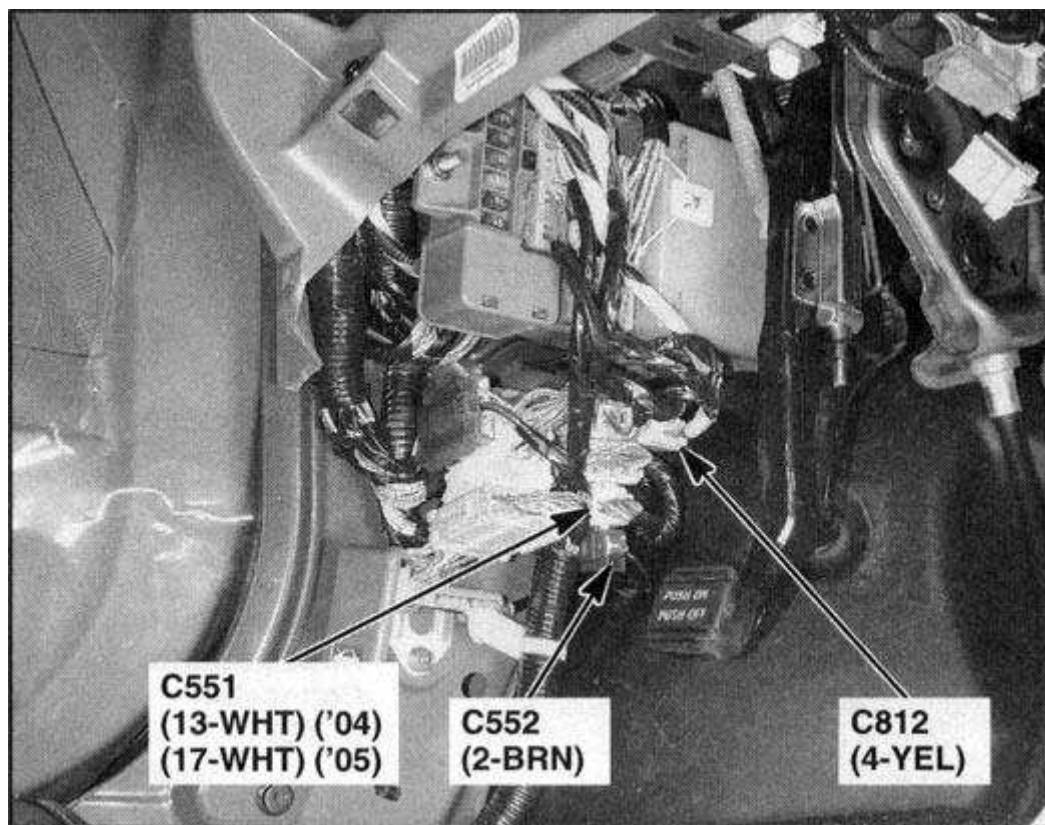

G00360328


Fig. 141: Behind Left Kick Panel

Courtesy of AMERICAN HONDA MOTOR CO., INC.

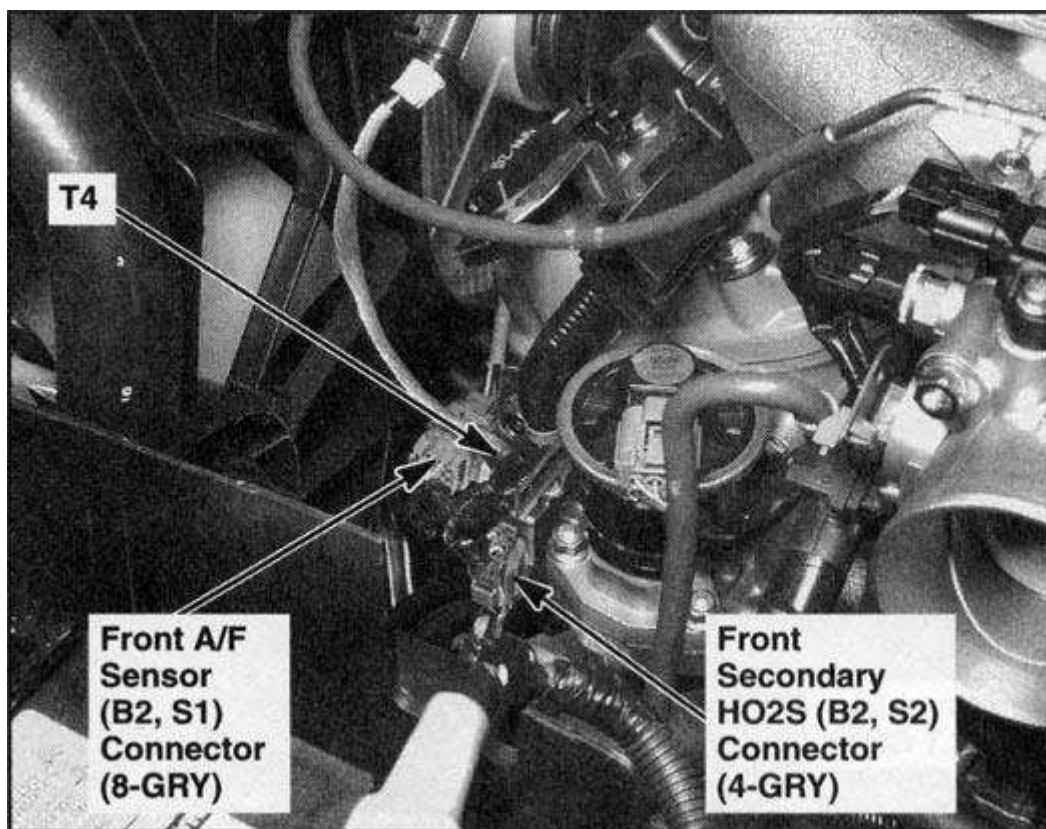

G00267870


Fig. 142: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

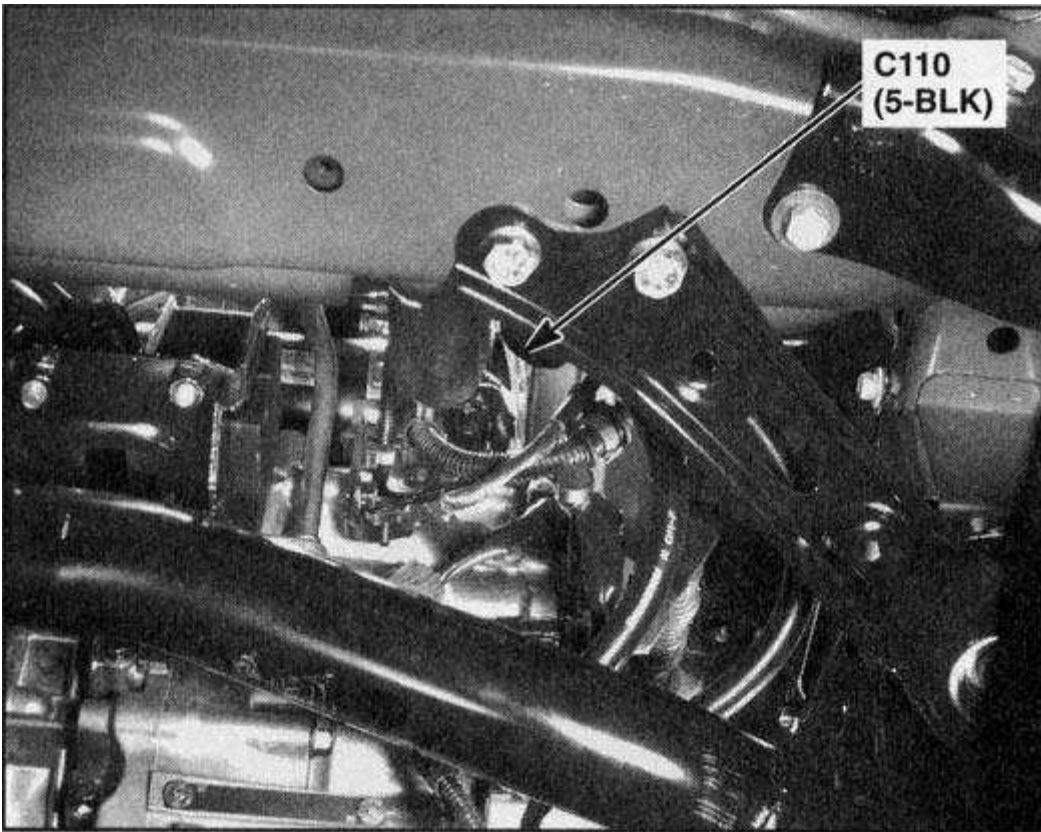

G00263710

Fig. 143: Transmission Housing

Courtesy of AMERICAN HONDA MOTOR CO., INC.

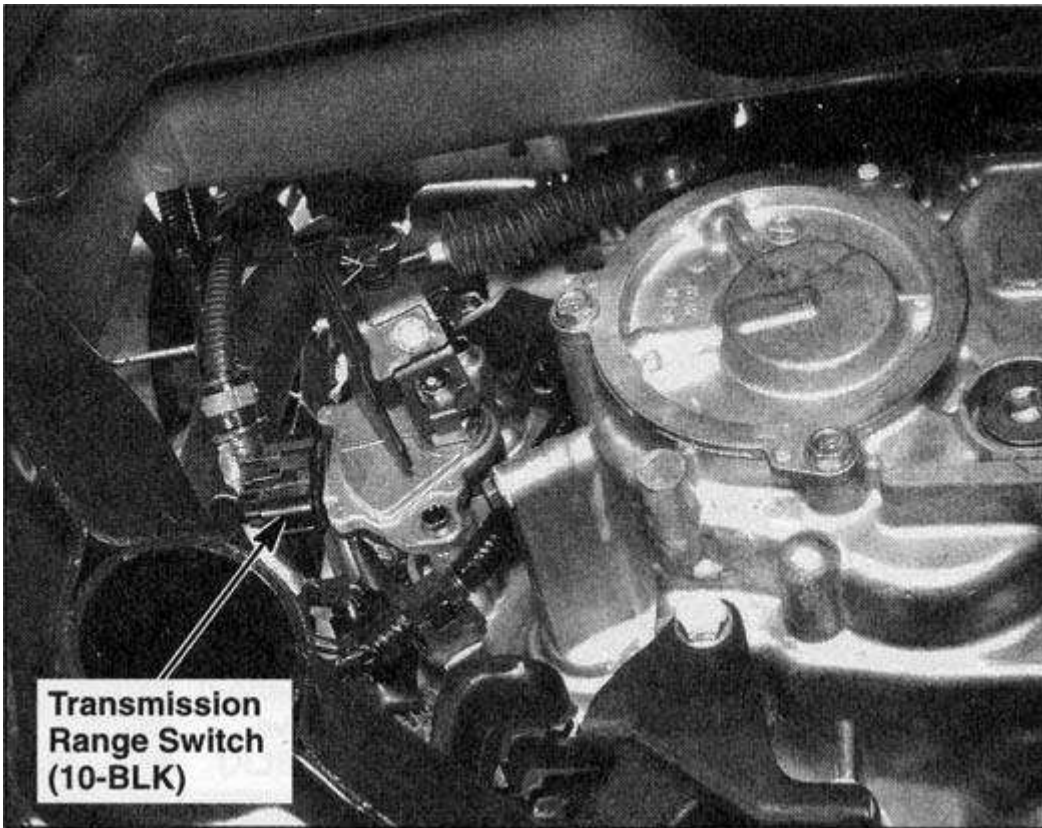


G00263711

Fig. 144: Transmission Housing

Courtesy of AMERICAN HONDA MOTOR CO., INC.

2006 Acura MDX


2006 ACURA MDX

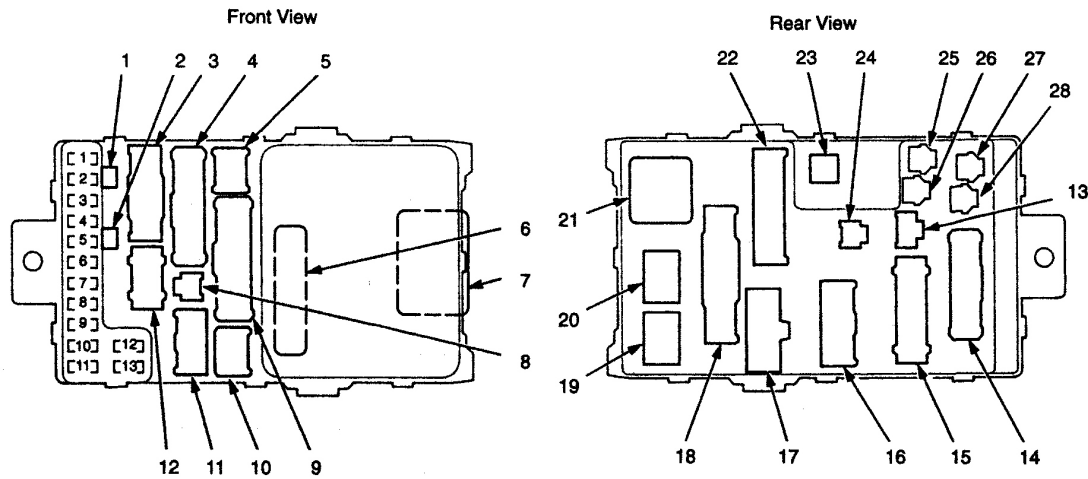

Ref	Socket
1	In-line diode 2
2	In-line diode 1
3	F
4	D
5	G
6	Multiplex control unit connector A
7	Multiplex control unit connector B
8	W
9	H
10	I
11	C
12	E
13	P
14	J
15	K
16	A
17	N
18	L
19	Starter cut relay
20	Reverse relay
21	Turn signal/hazard relay
22	M
23	B
24	V
25	U
26	T
27	S
28	R

G00292062

Fig. 145: Driver's Underdash Fuse/Relay Box
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

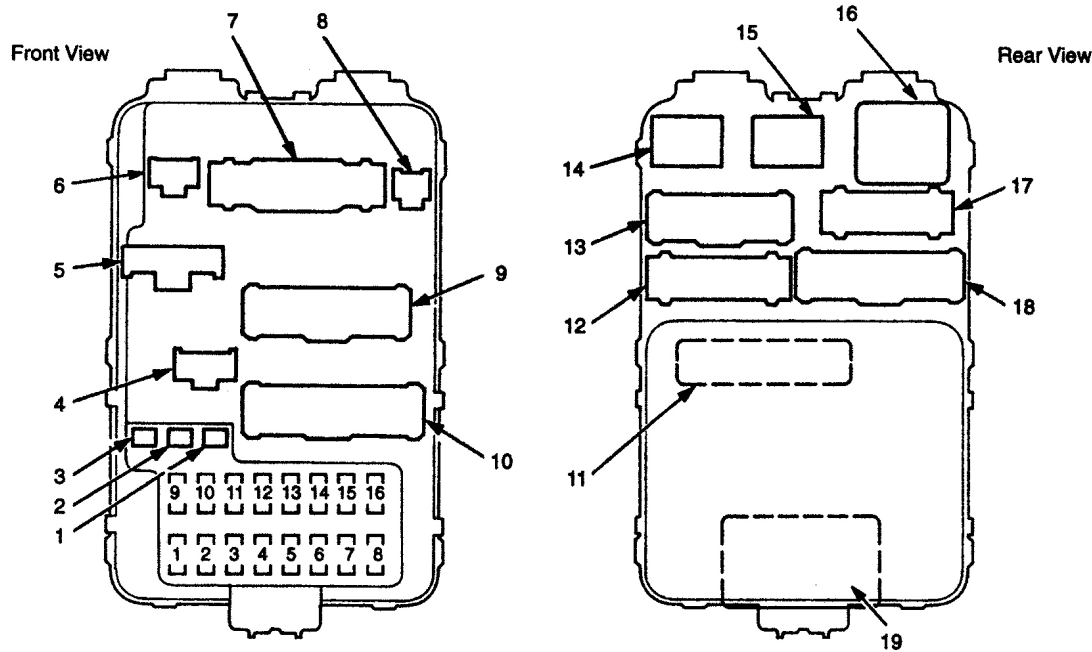


Ref	Socket
1	A/C diode B
2	In-line diode 3
3	In-line diode 4
4	D
5	A
6	K
7	E
8	F
9	B
10	C
11	Multiplex control unit connector A
12	H
13	J
14	Power window relay
15	Accessory power socket relay
16	Rear window defogger relay
17	I
18	G
19	Multiplex control unit connector B

G00292063

Fig. 146: Passenger's Underdash Fuse/Relay Box

Courtesy of AMERICAN HONDA MOTOR CO., INC.

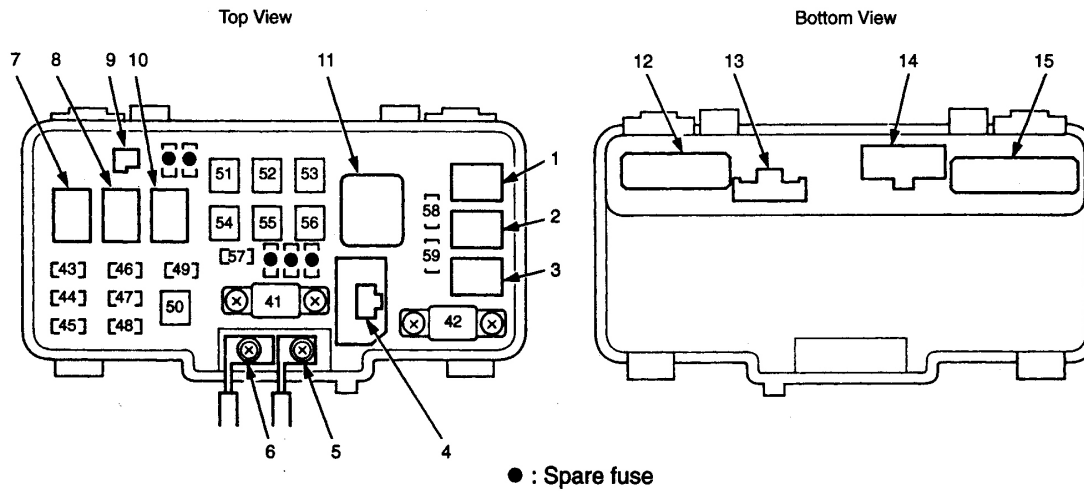


Ref	Socket
1	A/C condenser fan relay
2	Radiator fan relay
3	A/C compressor clutch relay
4	ELD unit
5	T101
6	T1
7	Headlight relay 1
8	Headlight relay 2
9	Diode
10	Horn relay
11	Blower motor relay
12	D
13	C
14	B
15	A

G00292064

Fig. 147: Under-Hood Fuse/Relay Box


Courtesy of AMERICAN HONDA MOTOR CO., INC.

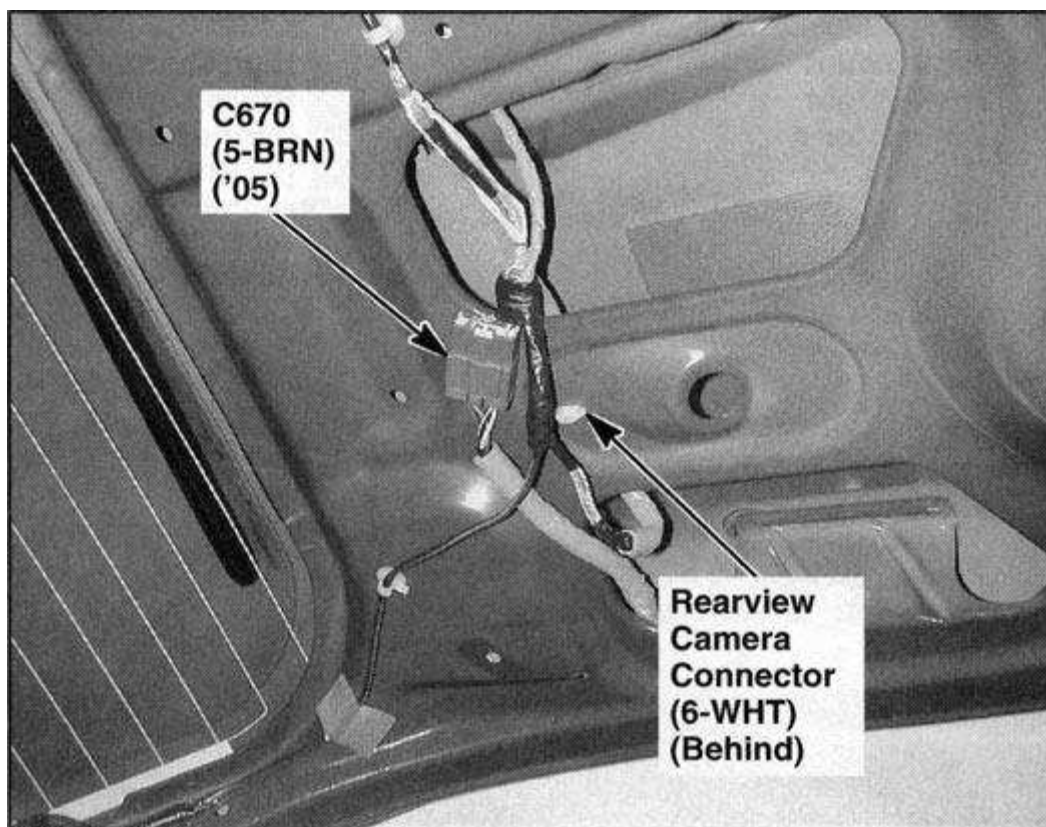

G00360321

Fig. 148: Behind Tailgate Trim Panel


Courtesy of AMERICAN HONDA MOTOR CO., INC.

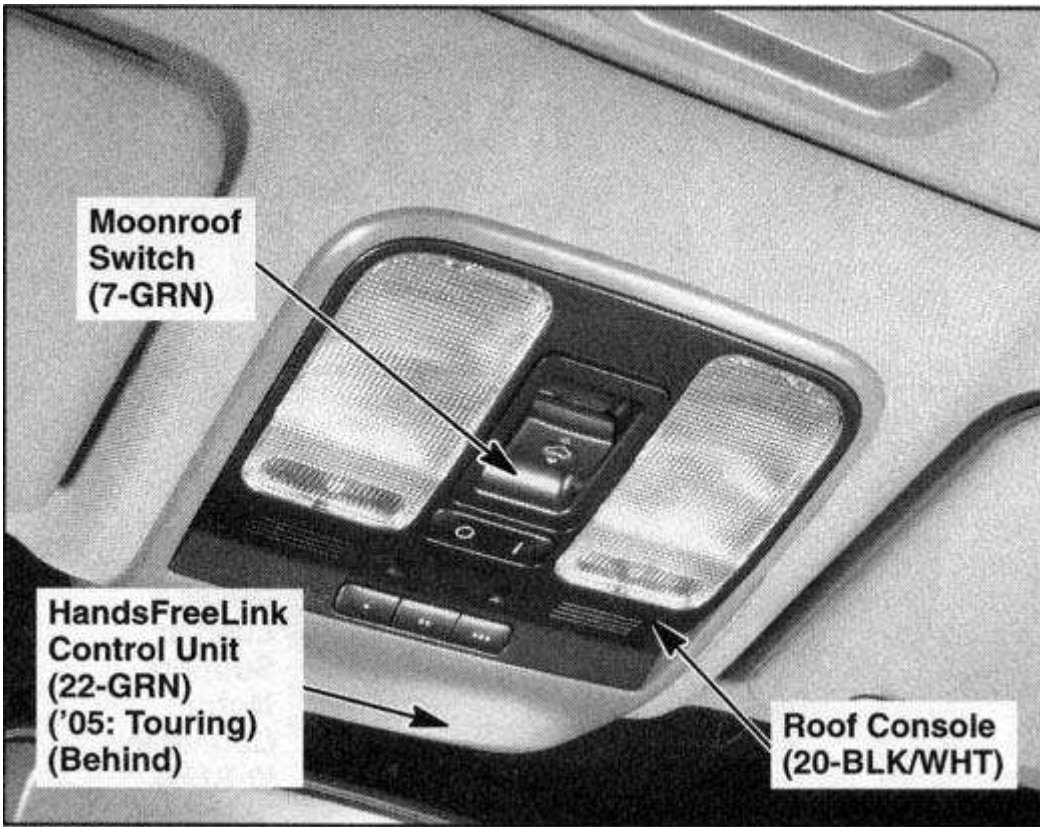

G00360325

Fig. 149: Front Of Roof


Courtesy of AMERICAN HONDA MOTOR CO., INC.

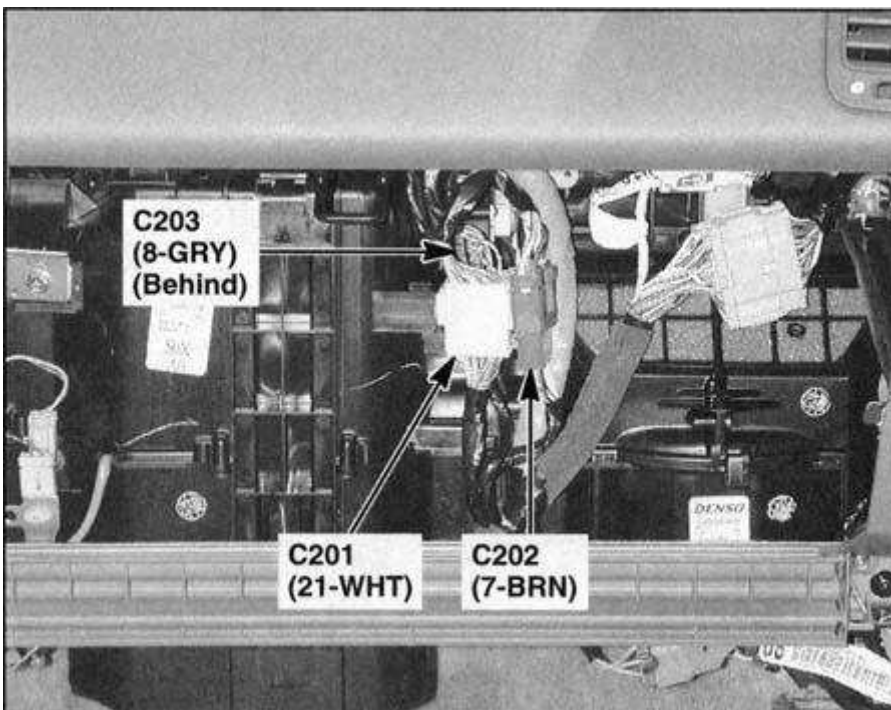

G00360329

Fig. 150: Behind Glove Box


Courtesy of AMERICAN HONDA MOTOR CO., INC.

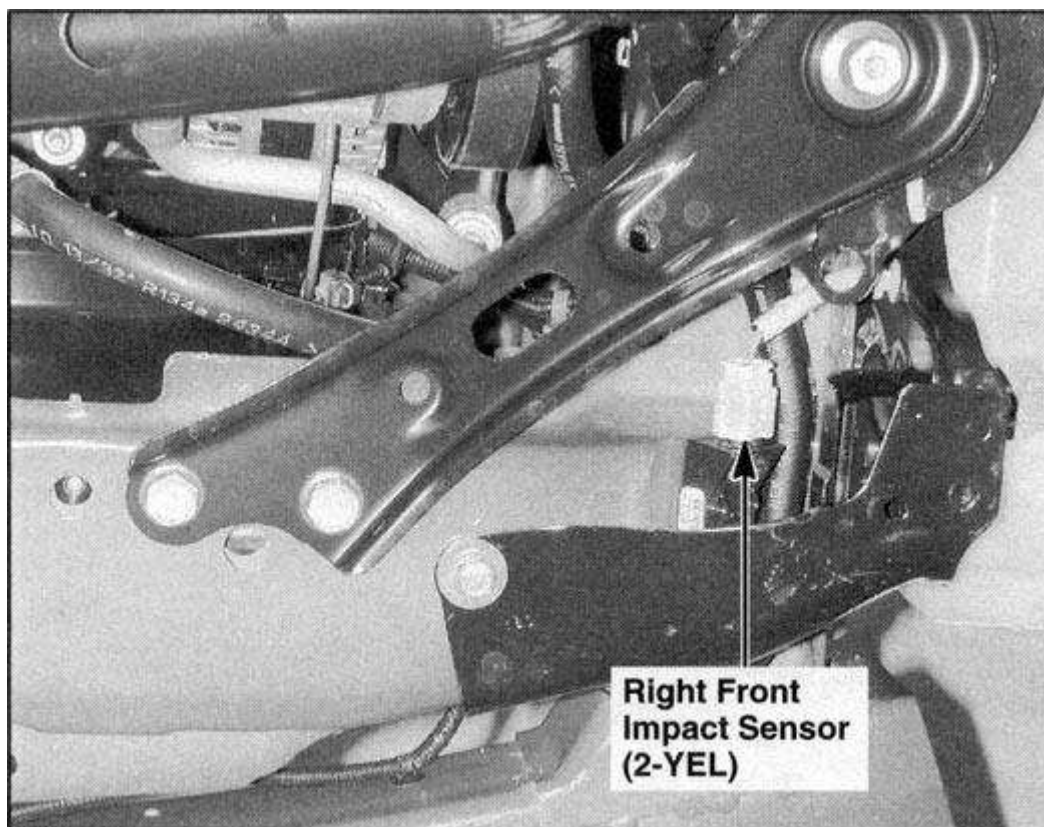

G00360330


Fig. 151: Right Side Of Engine Compartment

Courtesy of AMERICAN HONDA MOTOR CO., INC.

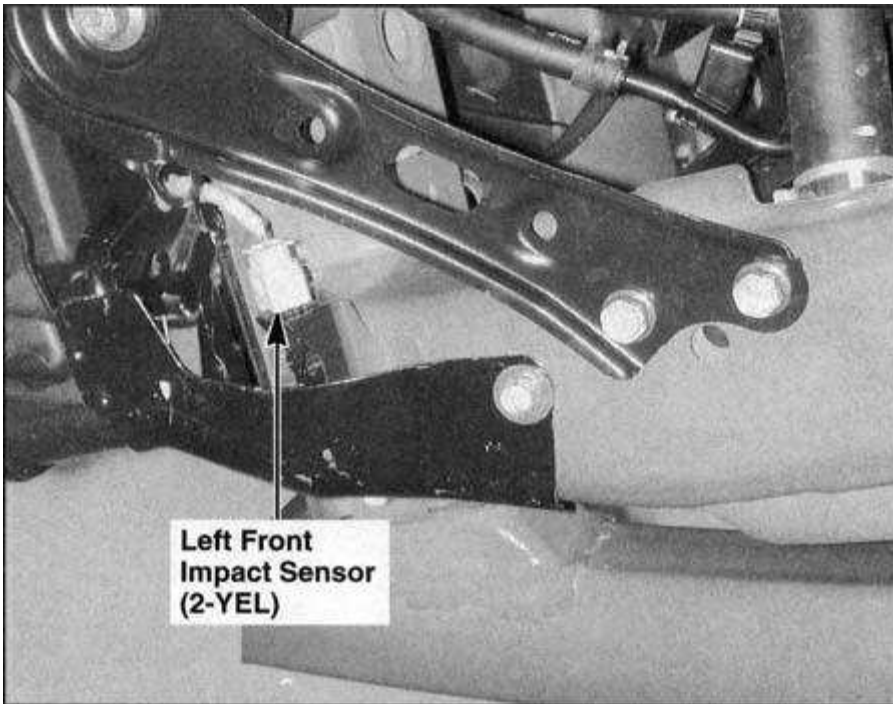

G00360331

Fig. 152: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

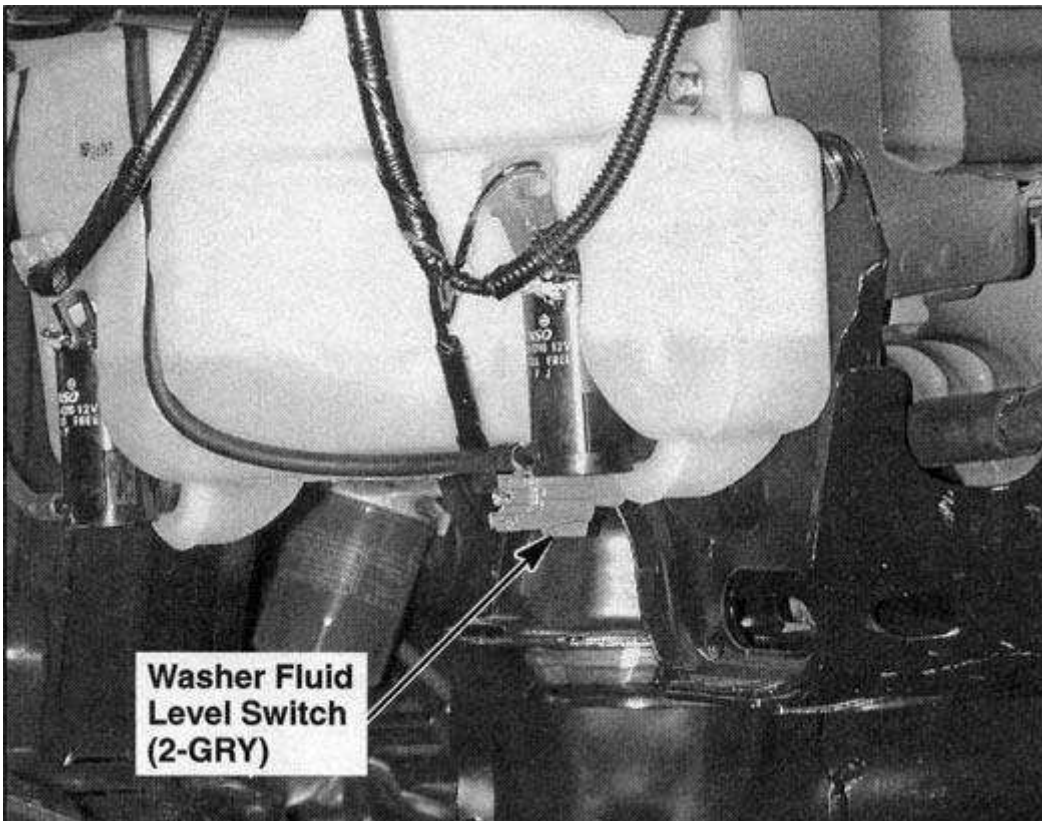

G00360332

Fig. 153: Behind Right Side Of Front Bumper

Courtesy of AMERICAN HONDA MOTOR CO., INC.

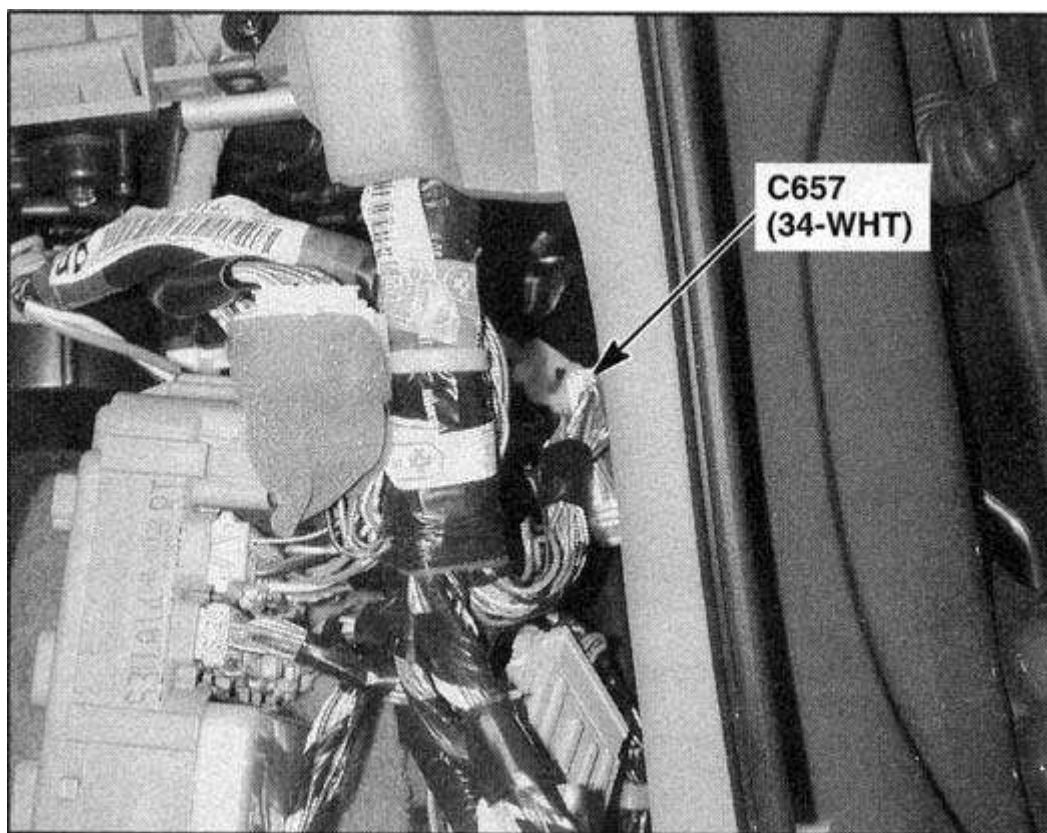



Fig. 154: Behind Right Kick Panel

Courtesy of AMERICAN HONDA MOTOR CO., INC.



G00363375


Fig. 155: Middle Of Right "A" Pillar
Courtesy of AMERICAN HONDA MOTOR CO., INC.

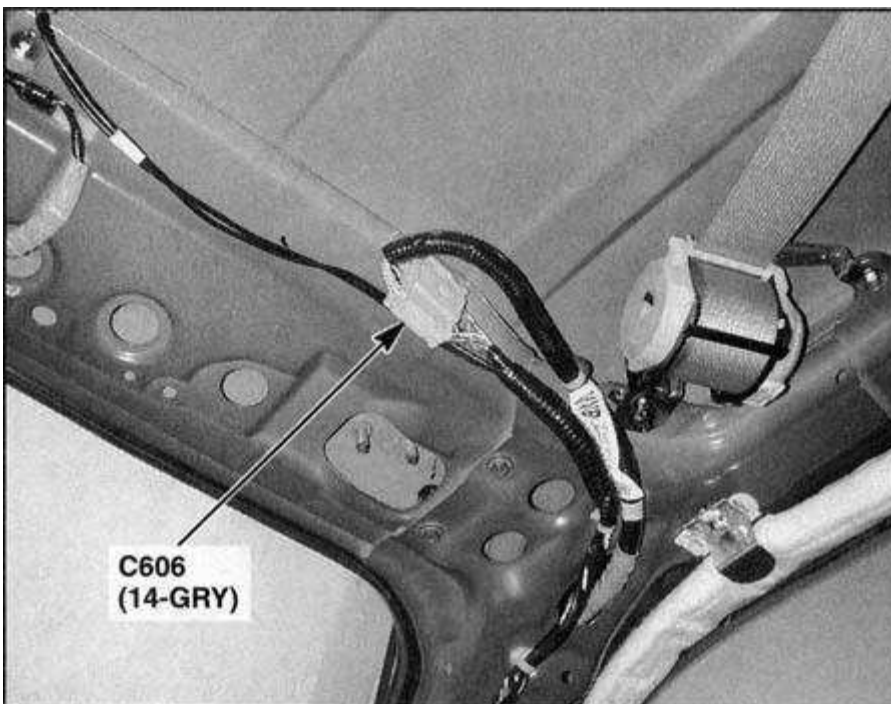

G00363376

Fig. 156: Left Rear Of Roof


Courtesy of AMERICAN HONDA MOTOR CO., INC.

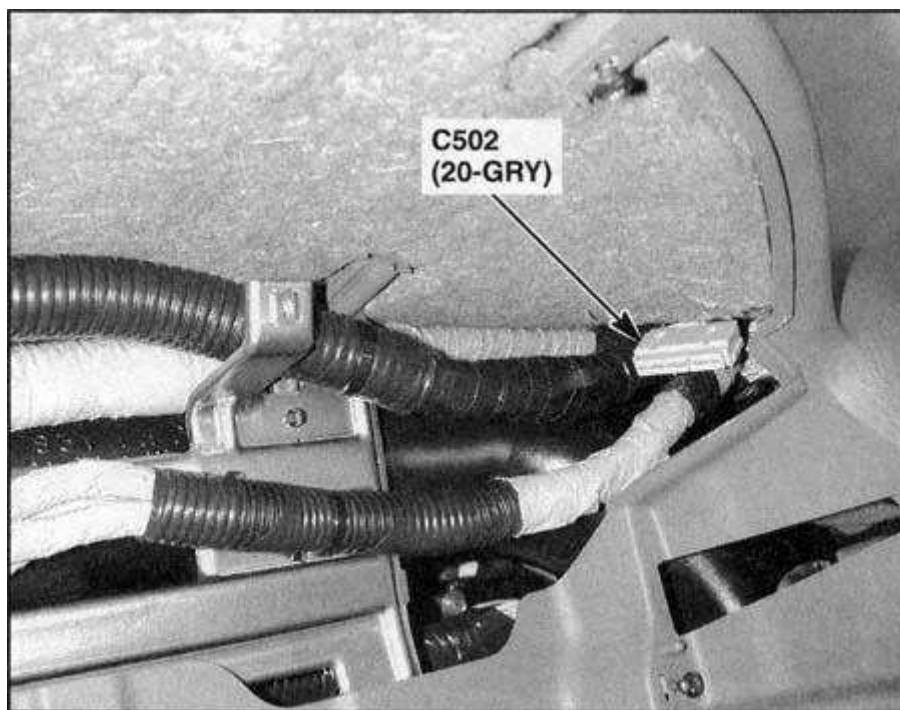

G00363377

Fig. 157: Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

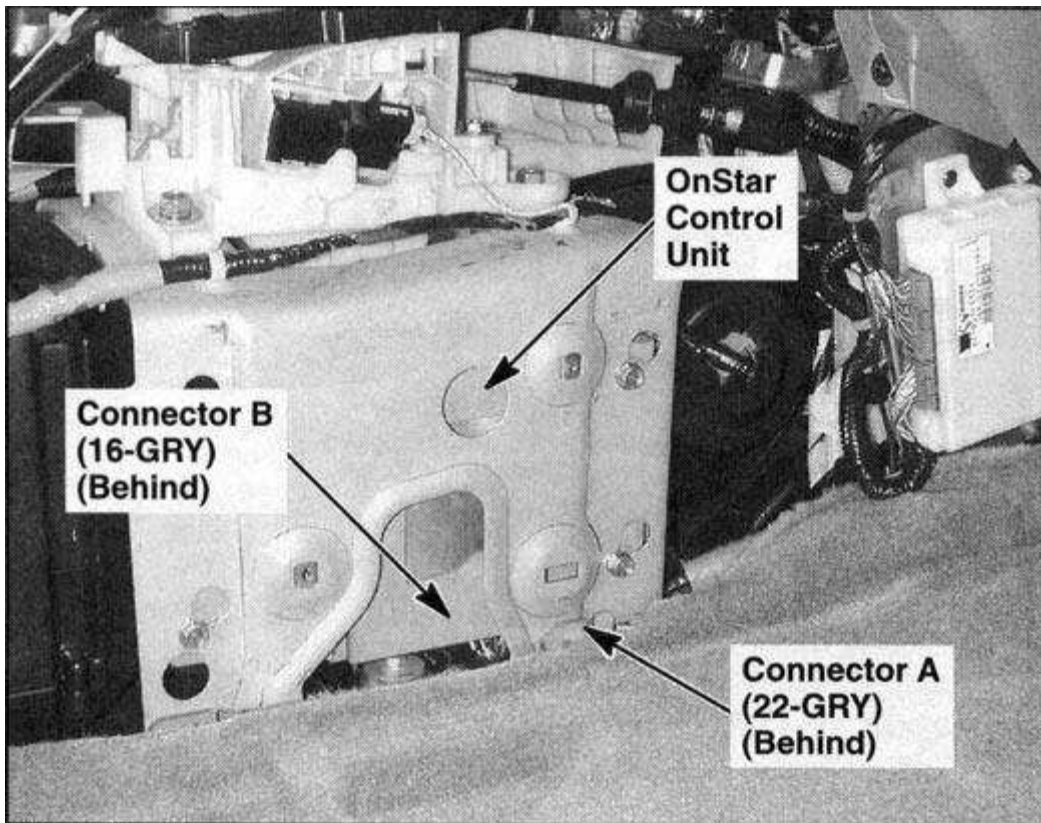

G00363378

Fig. 158: Under Center Console


Courtesy of AMERICAN HONDA MOTOR CO., INC.

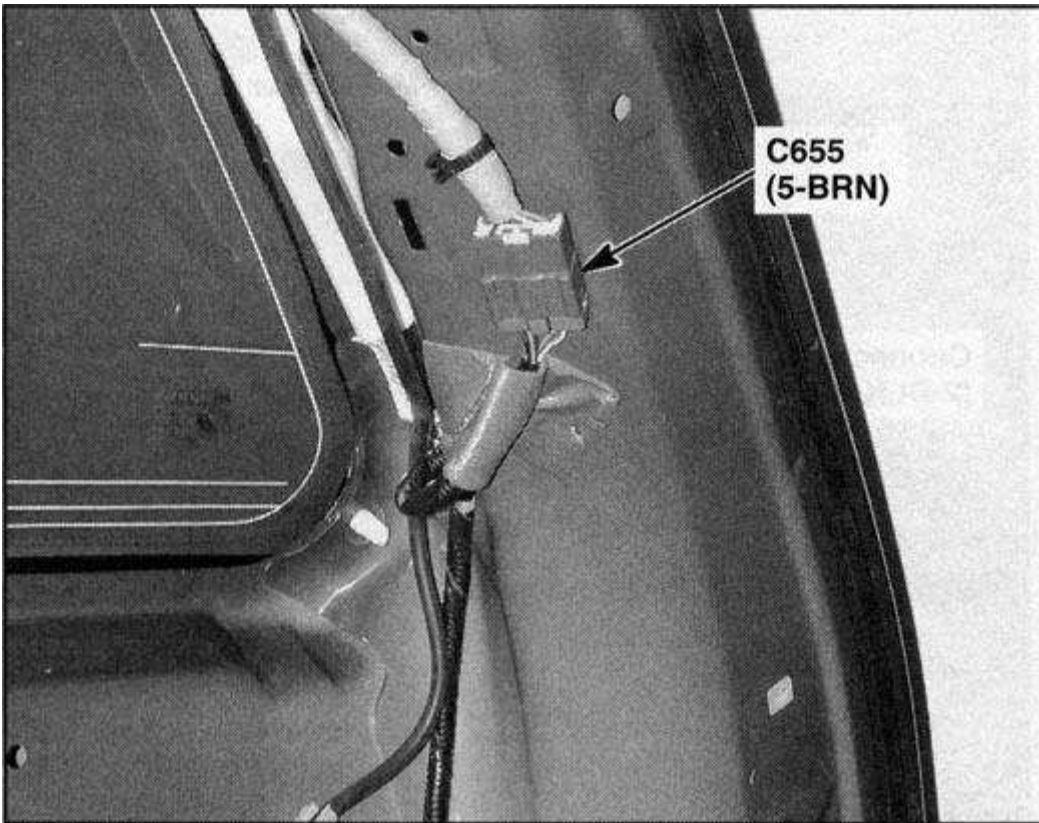

G00363379

Fig. 159: Right "D" Pillar


Courtesy of AMERICAN HONDA MOTOR CO., INC.

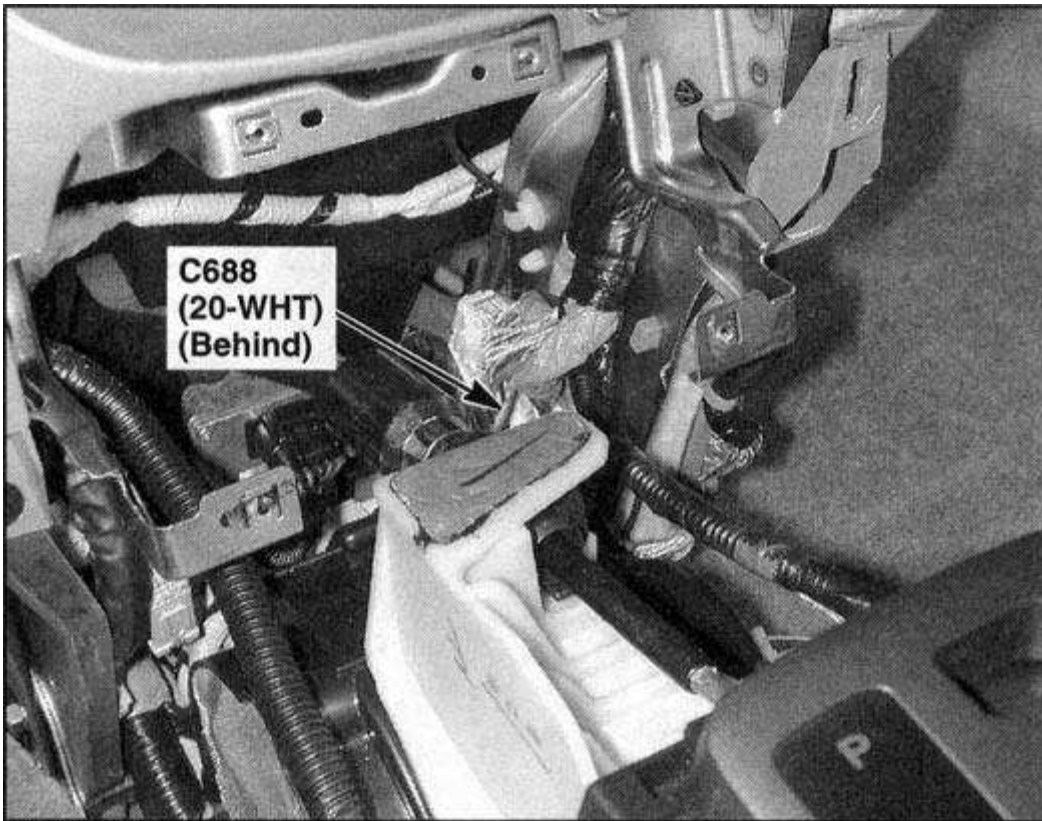

G00363380

Fig. 160: Under Middle Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

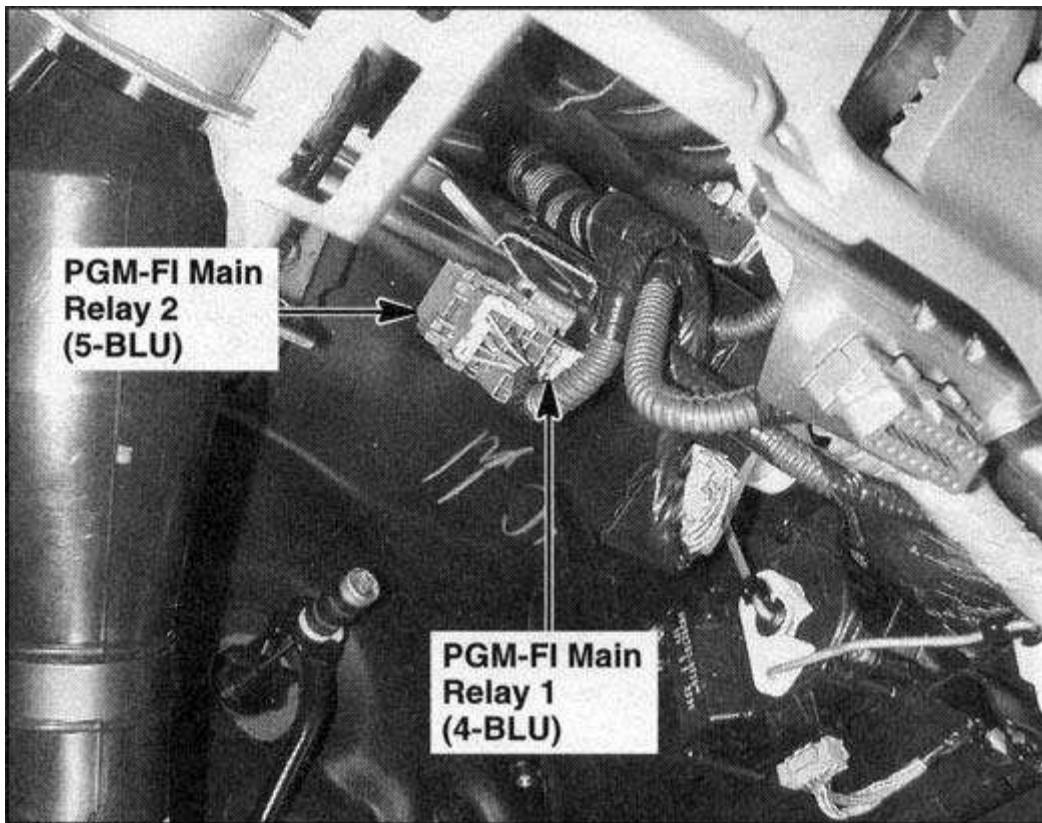

G00363381

Fig. 161: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

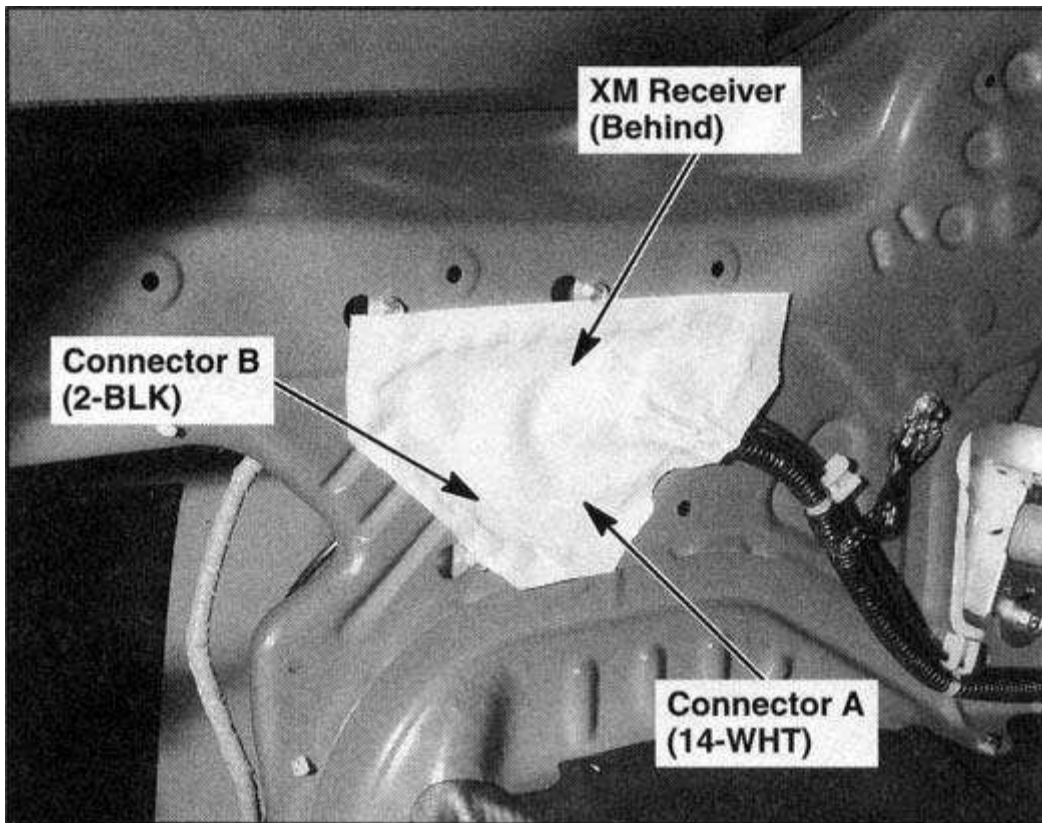

G00363382

Fig. 162: Behind Left Rear Lining


Courtesy of AMERICAN HONDA MOTOR CO., INC.

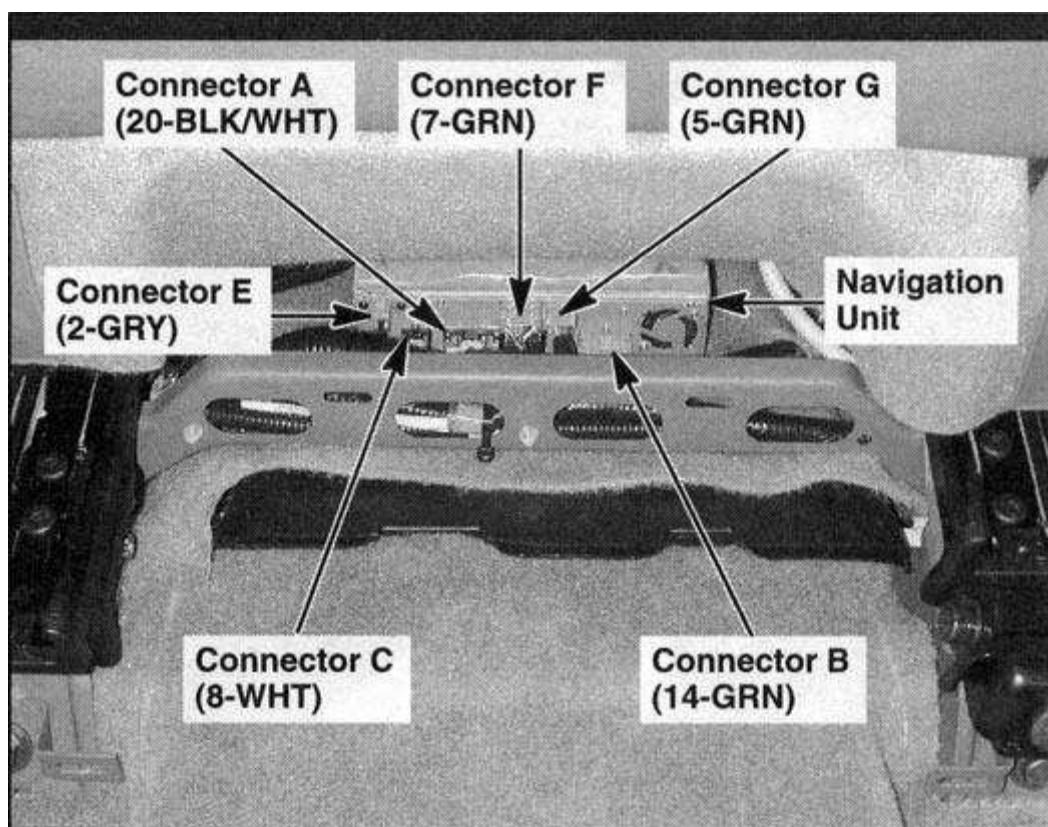

G00363383


Fig. 163: Under Front Passenger's Seat

Courtesy of AMERICAN HONDA MOTOR CO., INC.

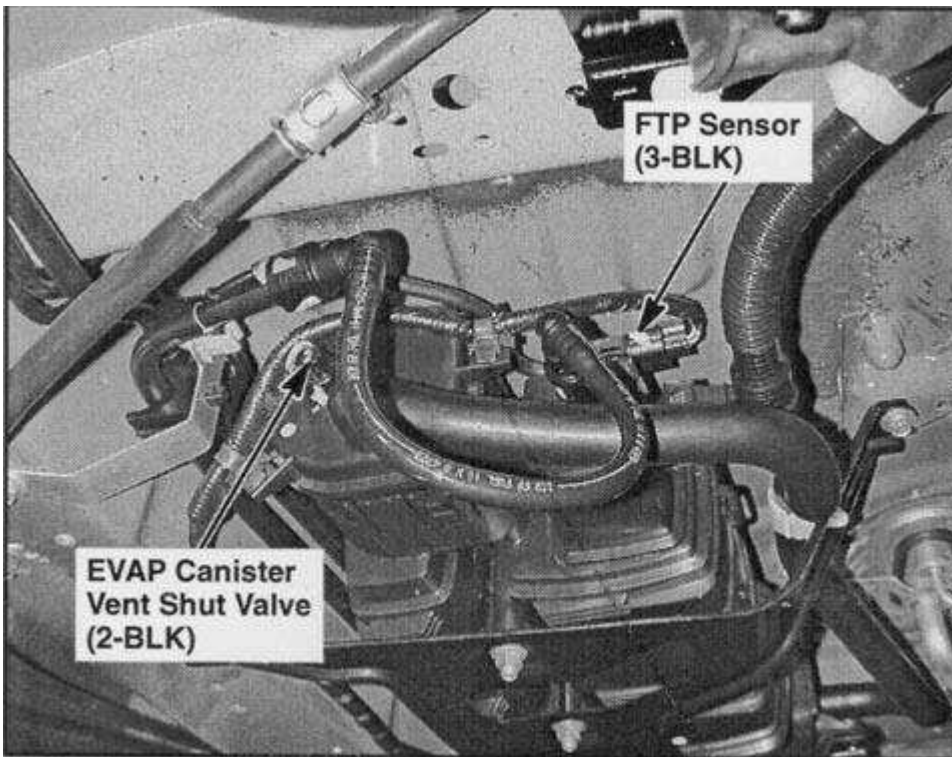


G00363384

Fig. 164: Under Left Side Of Vehicle
Courtesy of AMERICAN HONDA MOTOR CO., INC.

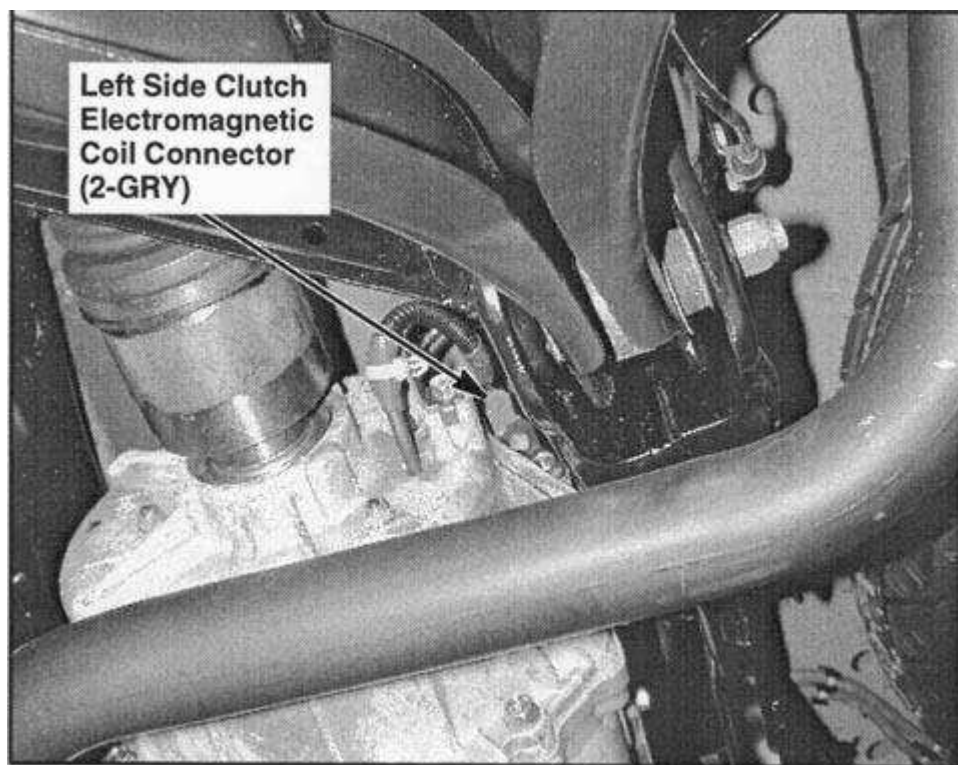

G00363585


Fig. 165: Under Rear Of Vehicle
Courtesy of AMERICAN HONDA MOTOR CO., INC.

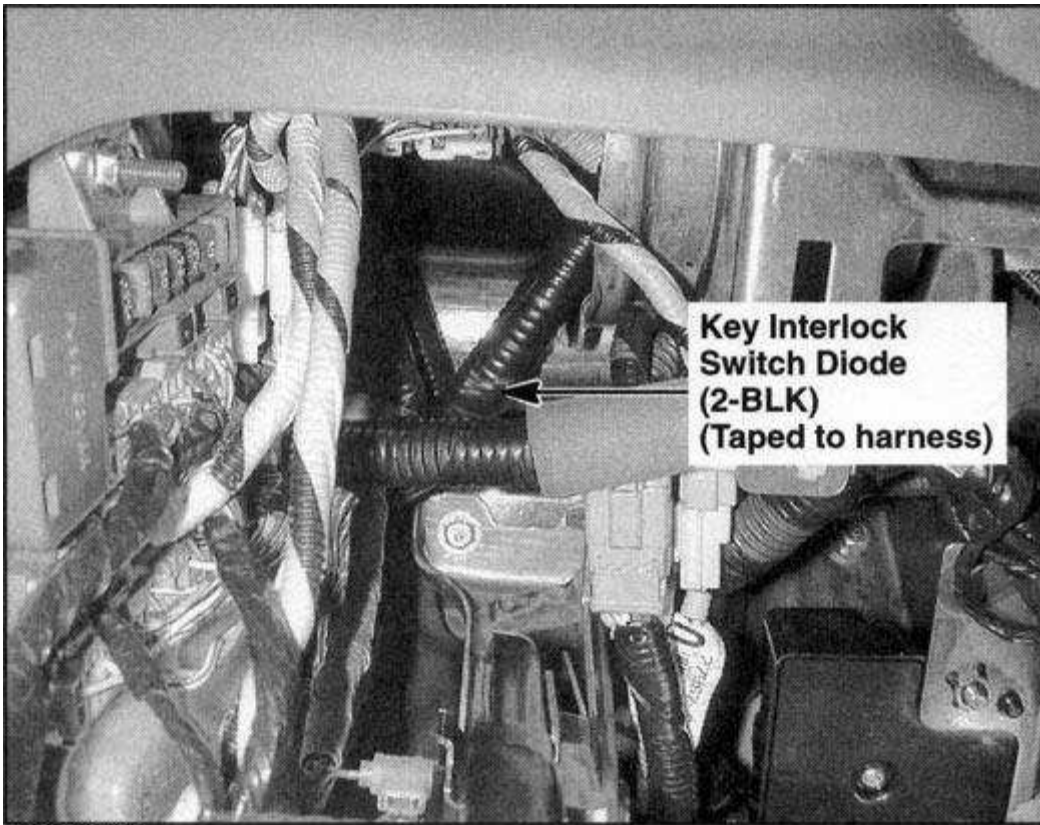

G00363386

Fig. 166: Under Left Side Of Dash


Courtesy of AMERICAN HONDA MOTOR CO., INC.

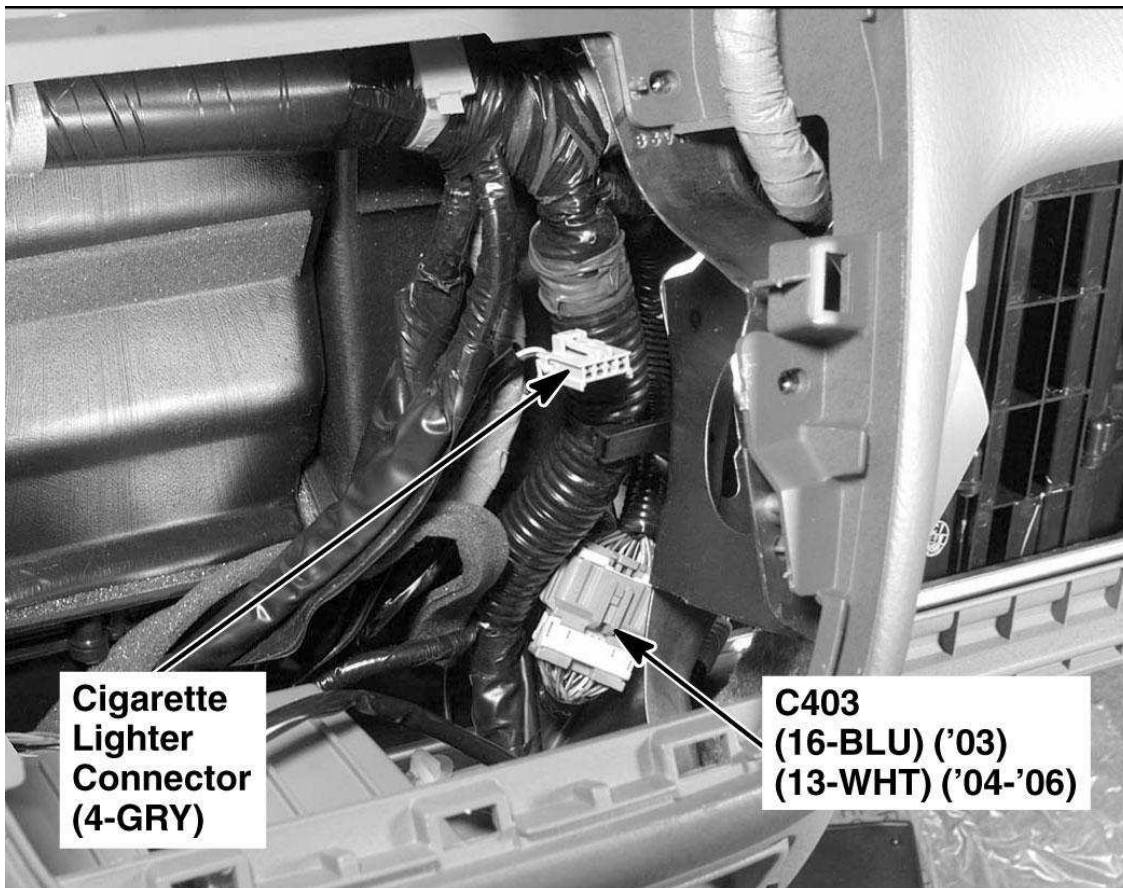

G00434333

Fig. 167: Under Middle Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.

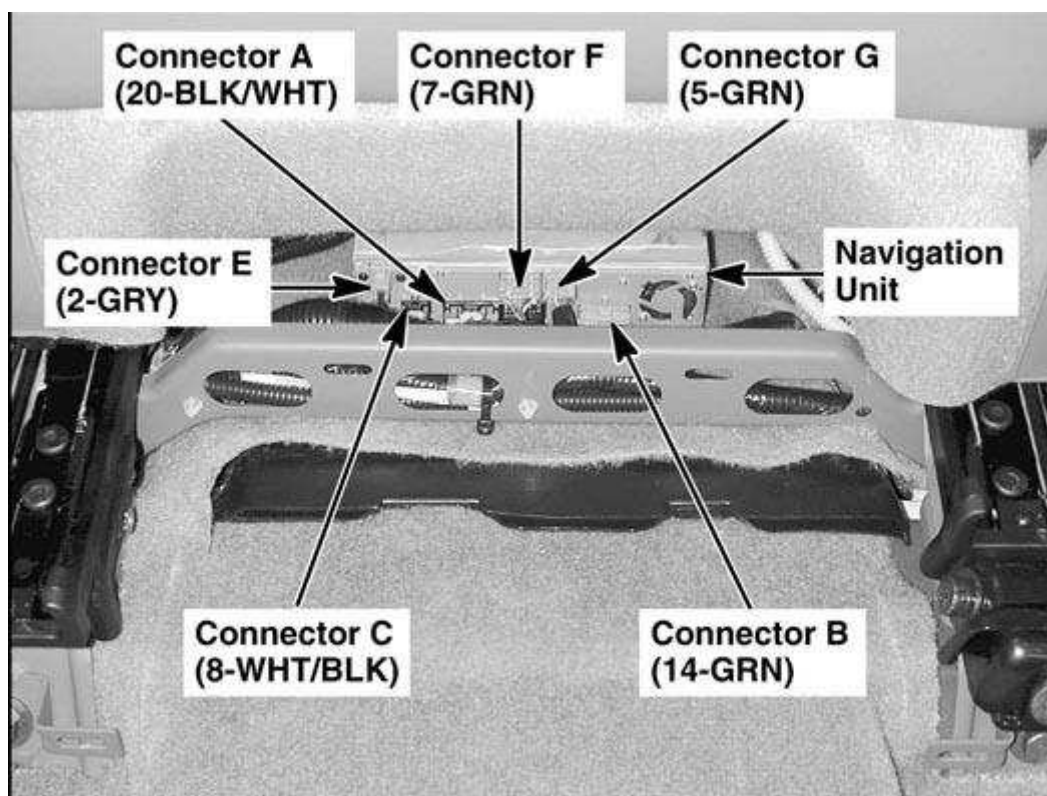

G00434334

Fig. 168: Under Front Passenger's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.