

2003-06 ACCESSORIES & EQUIPMENT

Fenderwell - MDX


FRONT INNER FENDER REPLACEMENT

NOTE: Take care not to scratch the body.

1. Remove the front inner fender (A).
 - 1 Remove the screws (B), then remove the front splash guard (C).
 - 2 Remove the bolts (D) securing the front bumper (E) and front inner fender.
 - 3 Remove the clips (F, G) securing the front inner fender (and splash shield (H)) on the body.
 - 4 Remove the front inner fender.

Fastener Locations

B ▶ : Screw, 5 D ▶ : Bolt, 2 F ▶ : Clip, 1 G ▶ : Clip, 13

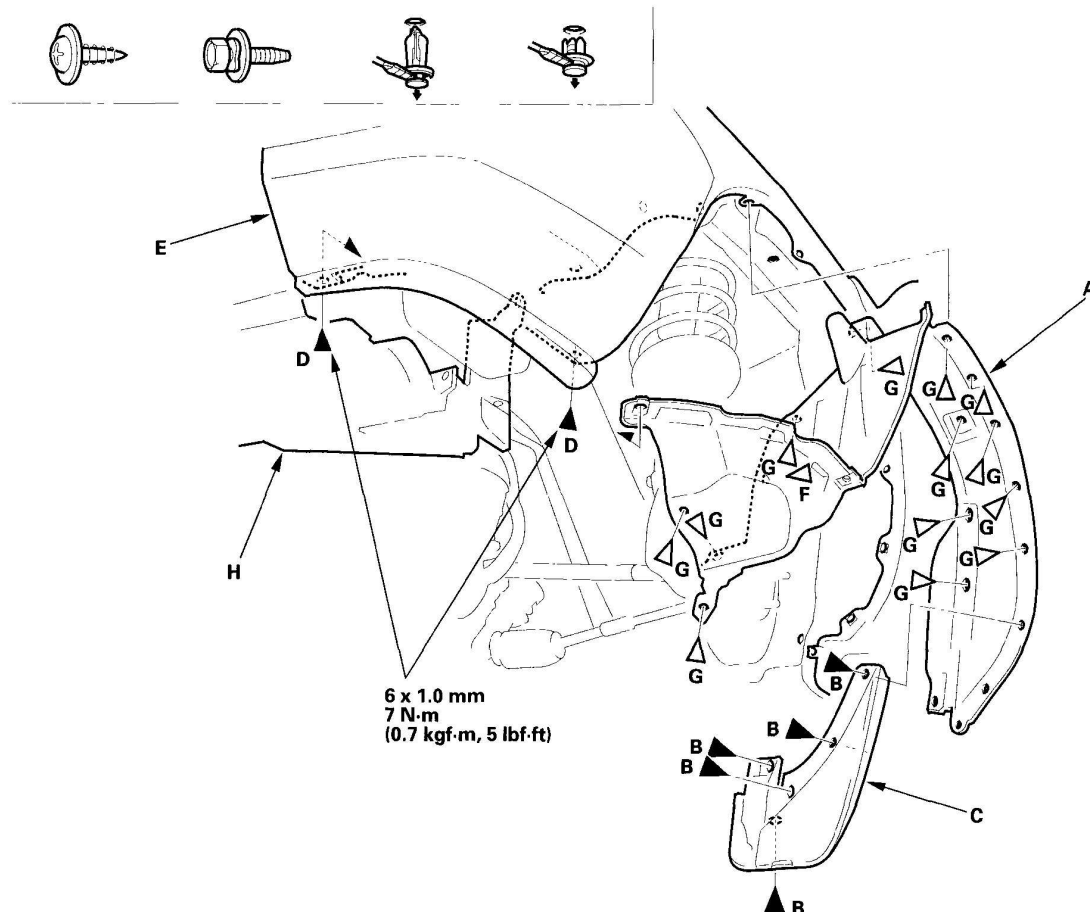

G03641774

Fig. 1: Removing Front Inner Fender

2006 Acura MDX
2003-06 ACCESSORIES & EQUIPMENT Fenderwell - MDX

Courtesy of AMERICAN HONDA MOTOR CO., INC.


2. Install the inner fender in the reverse order of removal, and note these items:
 - Check the clips for damage or stress-whitening, and replace them with new one.
 - Push the clips into place securely.

FRONT FENDER FAIRING REPLACEMENT

1. Remove the front inner fender as necessary (see **FRONT INNER FENDER REPLACEMENT**).
2. Open the front door. From inside the door, remove the clips securing the front fender fairing (A).

Fastener Locations

▷ : Clip, 2

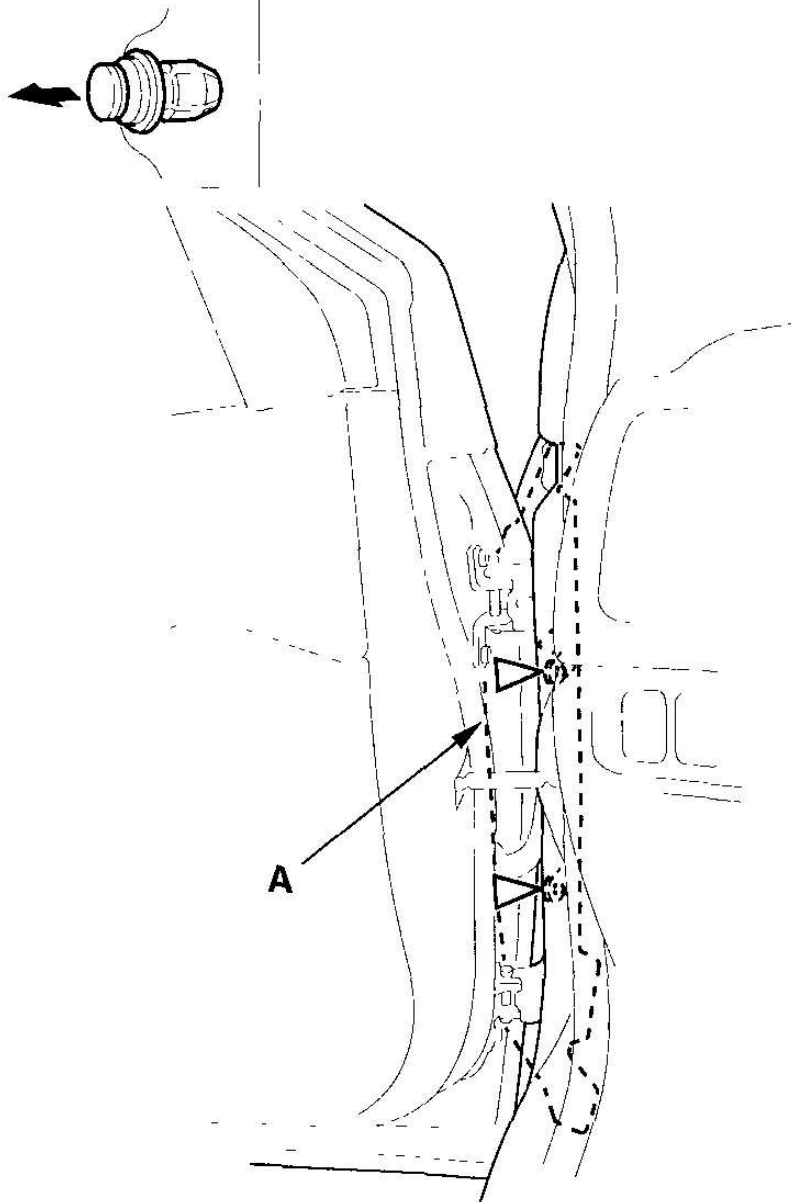


G03641775

Fig. 2: Removing Clips Securing Front Fender Fairing From Inside Door
Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. From the wheel arch, release the clip, then remove the front fender fairing (A).

Fastener Locations

▷ : Clip, 2

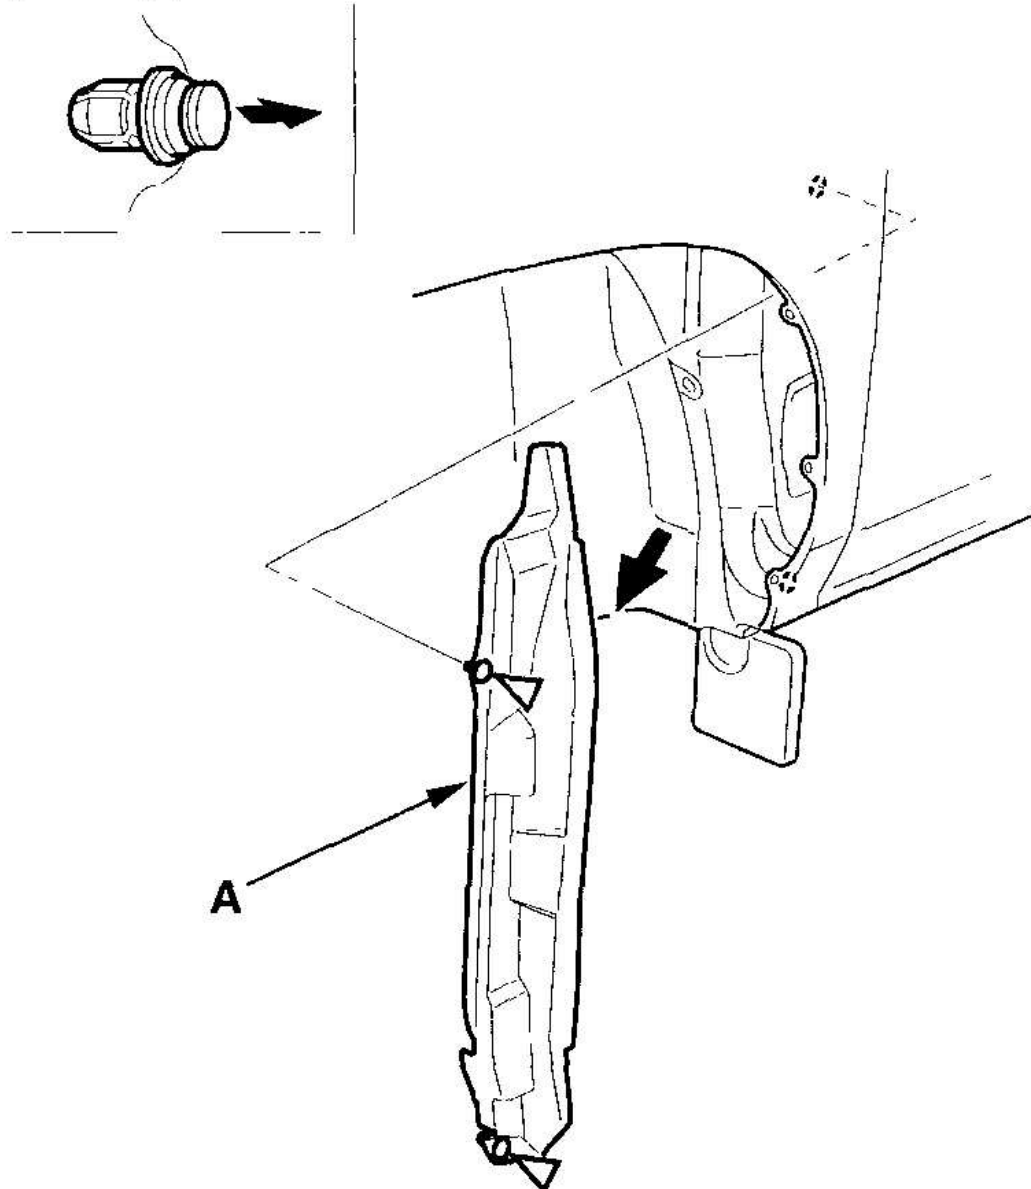

G03641776

Fig. 3: Removing Clips Securing Front Fender Fairing From Wheel Arch
Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Install the fender fairing in the reverse order of removal, and note these items:
 - Check the clips for damage or stress-whitening, and replace them with new one.
 - Push the clips into place securely.

 
 
REAR FENDER COVER REPLACEMENT

NOTE: **Take care not to scratch the rear fender cover and body.**



1. Remove the rear wheel (see step 1 in **KNUCKLE/HUB/WHEEL BEARING REPLACEMENT**).
2. Remove the rear fender cover (A).
 - 1 Remove the screws (B), then remove the splash guard (C).
 - 2 Remove the screws (D) securing the rear bumper (E) and rear fender cover.
 - 3 Remove the bolts (F), and clips (G), then remove the rear fender cover.

Fastener Locations

B▶ : Screw, 3 **D▶** : Screw, 1 **F▶** : Bolt, 6



G▶ : Clip, 2

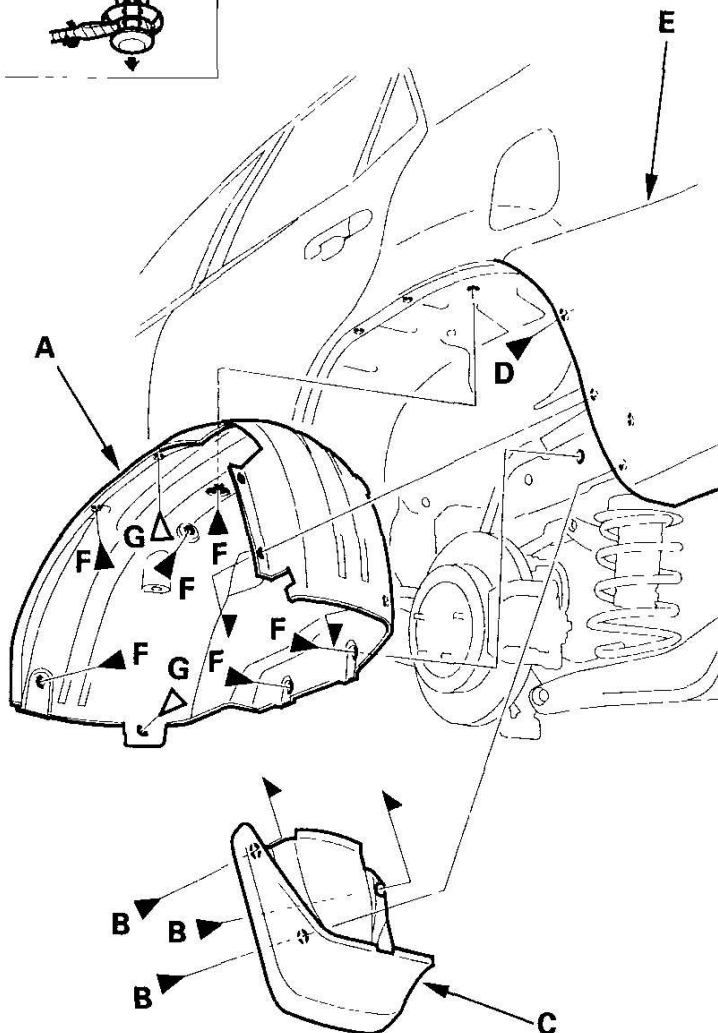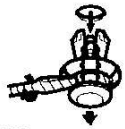

G03641777

Fig. 4: Removing Rear Fender Cover

Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Install the rear fender cover in the reverse order of removal, and note these items:

2006 Acura MDX


2003-06 ACCESSORIES & EQUIPMENT Fenderwell - MDX

- Check the clips for damage or stress-whitening, and replace them with new one.
- Push the clips into place securely.

FENDERWELL TRIM REPLACEMENT

1. Remove the fenderwell trim (A) by pulling it out.

NOTE: **The steel core (B) in the fenderwell trim cannot be restored to its original shape once it is bent. Replace the fenderwell trim when the steel core is bent.**

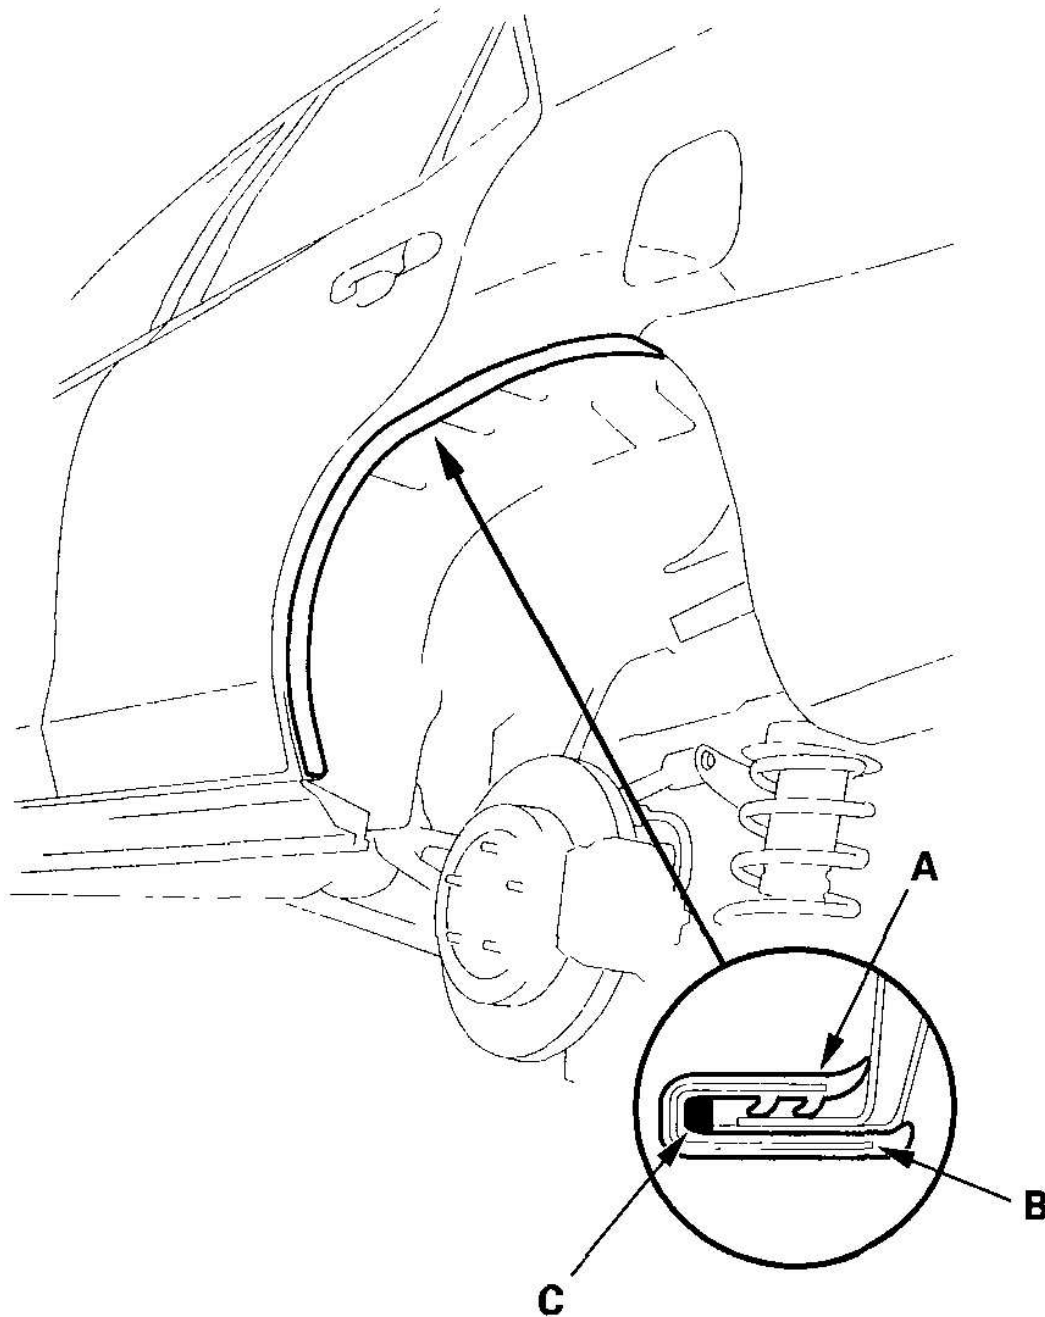

G03641778

Fig. 5: Removing Fenderwell Trim

Courtesy of AMERICAN HONDA MOTOR CO., INC.

2. Clean the body bonding surface with a sponge dampened in alcohol. After cleaning, keep oil, grease and

2006 Acura MDX

2003-06 ACCESSORIES & EQUIPMENT Fenderwell - MDX

water from getting on the clean surface.

3. Apply clear sealant (C) into the channel of the fenderwell trim from end to end.

Sealant: Cemedines P/N 08712-0004, or equivalent


4. Install the fenderwell trim.
5. Scrape or wipe the excess sealant off with a towel. To remove sealant from a painted surface, wipe with a soft shop towel dampened in alcohol.

REAR AIR OUTLET REPLACEMENT

1. Remove the rear bumper, '03 model (see '**03 MODEL** '), '04-06 models (see '**04-06 MODELS** ').
2. Detach the hooks (A), then remove the rear air outlet (B). Take care not to scratch the body.

NOTE:

- '**03-04 models have an outlet on the driver's side.**
- '**06 model has an outlet on both sides of the vehicle.**

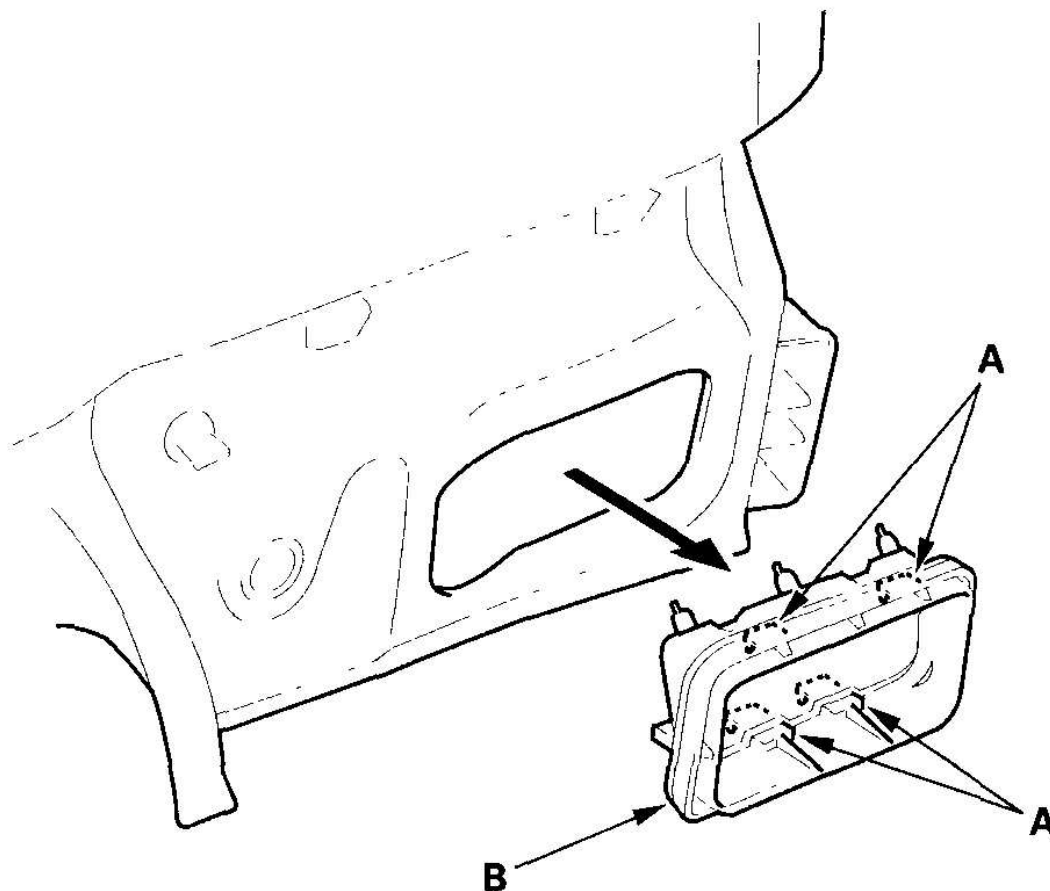

G03641779

Fig. 6: Removing Rear Air Outlet

Courtesy of AMERICAN HONDA MOTOR CO., INC.



3. Install the rear air outlet in the reverse order of removal.

LEFT FRONT SPLASH GUARD REINFORCEMENT REPLACEMENT

1. Remove these items:
 - Left front splash guard (see **SIDE SILL PANEL REPLACEMENT**)
 - Left inner fender, as necessary (see **SIDE SILL PANEL REPLACEMENT**)
 - Left side sill panel (see **SIDE SILL PANEL REPLACEMENT**)
2. Remove the bolts, then remove the left front splash guard reinforcement (A). Take care not to scratch the body.

Fastener Locations

► : Bolt, 3

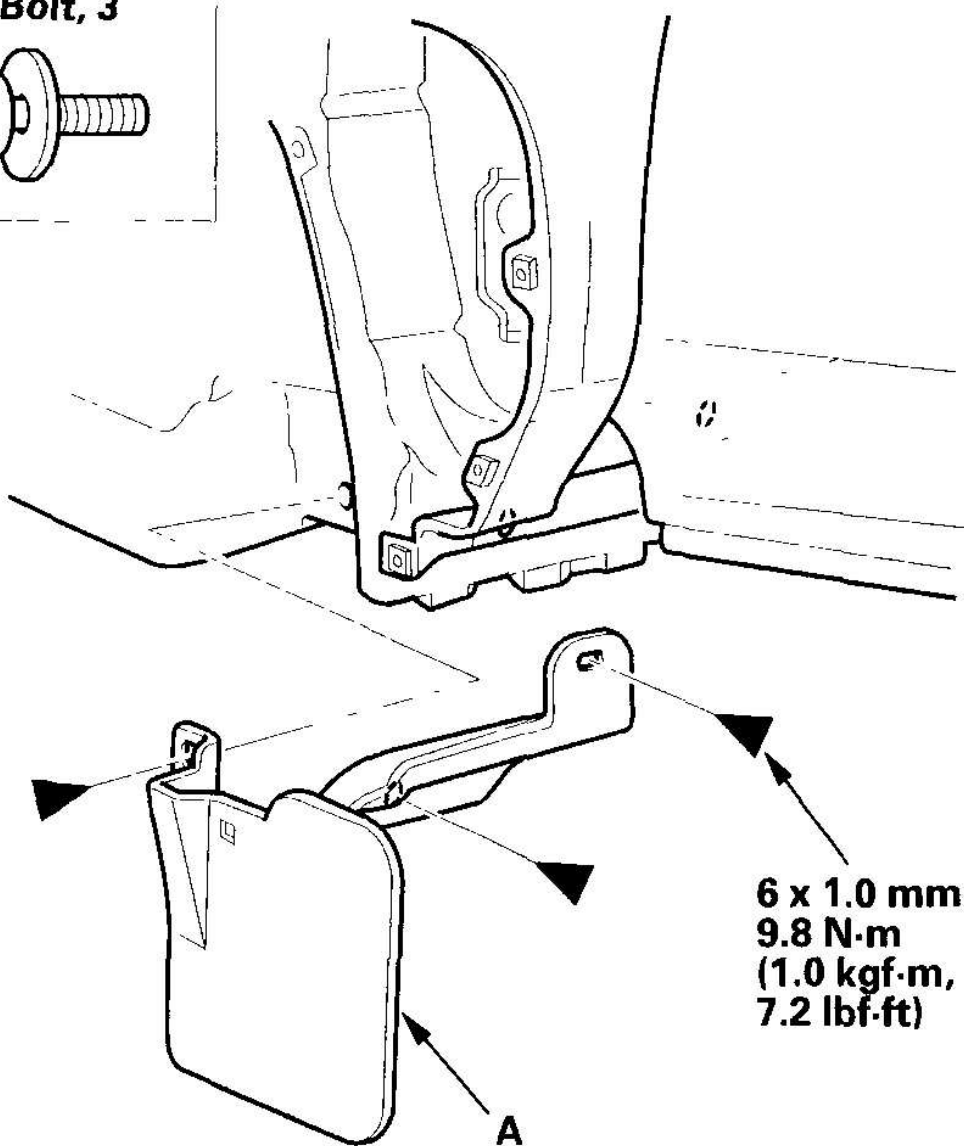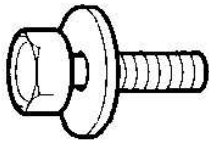

G03641780

Fig. 7: Removing Left Front Splash Guard Reinforcement
Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Install the reinforcement in the reverse order of removal.